

LED manual  
9.5\*14.2cm

## Front

### INSTRUCTIONS

Please keep the instructions for future reference.

#### Function Description:

4 - digit LED display:  
month, day, hour, minute and second.

12 / 24 - hour system is available.



#### Operating instructions:

##### Basic Time Display

- Press the C or D key once to display the time.
- Press and hold the C or D key to cycle through:
  - Time in seconds
  - Date (Month:Day)

##### Date Display Mode

- Press the D key once to show the time.
- Press the D key again to switch to the date display mode.

##### 12/24-Hour Format Setting

1. Press any key to activate the watch.
2. Hold the C or D key for 3 seconds until "12 Hr" or "24 Hr" starts flashing.
3. Press any key once to toggle between 12-hour and 24-hour formats.
4. After 5 seconds of no input, the setting will be automatically saved and exited.

##### Time and Date Setting

1. Press any key to activate the watch.
2. Hold the C or D key for 3 seconds, then release.
3. Immediately hold the same key again for 3 seconds until the hour ("H") display appears — this is the setting mode.
4. Press any key to change the hour.
5. To move to the next setting (minutes, year, month, date):  
**Hold any key for 3 seconds and release quickly.**
6. Repeat to navigate and set each value.
7. After 5 seconds of no input, the setting will be automatically saved and exited.

## Back



**WARNING:** BUTTON OR COIN BATTERIES ARE HAZARDOUS (NEW OR USED). KEEP AWAY FROM CHILDREN. BUTTON CELL BATTERIES CAN CAUSE SEVERE OR FATAL INJURIES IN 2 HOURS OR LESS IF THEY ARE SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY. IF YOU SUSPECT YOUR CHILD HAS SWALLOWED OR INSERTED A BUTTON CELL BATTERY, CALL THE 24HOUR POISONS INFORMATION CENTRE IN AUSTRALIA ON 131126 OR IN NEW ZEALAND 0800 764 766 OR CONTACT YOUR COUNTRY'S EMERGENCY DEPT. USED BATTERIES MUST BE DISPOSED OF IN THE GARBAGE OR A BATTERY RECYCLE FACILITY.



#### Battery 3.0V/ CR2032 x 1 (Non-replaceable battery)

#### CAUTION:

DO NOT IMMERSE IN WATER  
DO NOT WEAR IF CASEBACK IS MISSING OR DISASSEMBLED



#### Notes for the use of batteries:

1. Only batteries of the same or equivalent type as recommended are to be used.
2. Exhausted batteries are to be removed from the toy.
3. Use only appropriate refuse points for environmentally correct disposal of spent batteries.
4. Non-rechargeable batteries are not to be recharged.
5. Batteries are to be inserted with correct polarity.
6. Parental guidance is necessary when installing or replacing batteries.
7. Different types of batteries or new and used batteries are not to be mixed.
8. Do not mix old and new batteries.
9. All batteries are to be replaced at the same time.
10. Do not throw batteries into fire.
11. After use always switch off the device. Take out batteries to store the device.
12. The supply terminals are not to be short-circuited.
13. Rechargeable batteries are only to be charged under adult supervision.
14. Rechargeable batteries are to be removed from the toy before being charged.
15. Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.

**WARNING:** Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

**WARNING:** FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.



THIS PRODUCT CONTAINS  
BUTTON OR COIN BATTERIES  
SCAN THE QR CODE FOR  
MORE INFORMATION.



Manufactured and Distributed by  
ToyMonster International Ltd.  
Unit 1601, 16/F., Ginza Square  
567 Nathan Road, Kowloon, Hong Kong  
E-Mail: cs@themonstergrp.com  
www.toymonster.net Made in China