


anko

1.7 Litre Cordless Kettle



Model: WK8321

220-240V a.c. 50Hz 1850-2200W

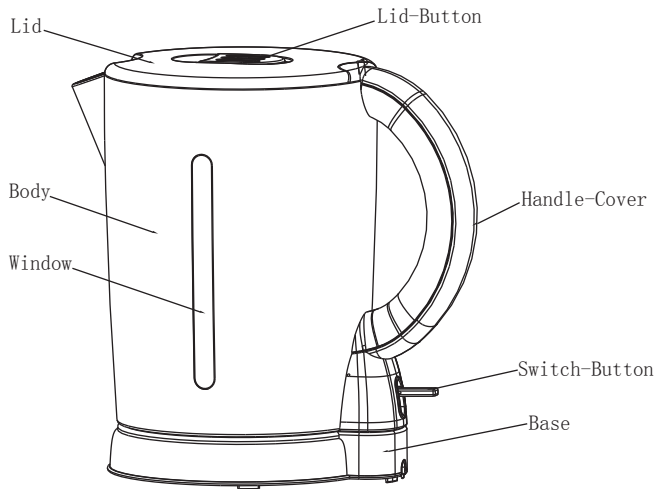

Importance

- Please read these instructions carefully before using the jug kettle for the first time.
- Before you connect the kettle to the mains supply, make sure that the voltage indicated on the rating plate, located on the bottom of the jug kettle matches the mains voltage in your home. If it does not, contact your dealer and do not use the kettle.
- The kettle will switch off automatically when the water has boiled. You may switch the kettle off before the boiling process is complete by using the Switch-Button.
- After the kettle has switched off automatically (or has been switched off manually) it may need time to cool down. After 15-20secs, the kettle can be switched on again.
- If the kettle ever boils dry, allow 15 minutes to cool before refilling with cold water. The safety cutout will

automatically reset during this time.

- Place the kettle on a stable flat surface.
- Ensure that the kettle is switched off before removing it from its stand.
- Never immerse the kettle or cord in water or any other liquid. Do not allow liquid to penetrate the electrical parts of this kettle.
- Prevent children from pulling on the mains cord or knocking the kettle over.
- Ensure that the mains lead does not overhang the work-top surface.
- Before cleaning the kettle disconnect from the power supply and wait until it is cooled down.
- Only use the cord supplied with this kettle. If a replacement is required, only approved components may be used.
- The outside surface of the kettle may get hot during use, please take care when using the kettle.
- Never fill in water more than the maximum acceptable water level.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they don't play with the appliance.
- If the kettle is overfilled, boiling water may be ejected.

- The kettle is only to be used with the stand provided.
- Position the lid so that steam is directed away from the handle.
- Do not remove the lid while the water is boiling.

This appliance is intended to be used in household and similar applications as:

- staff kitchen areas in shops, offices and other working environments
- farm houses
- by clients in hotels, motels and other residential type environments
- bed and breakfast type environments

CAUTION: Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move when the kettle is switched on.

CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

Before first use

Before first use, it is recommended to operate the kettle for 2 or 3 times following the instructions above, this will remove any dust or residues remaining from the manufacturing process.

- Take up the jug kettle from the base before filling.
- To fill the jug kettle, open the cover by pulling the lid inwards, then fill to the desired level (min 0.5L-Max.1.7L), close the lid by pressing it down until it clicks into place.

- Plug the power supply cord into the main, press the Switch-Button upwards, the power indicator lights up.
- When the water has boiled the kettle will automatically switch itself off, you can stop the boiling process at any time by lifting the Switch-Button. The power indicator will go out.

Note: Do not open the lid when steam is coming out of the spout.
Kettle is only to be used with the stand provided.

Cleaning

- First read the instructions in the section titled “Importance”.
- Avoid using abrasive cleaning agents.
- Empty the kettle and allow to cool, open the lid lift out the filter, rinse the filter under warm water and brush off any impurities.
- Refitting is the reverse of removal.

Descaling

- Half fill the kettle with tap water and add the juice of 1 lemon to the water.
- Boil this mixture and allow it to stand for 15 minutes. Re-boil the mixture and allow it to stand a further 15 minutes. Re-boil this mixture a third time then rinse the kettle well.

Storage

Disconnect the kettle from mains power outlet and make sure no any water inside of the kettle body. Store the kettle in a cool dry place along with the user manual for future reference.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au -for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

