

Personal Groomer




Instruction Manual

G-231

- Before using the device for the first time, read through the operating manual carefully and ensure you comply with the safety instructions!
- The device should only be used as described in these instructions.
- Keep these instructions for reference.
- If you pass the device on to someone else, please include these instructions.
- Electrical rating 3.0v d.c.

1. Overview/scope of delivery

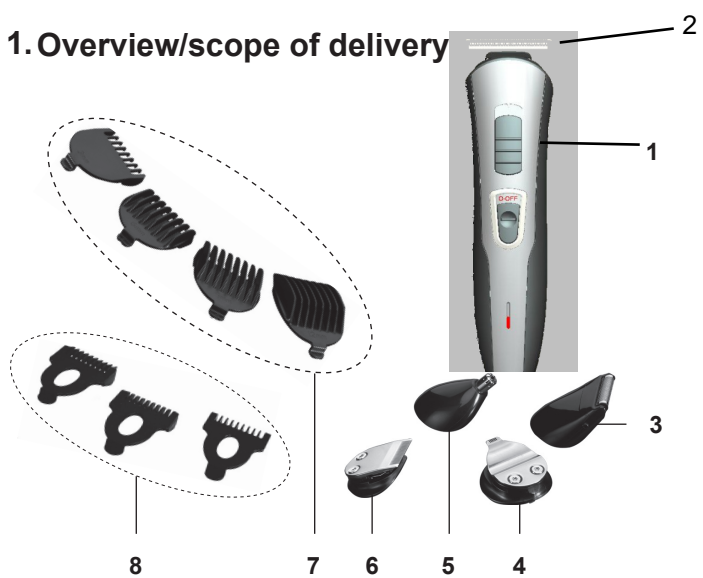

NOTE: Check that all accessories are included and undamaged.

- 1 Hair trimmer
- 2 Hair Trimmer attachment
- 3 Man shaver attachment
- 4 Precision trimmer attachment
- 5 Nose/ear hair trimmer attachment
- 6 Beard trimmer attachment
- 7 Comb attachments for hair trimmer attachment 3, 6, 9, 12 mm
- 8 Comb attachments for beard trimmer attachment 4 (III), 6 (II), 8 (I) mm

Other accessories (no image): Wall power supply, cleaning brush, storage pouch, comb, oil, operating instructions

2. Safety instructions

Intended purpose

The 5 in 1 hair trimming set is intended exclusively for trimming human hair. Only use the device for dry hair.

The device is designed for private home use and must not be used for commercial purposes.

The device must only be used indoors.

Foreseeable misuse

Do not use the device to cut artificial hair or animal hair.

Warnings in these instructions

If necessary, the following warnings will be used in these operating instructions:

⚠ DANGER! High risk: Failure to observe this warning may result in injury to life and limb.

⚠ WARNING! Moderate risk: Failure to observe this warning may result in injury or serious material damage.

⚠ CAUTION: Low risk: Failure to observe this warning may result in minor injury or material damage.

NOTE: Circumstances and specifics that must be observed when handling the device.

⚠ DANGER for children

- Children must not play with packaging material. Do not allow children to play with plastic bags. Danger of suffocation!
- This device is not designed for use by people (children included) with restricted physical, sensory or intellectual abilities or people without adequate experience and/or understanding, unless they are supervised by a person responsible for their safety, or have received instructions from such on how to use the device.
- Children must be supervised to ensure that they do not play with the device.
- Keep the device and accessories out of children's reach.

⚠ DANGER of electric shock as a result of moisture

- Do not use this device in the vicinity of bathtubs, showers, washbasins or other vessels containing water.
 - Protect the device from moisture, dripping water or splash water.
 - Never touch the device with wet hands.
 - The device, the battery charger, the cable and the wall power supply must not fall into water or other liquids and must not be rinsed under running water.
 - If...
 - ... the battery charger or the device has fallen into water, unplug the wall power supply immediately, and only then remove the battery charger or the device from the water. Do not use the battery charger or the device again, but have it checked by a specialist.
 - ... liquid enters the device, have it checked before starting the device up again.
 - If the device is used in a bathroom, the wall power supply must be pulled out after use, as the proximity of water represents a hazard, even when the device is switched off.
 - Installation of a residual current device (FI/RCD) with a rated residual operating current of no more than 30 mA is recommended to provide additional protection. Ask your electrician for advice. The installation should only be carried out by a qualified electrician.
- ⚠ DANGER of electric shock**
- Do not operate the device if the device, the battery charger, the wall power supply or the cable show visible signs of damage or if the device has been dropped.
 - Connect the cable to the battery charger before plugging the wall power supply into a socket.

- Only connect the wall power supply to a properly installed easy to access socket which supplies voltage matching the rating plate. The socket must still be easily accessible after connection.
- Ensure that the cable cannot be damaged by sharp edges or hot surfaces.
- Ensure that the cable is not trapped or crushed.
- Always pull at the wall power supply and never pull on the cable when unplugging the wall power supply.
- Remove the wall power supply from the socket ...
 - ... after each use,
 - ... after each charging process,
 - ... if a fault occurs,
 - ... before connecting the battery charger to the cable,
 - ... before cleaning the device and the battery charger and ... during thunderstorms.
- To avoid any risk, do not make any changes to the device or accessories. Do not replace the cable yourself either. Repairs should only be carried out by a specialist or our Service Centre. (→ 12 month guarantee)

⚠ DANGER from rechargeable batteries

- Protect rechargeable batteries against mechanical damages. **Danger of fire!**
- Do not expose the device to direct sunshine or heat. The ambient temperature should not be lower than 5°C or higher than 35°C.
- The charge contacts on the device must not be connected by metallic objects.
- Only charge the rechargeable batteries with the original accessory parts (battery charger and wall power supply).
- The batteries only removed for disposal must not be used again.
- Should the electrolyte solution leak out of the rechargeable batteries, avoid contact with eyes, mucous membranes and skin. Rinse immediately with plenty of clean water and consult a doctor. The electrolyte solution can cause irritation.

⚠ WARNING! Risk of injury from cutting

- The points of the hair trimmer attachment, the beard trimmer attachment and the precision trimmer attachment are sharp. Handle with care.
- Do not use the device if the attachment shows damages.
- Switch off the device before pinning up or changing the attachments and each time before cleaning.

⚠ WARNING! Risk of injury

- Place the cable in such a way that no one trips over it or steps on it!
- Do not push the nose/ear hair trimmer attachment too deep into the nostril or the external ear.
- Do not use the device on open wounds, cuts, sunburn or blisters.

⚠ WARNING! Risk of material damage

- The battery charger is fitted with slip-resistant silicone feet. As furniture is coated with various varnishes and plastics and may be treated with different cleaning products, it cannot be completely ruled out that some of these substances contain components which may attack and soften the silicone feet. If necessary, place a slip-resistant mat underneath the battery charger.
- Use the original accessories only.
- Never place the device on hot surfaces (e.g. hob plates) or near heat sources or open fire.
- Do not cover the wall power supply to prevent overheating.
- In order to avoid damages to the shaving foil, do not exert excessive pressure on the shaving foil of the razor attachment.
- Do not remove the shaving foil from the shaving foil frame and do not clean it with the brush.
- Do not use any harsh or abrasive cleaning agents.

WARNING! keep the appliance dry

3. Control elements



- A Hair trimmer attachment
- B Switch for a precision setting of the cutting length (in 3 stages)
- C On/off switch
- D pilot light

4. Operation

NOTES:

- The hair to be dressed must be dry.
- The cutting length may deviate depending on the cutting angle.
- First, start with a comb attachment with a longer cutting length and then, in the course of the cutting process, use shorter cutting lengths step by step.


Independent of the charging state of the batteries, you are always able to use the device with the power pack.

1. In order to use the power pack, ensure that the device is switched off.
2. Connect the wall power supply to the device.
3. Insert the wall power supply into an easily accessible socket.
4. Use the on/off switch to switch on the device.

Pushing on/replacing cutting attachments 2, 3, 4, 5 and 6 (→ 1. Overview/scope of delivery)

WARNING!

Switch off the device before replacing or changing the attachments.

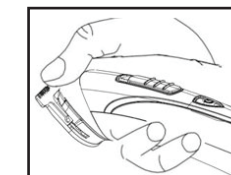

- Remove/replace an attachment by pressing it with the thumb towards the back (see figure).
- Push on the attachments by inserting the bottom bracket of the attachment into the rail of the device and press the upper part of the attachment onto the device until it audibly and firmly locks into place.

Pushing on/replacing comb attachments 7 and 8 (→ 1. Overview/scope of delivery)

- In order to push on the comb attachments, press the respective comb attachment carefully over the hair or beard trimmer attachment and firmly on the bottom end of the comb attachment until it locks into place.
- To remove/replace the comb attachments release the comb attachment at its bottom end and pull it off the device.




Hair trimmer attachment

- Comb the hair well.
- Place a sheet or cape around throat and neck to prevent cut-off hair from dropping into the collar.

- Start by cutting the hair in the neck or on the sides and cut towards the centre of the head. Then, cut the front section of the hair towards the centre of the head.
- Hold the device so that the comb attachment rests flat on the head (for attachments 6, 9 and 12 mm this side is round). Move the device evenly through the hair.
- If possible, cut against direction of hair growth.
- In order to catch all the hair, move the device several times through the same section of the hair.
- Use the device only with the cutting attachment and without comb attachment to cut hair very short.
- Comb the hair repeatedly and well.

Beard trimmer attachment

- Comb the beard in the direction of growth.
- Cut the beard from the ear to the chin downward. First trim the one and then the other side.

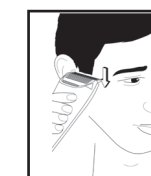

NOTE: Please mind that the respective cutting lengths will only be achieved if the switch for the precision setting of the cutting length is at position 3, and the device is held at a right angle to the surface of the skin.

- Use the beard trimmer attachment without the comb attachment to cut the beard very short or to cut the moustache and hairline.
- The switch for the precision setting of the cutting length is used to vary the cutting length slightly in 3 steps.
- In order to cut your moustache, first comb it straight down. Then use either the beard trimmer attachment or the precision trimmer attachment. Starting in the middle above the mouth, and first cut the one and then the other side.



Precision trimmer attachment

Use the precision trimmer attachment to shorten and shape the moustache, whiskers, sideburns, or eyebrows.

- Position the edge of the attachment at the desired height of the hairline and move the device downward.

Razor attachment



NOTE: Your skin must be clean and dry.

- Hold the device at a right angle to the surface of the skin and move it carefully over your face.

- Shave against the direction of beard growth.
- At parts of the face that are harder to shave, such as the chin, stretch the skin for a better result.



Nose/ear hair trimmer attachment

- Slowly insert the metal tip into one of your nostrils or ears.
- Move the device in circles to cut the hair.

5. Cleaning and care



DANGER!

Remove the wall power supply from the socket before cleaning the device and the battery charger.

WARNING!


- Always switch off the device before cleaning it.
- Do not use any harsh or abrasive cleaning agents.

NOTE: Clean the device and the respective attachments after each use.

Comb attachments

- Remove the comb attachment. Rinse the comb attachment with water and let it dry before using it again.

Hair trimmer, beard trimmer and precision trimmer attachment

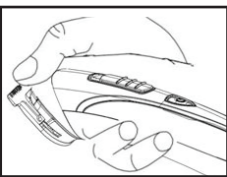

1. Remove the attachment from the device by pressing it with the thumb towards the rear (see figure).

2. Remove the hair remnants from the attachment by using the cleaning brush included in the delivery.
3. Apply several drops of oil to the cutting edge of the attachment. Using a soft cloth, wipe off the surplus oil, if necessary. Only use acid-free oil, such as e.g. sewing machine oil.

Nose/ear hair trimmer attachment

- Remove the nose/ear hair trimmer attachment. Rinse it with water and let it dry completely before using it again.

Razor attachment

WARNING!

Do not remove the shaving foil from the shaving foil frame and do not clean it with the brush.

1. Remove the razor attachment.
2. Press on the laterally fitted buttons of the razor attachment and pull the shaving foil frame off. In doing so, grip the shaving foil frame only at the sides and do not press on the shaving foil.
3. Clean the cutting blade with the cleaning brush included in the delivery.
4. Use running water to clean the shaving foil in the shaving foil frame and let it dry completely before placing it back on the razor attachment.

5. Place the shaving foil frame back on the razor attachment. In doing so, ensure that the fastening clip at the shaving foil frame fits into the respective recesses of the razor attachments and press the shaving foil frame slightly down until it locks into place.

NOTE: From time to time, place a few drops of acid-free oil (such as sewing machine oil) onto the cutting blade. Place the razor attachment on the device and let the device run for a couple of seconds without using it. Using a soft cloth, wipe off the surplus oil, if necessary.

6. Storage

In order to store the device, ...

... place the device with the front upwards into the battery charger or

... use the storage pouch included in the delivery.

7. Troubleshooting



DANGER!

- Do not attempt to repair the device yourself.

- Always remove the wall power supply from the socket whenever a fault occurs.

Fault:	Please check the following:
No function	<ul style="list-style-type: none"> • Is the power supply secured? • Batteries low?
Cutting attachments 1, 4, 5, 6 and 7 are not running smoothly	<ul style="list-style-type: none"> • Attachments cleaned and if necessary, oiled?

8. Technical data

Article no.	G-231
Battery charger:	
Input voltage	100-240 V ~ 50/60 Hz
Output voltage	3 V === 1000 mA
Protection class	II
Ambient conditions	only approved for indoor use
Hair trimmer:	
Input voltage	3 V === 1000 mA
Rechargeable batteries	2x 1.2 V NiMH / HR03 (AAA) / 600 mAh
Ambient temperature	+5 °C to +35 °C
Charging time	12 hours

In the interest of product improvements, we reserve the right to make technical and optical changes to the device and accessories.

9. Disposal



Do not dispose this item with normal household waste collection. If unsure, contact the local council waste management service for proper disposal facilities available for your area.



Packaging

If you want to dispose of the packaging, make sure you comply with the environmental regulations applicable in your country.

Removing the batteries

This device is operated with two rechargeable nickel-metal-hydride batteries, which you must remove before disposing of the device.

The appliance must be disconnected from supply mains when Removing the battery. The battery is to be disposed of safely.



DANGER!




- You must be technically minded to remove the batteries, otherwise there is the danger of injuring yourself. If you do not have any experience with tools, you should have the batteries removed by a person who is qualified to do this.

- Ensure that the batteries are not damaged as you remove it. Danger of fire!
- The removed batteries must not be used again.
- Never short-circuit the batteries. The contacts on the removed batteries must not be connected by metallic objects. The batteries may overheat and explode.

WARNING! Only remove the batteries to dispose of the device.

The device is destroyed by removing the batteries. Never try to operate a disassembled device.

1. Disconnect the device from the mains.
2. Switch on the device and let it run until the batteries are empty.
3. If necessary, remove the attachment from the device. (→ 6. Cleaning and care)

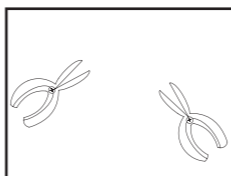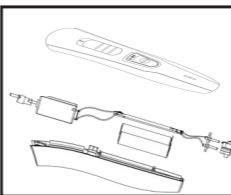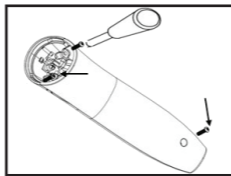

4. Using a Philips screwdriver, loosen the 3 screws at the positions marked on the image.
5. In order to be able to remove the 2 mounted batteries, pry open the lateral seam using a screwdriver.
6. Loosen the connections of the batteries to the circuit board. Remove the exposed batteries. Take the batteries and the device separately to suitable disposal.



The nickel-metal hydride batteries used for this device may not be treated as household waste. The batteries must be disposed of properly. Contact battery distributors or local waste disposal points for this.

10. 12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125(Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer for help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.