


# Self Inflating Mattress

## INSTRUCTION MANUAL

Keycode:42498575

### Assembly method

- 1 When assembling, choose a flat place with no protrusions.
- 2 Remove the mat from the storage bag and loosen the valve to let the air in naturally. Add air to the desired height and adjust.

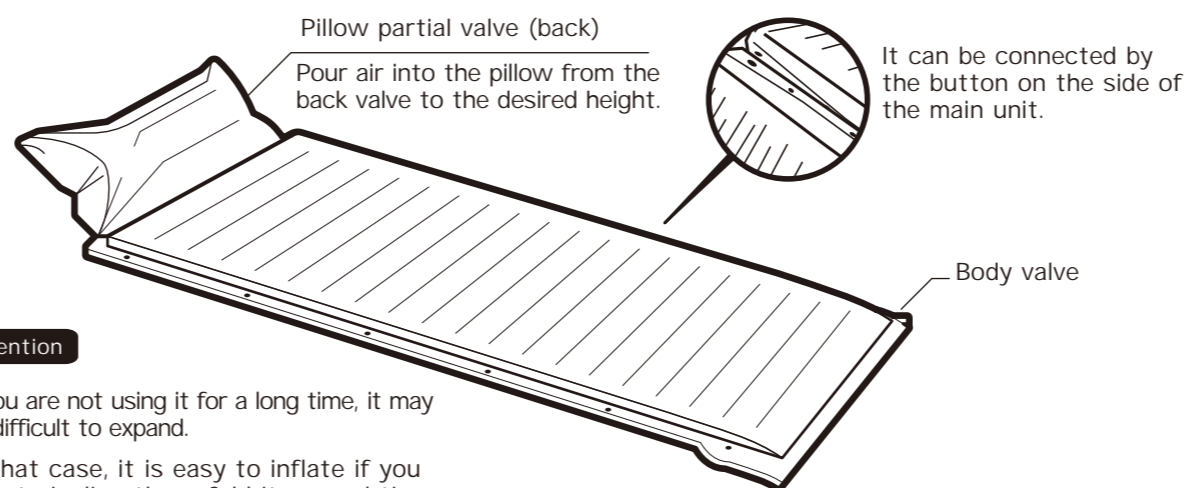


#### Attention

If you are not using it for a long time, it may be difficult to expand.

In that case, it is easy to inflate if you insert air directly or fold it several times and spread it repeatedly.

### Storage method

- 1 Loosen the body and the pillow valve, pull out the pillow air, and fold in half vertically.
- 2 From the pillow side towards the main valve, and roll it in the air, and finally tighten the valve.
- 3 Put it in a special storage bag.

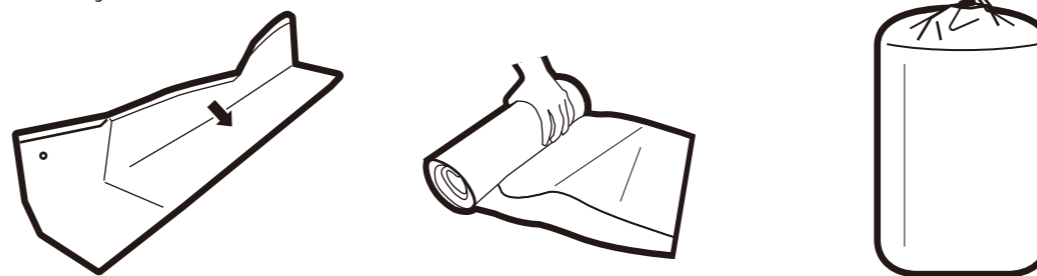

#### <attention>

If the load is applied or the surface is damaged by a sharp object such as a knife, it will cause damage, so please don't use it. Be sure to use it in a flat and stable place. Keep away from the fire. Please do not use it outside the purpose. Please wipe off the dirt on the surface with a wet cloth. Please do not use only by children. After use, please dry well, avoid direct sunlight, high temperature and humidity.

MADE IN CHINA

257 mm

182 mm

B5