
# **anko** 50W AQUARIUM WATER HEATER

### SAFETY INSTRUCTIONS

- 1. For use in tropical aquarium up to 35L only.
- 2. Use heater only when fully submerged in water.
- The maximum depth of glass thermometer's immersion is 80cm.
   Switch heater on only when fully submerged and instated in the
- Switch heater on only when fully submerged and instated in the aquarium, any sudden temperature change may crack the glass tube.
- Keep glass thermometer clean at all times to allow easy transfer of heat from unit to water.
- 6. The strip thermometer is to be used on the outside of aquarium.
- 7. Always use a drip loop when in use. The drip loop will prevent water entering your power source.8. Do not use the glass thermometer if the cord appears worn or
- damaged.

  9. The electrical cord and the glass casing are an integral part of
- the unit. If these are damaged, replace the whole unit.

  10. Keep the plug dry at all times. Do not plug into a power point if the plug is wet.
- 11. Do not plug or unplug the power supply when hands are wet.
- 12. Always unplug when not in use or when undertaking any maintenance on the aquarium. Please switch off power and leave it cool down in water for at least 15 minutes before taking out from aquarium to prevent damage or injury.
- When not in use, the glass thermometer should be turned off at the power source.
- Ensure the thermometer is mounted to the aquarium before operating.
- 15. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

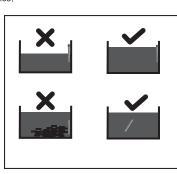


#### INSTRUCTIONS:

- Remove the thermometer from packaging. Carefully check for any damages.
- Turn the adjustment stalk on top clockwise to increase the temperature, anticlockwise to reduce. We recommend a water temperature of between 26-28°C for tropical fish and 24-25°C for tropical marine fish.
- 3. Use the suction cups provided to secure the glass thermometer in water. Place it upright, near the filter outlet or where the air hose is located, clear of any gravels or other obstructions so that it can work freely. Moving water helps to evenly circulate the heat.
- 4. Stick the strip thermometer to the outside of the aquarium. It should be at least 20cm away from the glass thermometer so you get a true reading of the average tank temperature.
- Once the thermometer is secured, plug it into your power point, use a drip loop, and then turn on.

# **ONKO** 50W AQUARIUM WATER HEATER

- 6. There is an indicator built-in. The light indicates it is heating and when water is at the desired temperature, the light will go off.
- During the initial set up of the aquarium, the glass thermometer will turn off and on until it reaches the desired temperature.
   Allow 24 hours to reach desired temperature.
- 8. Use the strip thermometer to monitor the heating progress.

**IMPORTANT:** Do not place magnets or a magnet aquarium cleaner near your thermometer.

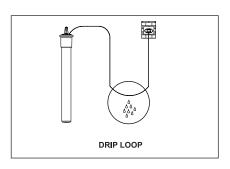

### Specification:

INPUT: 220-240V ~ 50Hz - 60Hz, 50W

Maximum water: 35L

Maximum depth of thermometer immersion: 0.8m

IP68

## 12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

Ref.: 42616122-IB-E E01