

anko

6-36
months

PRANDIUM HIGH LOW CHAIR



IMPORTANT! READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

 
 

Read all instructions BEFORE assembly and USE of product

Note: Drawings in the manual are for illustration purposes only. Actual product may vary slightly. The manufacturer reserves the right to change any specification or features without prior notice.


! WARNING!

- > FOLLOW THE MANUFACTURER'S INSTRUCTIONS.
- > DO NOT LEAVE CHILDREN UNATTENDED.
- > THE HARNESS MUST ALWAYS BE USED AND CORRECTLY FITTED—MOST INJURIES FROM HIGH CHAIRS ARE CAUSED BY FALLS.
- > POSITION THE HIGH CHAIR AWAY FROM SOLID STRUCTURES AND BENCHES TO AVOID INJURIES CAUSED BY FALLS AND BY ACCESS TO DANGEROUS ITEMS.
- > ALWAYS USE THE RESTRAINT SYSTEM.
- > FALLING HAZARD: PREVENT YOUR CHILD FROM CLIMBING ON THE PRODUCT.
- > DO NOT USE THE PRODUCT UNLESS ALL COMPONENTS ARE CORRECTLY FITTED AND ADJUSTED.
- > BE AWARE OF THE RISK OF OPEN FIRES AND OTHER SOURCES OF STRONG HEAT IN THE VICINITY OF THE PRODUCT.
- > BE AWARE OF THE RISK OF TILTING WHEN YOUR CHILD CAN PUSH ITS FEET AGAINST A TABLE OR ANY OTHER STRUCTURE.
- > Adult assembly required.
- > Take care when unpacking and during assembly.
- > Dispose of all packing materials carefully after assembly.
- > Use only on a flat, even and horizontal floor. Do not elevate the high chair on any structure or table.
- > To reduce the risk of injury, position the high chair away from furniture, walls, hot surfaces and liquids, window covering cords and electrical cords. Position the high chair away from furniture when the chair is not being used at a table with the tray removed.
- > Do not use the high chair until the child can sit up unaided.
- > This high chair should be used in an upright position only by children capable of reliably and consistently sitting upright.
- > This high chair is intended for children able to sit up unaided and up to 3 years or a maximum weight of 15kg.
- > Do not use this high chair for more than one child at a time and do not leave other children playing unattended near the high chair.
- > If the high chair is not working correctly, do not use and seek repair.
- > Regularly inspect your high chair. Discontinue use if any part is broken, torn or missing.
- > Any additional or replacement parts should only be obtained from the manufacturer or distributor.
- > Never substitute parts.


Parts List

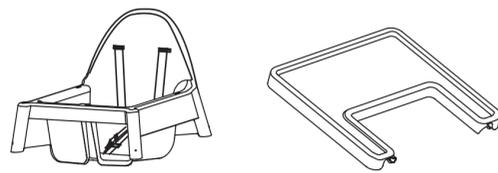


Assembly For High Chair

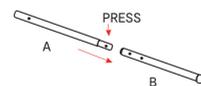 

Press button and connect tubes together, ensuring that the button snaps into place with a 'click' sound. Repeat above for remaining tubes.

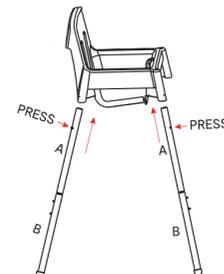


Press the button on tube and insert it into chair body. Ensure the button snaps into place with a 'click' sound.

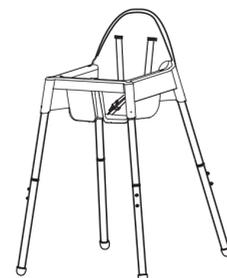

Continue for remaining tubes until all of them are assembled.

Assembly For Low Chair

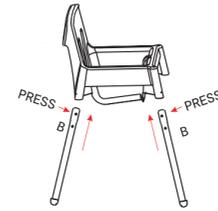


Press button on tube and insert tube (B) only into chair body. Ensure the button snaps into place with a 'click' sound.




Continue for remaining tubes (B) until all of them are assembled.

Assembly For Tray

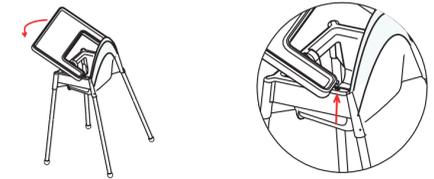


Insert the hooks on the tray into the corresponding slots on the armrests on both sides. Gently press down until the tray clicks into place.

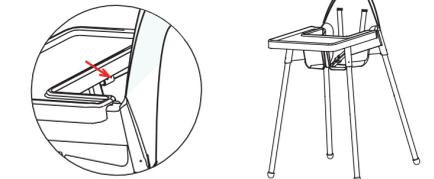


WARNING: Always ensure that the tray is locked correctly before use.

To Remove Tray

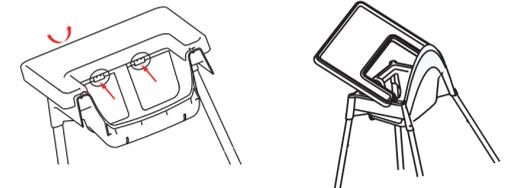


Using both hands, pull and lift the clips attaching the tray to the chair at the leg openings. The tray can then be lifted off the body of the chair.

Safety Harness

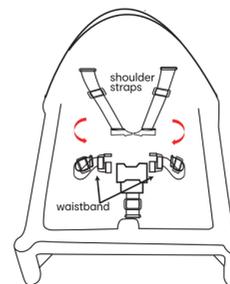

To secure your child in the harness, push the shoulder strap buckle prongs into the waistband buckle housing.

Push the buckle prongs into the buckle housing until they snap into position.

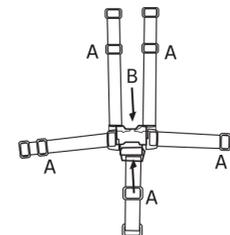

Adjust slider (A) for all straps to ensure a snug fit for your child.


After making adjustments to the seat, always readjust the harness.

To release the harness, press part (B). Repeat for the other side.

WARNING: USE THIS HARNESS AT ALL TIMES.


Disassembly For Legs

High chair

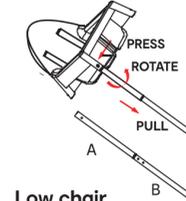

Press the button from corresponding slots with one hand. Repeat and pull to remove the tubes with the other hand. Repeat above for remaining tubes.

Low chair

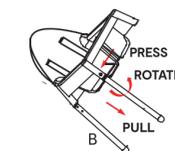

Care and Maintenance

- Surface wash only. Wipe with a damp cloth.
- Do not use abrasive pads, bleach or strong detergents.

K: 42648444 | T: 68732714

MADE IN CHINA

CUSTOMER SERVICE:

KIMART AU: 1800 124 125

KIMART NZ: 0800 945 995

TARGET AU: 1300 753 567