

# anko

Toaster



MODEL: TA01106-SA  
220-240V~, 50-60Hz, 700W

Please read these instructions carefully and retain for future reference.

# IMPORTANT SAFEGUARDS

When using electrical appliance. Basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surface. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. Close supervision is necessary when it is used by or near children.
6. Disconnect from the mains power outlet when not in use and before cleaning.
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
8. Do not let the cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas or electric burner, or near a heated oven.
10. Do not use the appliance for other than its intended use.
11. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
12. **CAUTION: Bread may burn. Therefore, toaster must not be used near or below curtains and other combustible materials. The toaster must be attended at all times during use.**
13. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

14. Don't attempt to dislodge food when toaster is in operation.
15. Be sure to take the bread out carefully after toasting to avoid injuries.
16. This appliance is fitted with a grounded plug. Please ensure the wall outlet in your house is well earthed.
17. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they don't play with the appliance.
19. Keep the appliance and its cord out of reach of children.
20. **Warning: When toasting small bread slices less than 85mm length, there is potential risk of bread burning. Always use a lower heat setting.**
21. Don't use the appliance outdoors.
22. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
23. Save these instructions.


24. **Warning:** “The temperature of accessible surfaces may be high when the appliance is operating.”

25. **Warning:** “the surfaces are likely to get hot during



26. For additional protection, we recommend the use of a residual current device (RCD /Safety Switch) with a tripping current not exceeding 30mA in the household mains power circuit supplying power to your appliances. If unsure consult a qualified electrician.

## PRODUCT INTRODUCTION

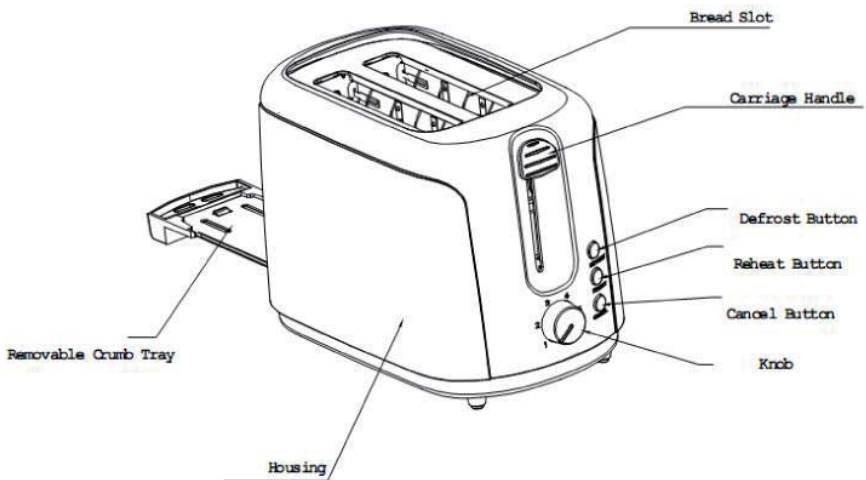

## FIRST USE

When the toaster is used for the first time, it is likely to emit an odour from oil and residue that may have collected during the manufacturing process. This is normal and it should completely disappear when the toaster is used over time.

Before toasting the first slice of bread it is strongly suggested to operate the appliance following below instructions, except without bread.

## **OPERATION:**

1. Put bread slice into the bread slot, you can insert two slices at most every time.

Make sure the crumb tray is completely positioned in place before using.

2. Plug the power cord into mains power outlet.

3. Set control knob to your desired browning level. There are 6 settings, the lowest is light and the highest is dark. The bread slice can be toasted to golden color at the position between 3 & 4.

**Note:** 1) Toasting color for one slice is darker than that for double bread at the same level.

2) If toasted continuously, toasting color for the latter bread is darker than the color of previous cycle at the same level.

4. Press carriage handle down vertically until it is positioned in place, the indicator light on the **CANCEL** button will be illuminated, and toasting begins. Once the bread has been toasted to the preset color, the carriage handle will be automatically pop up.

Cancel indicator light will go out at the end of toasting process.”

**Note:** The carriage handle can only be latched when the appliance has been connected to a mains power outlet socket..

5. During the toasting process, you may observe the

toasting color. If it is satisfactory, you may interrupt the toasting process by pressing the **Cancel** button at any time.

6. If the bread has been taken out from the refrigerator, set color control knob to your desired color. Press carriage handle down vertically until it is positioned in place, then press **Defrost** button and the indicator light on the **Defrost** button will illuminate. In this mode it will be toasted to your desired browning setting.

7. If you want to reheat cold toasted bread. Press carriage handle down vertically until it is positioned in place, then press **Reheat** button and the indicator light on the **Reheat** button will illuminate. In this mode toasting time and browning setting is fixed, the carriage handle will automatically spring up and at the end of the reheating process.

### **CAUTION:**

1. Remove all protective wrapping prior to toasting.
2. If toaster starts to smoke, Press **Cancel** to stop toasting immediately.
3. **IMPORTANT! DO NOT toast with extremely runny ingredients such as butter, jam, and other sugary ingredients. Failing to follow these instructions can damage the toaster.**
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slice.

## **CLEANING AND MAINTENANCE:**

1. Disconnect from mains power supply before cleaning.
2. Wipe the outside with soft dry cloth after the toaster has completely cooled down and before storing.
3. Pull out crumb tray on bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not in use or during storage, the power cord may be wound under the bottom of the toaster.

## 12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125(Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation