


# anko

**Toaster  
KY-809  
User Manual**

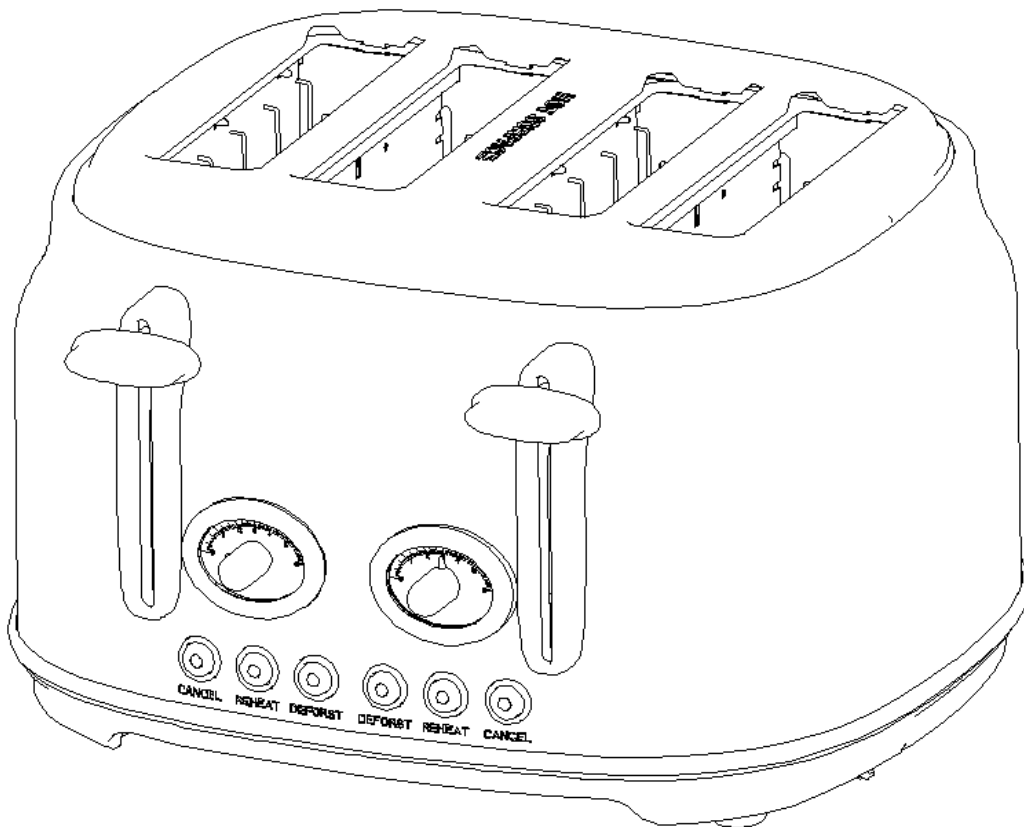

**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

## IMPORTANT SAFEGUARDS

When using electrical appliance. Basic safety precautions should always be followed including the following:

1. Please read all instructions before operating and retain for future reference.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surfaces. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. **IMPORTANT! Disconnect the toaster from mains power outlet when not in use and before cleaning.**
8. If the supply cord is damaged, it must be replaced by a qualified electrical person only to avoid a hazard, or the product must be disposed of.
9. **Do not let the cord hang over edge of table or counter, or touch hot surfaces.**
10. Do not place the toaster on or near a hot gas or electric burner, or in a heated oven.
11. Do not use the appliance for other than its intended use. Do not use outdoors.

**IMPORTANT! Do not leave the toaster unattended when in use.**

12. Do not use the toaster without the slide out crumb tray in place. The crumb tray should be cleaned regularly. Fire hazard, do not allow bread crumbs to build up in the tray.

**IMPORTANT! Do not use this appliance with any foodstuff product containing sugar content or with products containing jam or preserves.**

13. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause a fire or electric shock.

**CAUTION: The bread may burn, therefore toaster must not be used near or below curtains and other combustible materials. The toaster should be attended when in use.**

14. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
15. Electric shock hazard. Don't attempt to dislodge food when toaster is in operation.
16. Always remove the bread from the toaster carefully after toasting to avoid injuries.

**WARNING! When toasting small bread slices less than 85mm length, you must pay attention to the potential risk of burning when taking out the slices.**

17. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
18. To disconnect, push the CANCEL button, then remove the plug from the wall socket.
19. If a slice of bread gets stuck inside the toaster, disconnect the toaster from mains power first and let it cool down before you try to remove the bread. Do not use a knife or other tools, as these may cause damage to the heating element in the toaster.
20. This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments.
21. When using this appliance, allow adequate air space above and on all sides for air circulation. CAUTION is required when placing the toaster on surfaces where heat may cause a problem, i.e. laminated bench tops – to avoid heat damage to the surface use of an insulated heat pad is recommended.



**Caution: Hot surfaces. Care must be taken. The surfaces are liable to get hot during use.**

**Warning: The temperature of accessible surfaces maybe high when the appliance is operating.**

22. For addition electrical safety, we recommend the use of a residual current device (RCD/ Safety Switch) with a tripping current not exceeding 30mA in the household mains power circuit supplying power to your appliances. If unsure consult a qualified electrician.

## **WARNING!!**


**Never operate the toaster on its side.**

**To prevent damage to the toaster, DO NOT toast with extremely runny ingredients such as butter, jam and other sugary ingredients. Adding any food substances to bread, muffins or crumpets can cause an electric shock and/or fire. This toaster is for toasting of bread, crumpets and muffins only.**

**SAVE THESE INSTRUCTIONS**

**FOR HOUSEHOLD USE ONLY**

# KNOW YOUR TOASTER

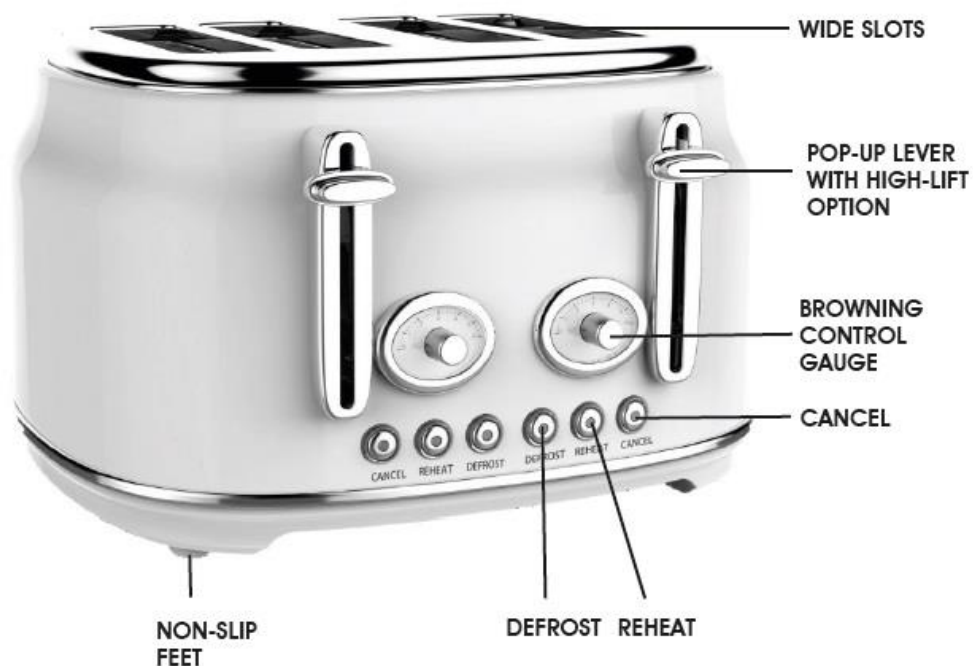

## FIRST TIME USE

When the toaster is used for the first time an odor may be emitted due to manufacturing residue or oil remaining in the toaster or heating element. This is normal and should disappear after some time. When the toaster is used for the first time, it is recommended to follow the below steps, except without bread, let the toaster cool down and then begin using the toaster for normal bread toasting.

**CAUTION: The bread may burn, therefore toaster must not be used near or below curtains and other combustible materials. The toaster should be attended when in use.**

## USING YOUR TOASTER

1. Put bread slice into the bread slot. A maximum of four bread slices can be inserted into bread slot each time.

**NOTE: 1) Make sure the crumb tray is completely positioned in place before using.**

2. Connect the power cord plug into mains power outlet.
3. Set color control knob to your desired browning color. Settings range from 1 to 6, the lowest “1” is for lightest and the highest “6” is for darkest. The bread slice can be toasted to golden color at the middle position.

**NOTE: 1). Toasting color for one slice is darker than that for two bread slices at the same level. This is normal.**

**2). When toasting continuously, toasting colour for the latter bread will be darker than the bread that was toasted when the toaster was cool.**

4. Lower carriage handle down vertically until it is latched in place, the indicator on the **CANCEL** button will illuminate, and the appliance will begin toasting.

**NOTE: The carriage lever will only latch when the toaster is connected to mains power.**

5. Once the bread has been toasted to the preset color, the carriage lever will automatically pop up.

**NOTE: During toasting, you may also observe the toasting color. If it is satisfactory, you can press the **CANCEL** button to cancel the operation at any time, but never lift the carriage lever to cancel toasting.**

6. If you want to toast frozen bread, first press the **DEFROST** button and the indicator on the **DEFROST** button will illuminate. Set the control knob to your desired browning setting, and then lower the carriage lever down vertically until it is latched in place. In this mode, bread will be toasted to your desired color.

**Note: The DEFROST process will be longer than normal toasting time.**

7. If you want to warm cold toasted bread, firstly press the **REHEAT** button and the indicator on the **REHEAT** button will illuminate, and then lower carriage lever **down** until it is latched in place. In this mode, the toasting time is fixed, the carriage lever will automatically spring up when the reheating process has ended.

## CAUTION

1. Remove all protective wrappings prior to toasting.
2. If the toaster starts to smoke, Press **CANCEL** to stop toasting immediately.
3. Do not toast food with extremely runny ingredients such as butter.
4. Never attempt to remove jammed bread from the slots without unplugging the toaster from mains electrical power outlet socket. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting of regular bread slice.
6. In order to achieve uniform browning color, we recommend that you wait a minimum of 30sec between each toasting cycle so that the browning color control can reset automatically.

## CLEANING AND STORAGE

1. Before cleaning, unplug from the appliance from mains power outlet socket and let the appliance cool down completely.
2. Pull out crumb tray at the bottom of toaster and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely inserted before using the toaster again.
3. Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft dry cloth.
4. Do not immerse the toaster in water or other liquid.
5. When storing, the power cord may be wound under the bottom of toaster.

**The crumb tray should be cleaned regularly. Do not allow breadcrumbs to accumulate in the bottom of the toaster.**

## TECHNICAL DATA

Voltage : 220-240Va.c. 50-60Hz

Power : 1450 – 1750W

## **12 MONTH WARRANTY**

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](http://Kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.