

OWNER'S MANUAL

Model No. 62260

NOTICE: READ CAREFULLY BEFORE OPERATING AND SAVE THESE INSTRUCTIONS.

CAUTION: TO AVOID THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE THE PUMP TO WATER OR RAIN.

WARNING:

If instruction is missed, please search it in website: www.bestwaycorp.com

- The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not use the pump continuously more than 5 minutes. It can only be used again after at least 15 minutes of cooling.
- The battery must be removed from the appliance before it is scrapped.
- The appliance must be disconnected from the supply mains when removing the battery.
- This appliance contains battery that is non-replaceable.
- The battery is to be disposed of safely.
- The appliance is only to be used with the charging supply cord provided with the appliance.

TECHNICAL SAFETY INSTRUCTIONS

NOTE: Not all air valves can be deflated by the pump, some one-way valves require manual deflation.

NOTE: Some items have a special air-tight inner safety valve, which prevents air loss. We recommend these items be deflated by simply unscrewing the valve instead of deflating with the pump.

NOTE: Drawings for illustration purpose only. May not reflect actual product. Not to scale.

CHARGING INSTRUCTION:

- Four rechargeable batteries included. Please charge for at least 7 - 8 hours before using for the first time so as not to affect the battery life and battery capacity.
- The pump can only be used with provided Micro USB charging line. The charging voltage is DC5V.
- When using charger with DC5V 0.5 A - 2 A electricity, the charging time will be around 5 hours. If other types of USB are used for charging, the charging time will be extended (up to 24 hours).
- When charging, the indicator light is on. A red light indicates the electricity is not enough. A green light indicates the electricity is full and the unit is charging.
- Do not block the rotation of the motor or the fan blades. Do not insert the objects into or interfere with the fan chamber.
- The pump must be stored in a dry location at -20°C - 45°C temperature. If the pump is not used for more than 12 months, the battery will discharge. The battery must be charged every 6 months.

MAINTENANCE AND STORAGE

- Use a dry cloth to gently clean all surfaces.
- Store in a cool, dry place and out of children's reach.





