

SLR-18059

AROMA DIFFUSER

IMPORTANT SAFETY INSTRUCTIONS:

The following safety precautions should always be followed, to reduce the risk of personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.

 
1. This product must only be used as intended in accordance with the enclosed operating instructions.
2. Do not carry the appliance by the mains cable or pull the cable to remove the plug from the socket.
3. If the appliance stops unexpectedly or appears to malfunction, switch off the power supply, unplug the USB connector and stop using immediately. Seek professional advice to rectify the fault or make repairs.
4. Switch off the power supply or unplug from the USB socket when not in use, before cleaning or changing accessories.
5. Avoid positioning the appliance where the power cable might be accidentally trapped or damaged.
6. Keep the appliance and cable away from sources of heat, sharp objects or anything that may cause damage.
7. Ensure the appliance is switched OFF before connecting the mains power supply.
8. Be aware that some surfaces may become hot. Do not touch hot surfaces and supervise others accordingly.
9. This product has not been designed for use by children.
10. Children should be closely supervised at all times when they are near any electrical appliance.
11. To protect against electric shock, never allow the appliance, the mains cable or plug to come into contact with water or any other liquid.
12. Never reach for any appliance that has fallen into water. Switch off the power supply at the mains immediately and unplug. Do not re-use until the product has been inspected and approved by a qualified electrician.
13. Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and mains supply connections.
14. To disconnect, first ensure that all controls are in the OFF position, then remove the USB connector plug.
15. Where relevant keep all ventilation slots, filters, etc. uncovered and clear of debris. Never drop or insert objects into the openings.
16. Do not use outdoors. This appliance has been designed for domestic indoor use only.

Product specification

Input: DC 5V, 1000mA (via USB cable)
LED 0.4W Max

OPERATION INSTRUCTION:

1. Twist anticlockwise to open the cover.
2. Pour suitable amount of water into the tank and make sure it is within the max. water level. Add approximately 6 drops of essential oils to the water
Warning: Do not fill water over the max water level marking, it will cause no steam.
3. Connect the diffuser with the provided USB cable to a USB power DC 5V 1000mA (not included).
4. Press the "LIGHT" button to turn on the light. It will be go to colour changing function. Press the "LIGHT" button again, colour light will be stopped at current displayed. Press 3rd time, it will be colour selection up to 14 colours one by one. After that press again, the light function will be turn off. If you want to turn off the light directly, press the "LIGHT" button for 2 seconds, the light will be turned off.
5. Press the "Mist" button and wait for several seconds, the mist will be come out. Press again, the mist will be stopped.
6. Unit to have timer function and will be stop after 6 hours (approx.)

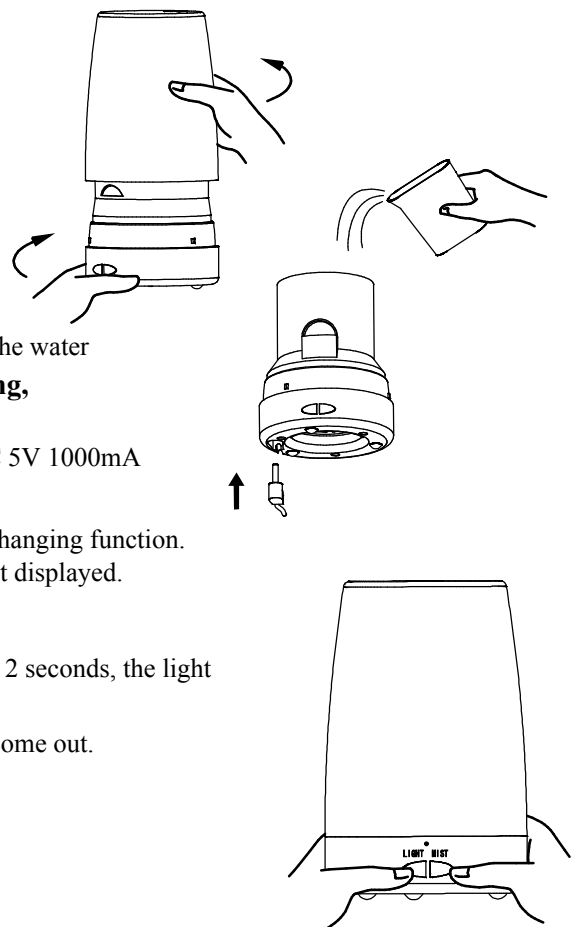

Precaution

1. Do not use as medical respirator.
2. Do not use the product when there is an abnormal noise or the diffuser is overheating abnormally.
3. Do not cover or block the mist outlet or air inlet.
4. Do not use inferior essential oils. Use 100% pure essential oils.
5. Do not take off the cover during operating the diffuser.
6. Do not lace on an electronic device such as computer, TV or audio equipment.
7. Do not use hot water or mineral water. Always use tap water or distilled water.
8. Keep out of reach of children or pets.

 
 
 
Maintenance

To help ensure a long working life, please properly maintain the diffuser. It's necessary to maintain the diffuser as outlined below once it has been used 5 -6 times or for 2-3 consecutive days.

1. Disconnect the USB power from the diffuser base. Take off the cover while keeping the diffuser completely level. DO NOT tip from side to side.
2. If there's water left in the tank, pour it from the drain side. DO NOT pour from the air outlet side, as water may flow into the base of the diffuser.
3. Use a gentle diluted mild kitchen detergent on a damp cloth to remove any essential oil residue, ensuring no detergent remains.

IMPORTANT: DO NOT press heavily or scratch the ultrasonic mechanism in the water tank during cleaning.

4. Add water into the tank to Max level and press the "MIST" button. After 5 minutes, pour out the remaining water and gently wipe clean the water tank. Please DO NOT use chlorine or acidic based detergents for cleaning outside or inside of the diffuser. Please use neutral detergents like diluted kitchen detergents.

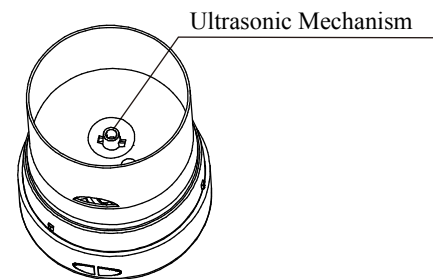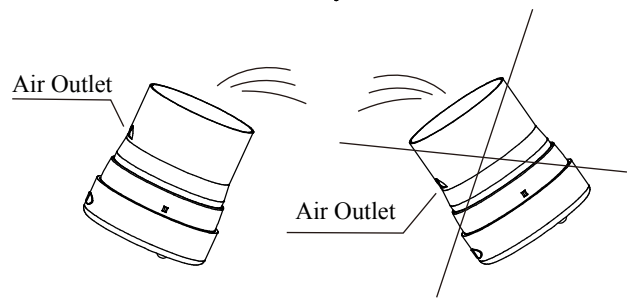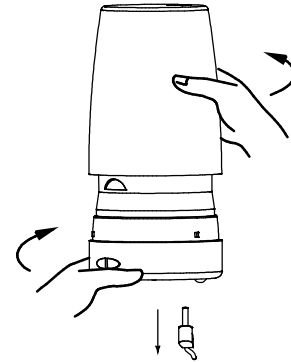

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.