

Assembly Instructions

CARE INSTRUCTIONS:

WIPE CLEAN WITH A SOFT DAMP CLOTH. DO NOT USE SCOURERS, ABRASIVES OR CHEMICAL SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. STORE IN A DRY PLACE AND KEEP AWAY FROM DIRECT SUNLIGHT AND WATER. FOR INDOOR AND DOMESTIC USE ONLY.

WARNING: DO NOT STAND OR SIT ON THIS BOOKSHELF. DO NOT USE UNTIL ALL SCREWS ARE FIRMLY SECURED. USE ONLY ON A FLAT SURFACE. DO NOT DRAG WHEN MOVING THE PRODUCT TO AVOID DAMAGING THE JOINTS. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY. **MAXIMUM SAFE LOADING WEIGHT: 6kg FOR EACH SHELF.**

1

Hardware List




	a	∅4x35mm	10PCS		e	10x10mm	34PCS
	b	∅6x30mm	2PCS		f	28x28mm	2PCS
	c		30PCS		g	∅4x12mm	2PCS
	d	∅5x50mm	34PCS		h	∅6x30mm	2PCS

Tools required
not provided




Philips Head
Screw Driver


2

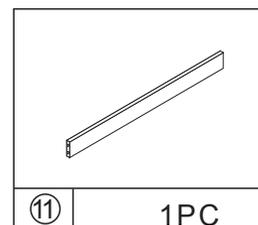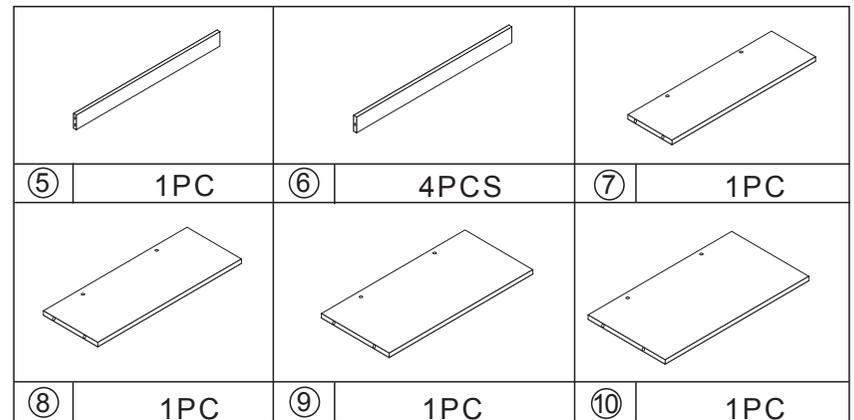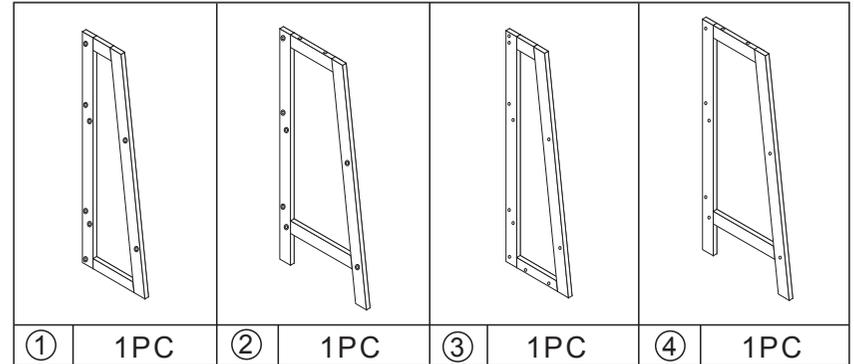


3

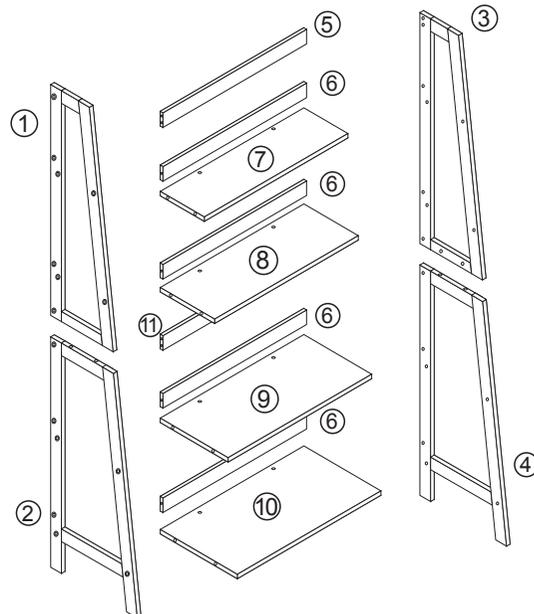


Step 1: Fix Part f on the back of board ⑦ with screws g. Fix board ⑥ to boards ⑦, ⑧, ⑨ & ⑩ with screws a (as per below diagram).

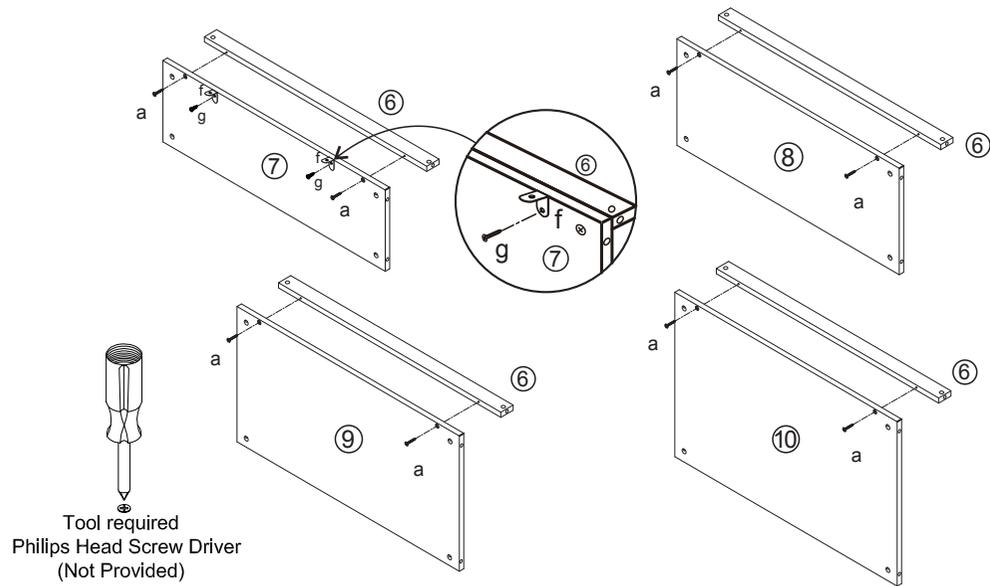



Step 2: Put Part e in corresponding position (as per below diagram), then connect board ① & ②, and board ③ & ④ with screw d. Fix the screws e with screwdriver and ensure all parts align.

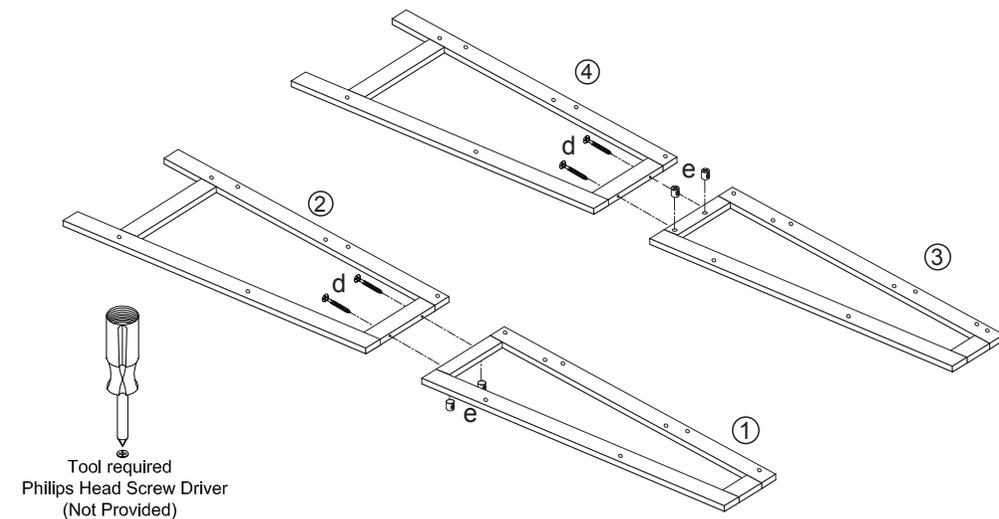



Step 3: Place dowel (Part b) into the corresponding position as per below diagram. Insert Part e into the holes on board ⑦, ⑧, ⑨ & ⑩ as per below diagram. Fix the shelves (from step 1), board ⑤ and the side panels (from step 2) together with screws d.

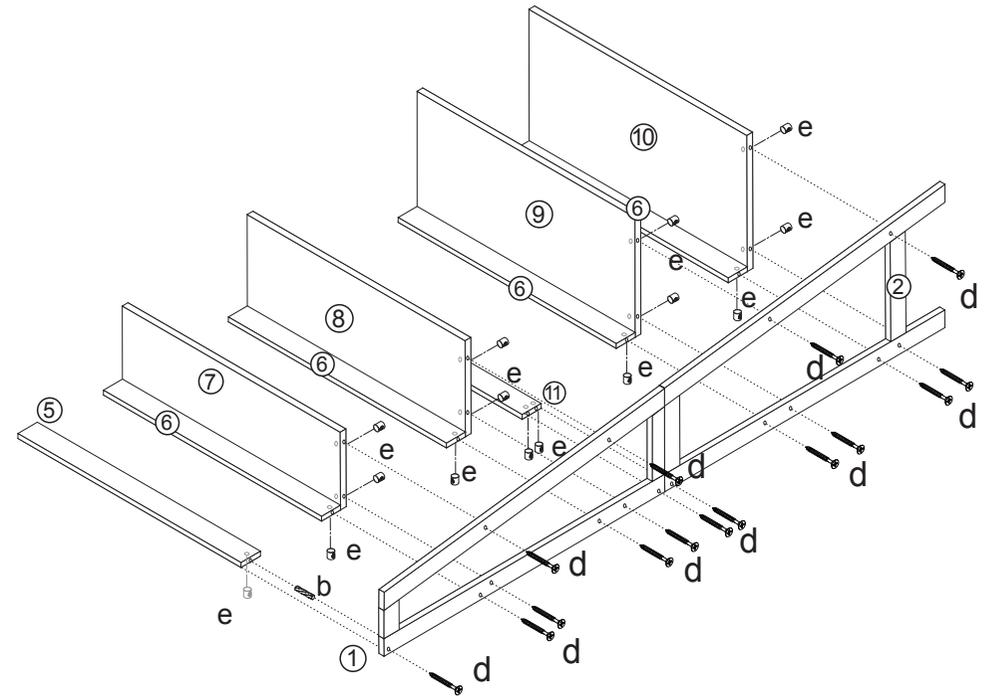

Step 4: Repeat Step 3 for the other side panel.

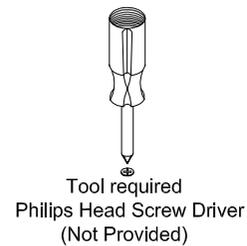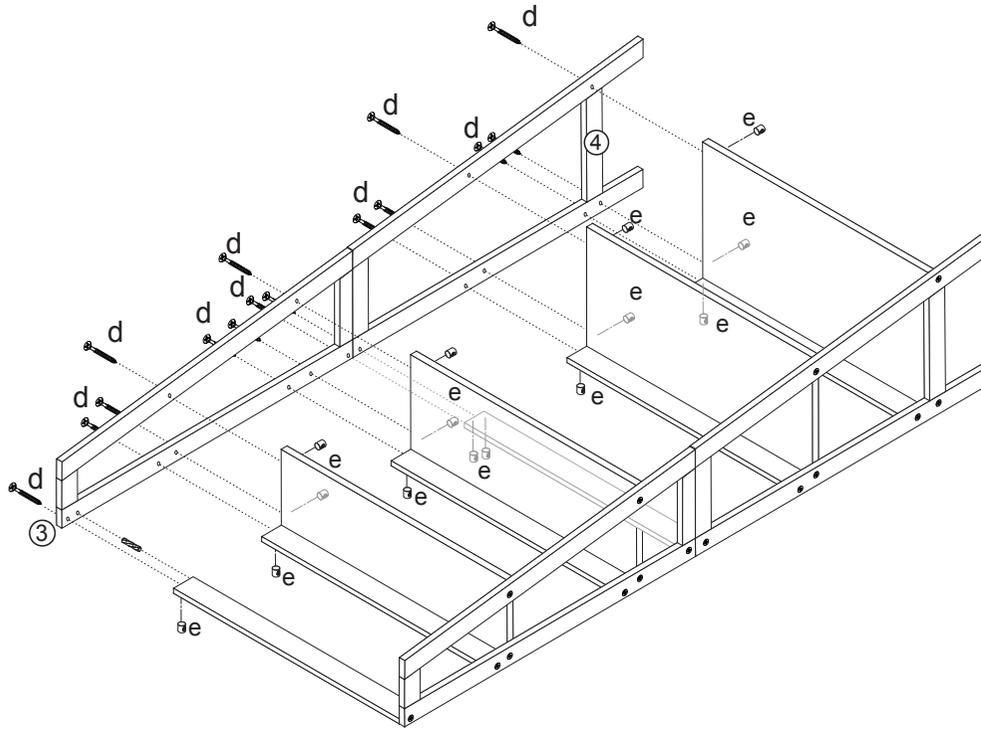

Step 5: Attach stickers (part c) over the screw holes. Then fix the whole product to the wall with part a & h.

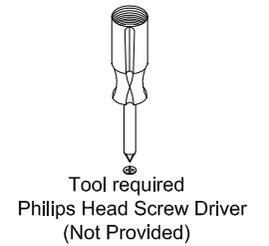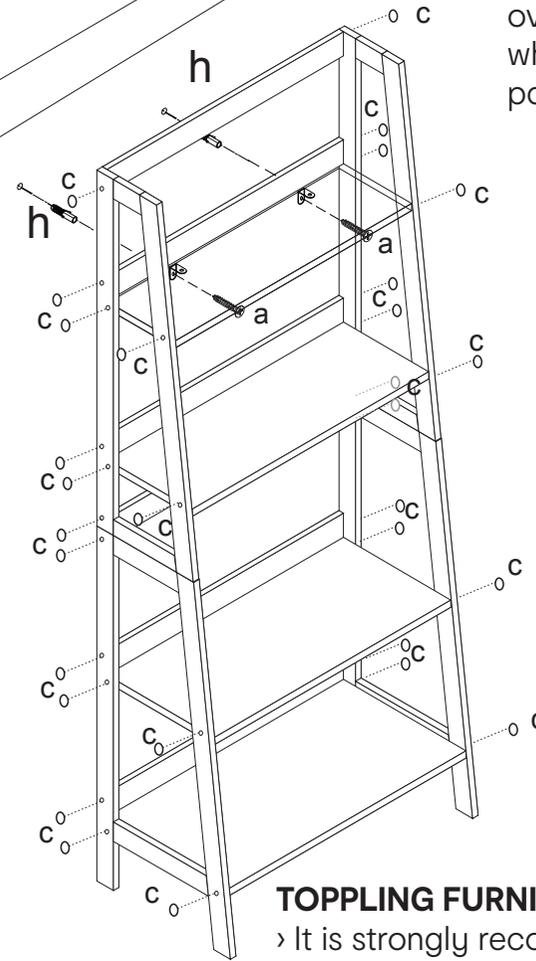

TOPPLING FURNITURE WARNING:

- › It is strongly recommended that this product is permanently fixed to the wall.
- › Please seek professional advice if you are in doubt of what fixing device to use.
- › Regularly check that anchors are securely maintained.
- › Stability of tall items may be affected by thick pile carpet or uneven floors.
- › Do not place unanchored televisions on furniture.

Caution! When attaching the anchor fixings, check for any electrical wires or plumbing behind the wall before drilling any holes (if you are unsure, please seek professional advice from a qualified tradesperson).