

# INTELLIGENT ROBOT MANUAL




- Intelligent Robot
- Remote Control
- Red Ball Projectiles

READ ALL INSTRUCTIONS BEFORE USING YOUR ROBOT


3. Do not allow children under age eight to play with your robot.

4. Do not expose your robot to excessive heat, flames or fire.
5. Always press all buttons or switches carefully. Do not mishandle your robot.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your robot to temperatures above 40°C. Keep out of direct sunlight.
8. Do not attempt to repair this product yourself. Contact a qualified service center if your robot is in need of service.
9. Do not drop, puncture or expose your robot to excessive trauma.
10. Your robot is not intended for commercial use.

\_\_\_\_\_

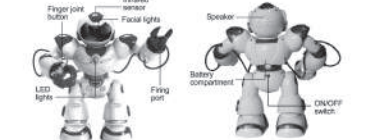


\_\_\_\_\_

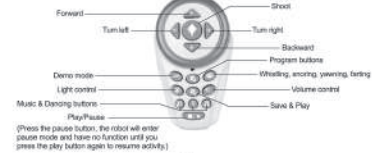

-1-


## 1. Unco

 2. Replace battery cover.  
Attention: remove batteries after you have finished using your product.

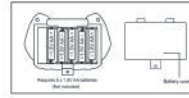

1. Unscrew to open

 2. Replace battery cover.  
Attention: remove batteries after you have finished using your product.

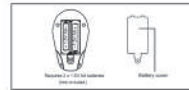

Once you have inserted `tutorial` into your robot

To do so, slide the ON/OFF switch located on the rear of the robot to the ON position.  
When you have finished playing with your robot, slide the ON/OFF switch to the OFF position.

**NOTE:** When your robot is running low on power, it will emit an audible tone and power down. Once the batteries are completely depleted, replace the batteries as soon as possible to continue use.

© 2006 The Authors  
Journal compilation © 2006 Blackwell Publishing Ltd

You can use your remote control to move your robot around in different directions.

By pressing the left and right arrow buttons, your robot will turn left or right.



By pressing the forward/backward button once, the robot will walk forward/backward for a distance.  
By pressing the forward/backward button twice, the robot will slide forward/backward for a distance.  
By pressing the forward/backward button twice and keep pressing, the robot will slide forward/backward all the time.



Press the program button and your robot will enter

Once in program mode, you can press the directional buttons or shoot button a series of times to create a movement program. Press the save & play button to have your robot carry out the movement program that you created.

© 2004 Blackwell Publishing Ltd  
Journal of Internal Medicine 255: 105–112

Press the shoot button on your remote control and your robot will fire the projectile.



Attention: For better use, please keep away from infrared products, strong lights and signal sources when using this product.

Keycode : 42805496

**WARNING:** BATTERIES ARE TO BE INSERTED INTO THE CORRECT POLARITY (+) AND (-). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR CHARGED AND UNCHARGED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED IN APPROVED SUPERVISED RECHARGEABLE CHARGERS. TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVAL BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION FOR ALL IS REQUIRED.

DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

**WARNING: CHOKING HAZARD**  
SMALL PARTS AND SWIRL BALLS. NOT FOR CHILDREN UNDER 3 YEARS.