

anko

Rotary Shaver Instruction Manual



Model no.: RSCX-7571
Save these instructions for future reference.

SAFETY GUIDE - PLEASE READ CAREFULLY BEFORE USING THIS APPLIANCE

Please follow all the precautions listed below for safety and to reduce the risk of injury or electric shock.



WARNING: READ ALL INSTRUCTIONS; FAILURE TO FOLLOW ALL INSTRUCTIONS LISTED BELOW MAY RESULT IN ELECTRIC SHOCK, OR SERIOUS PERSONAL INJURY.

SAVE THE INSTRUCTION MANUAL FOR FUTURE REFERENCE

1. Only use the appliance as described in this manual.
2. Do not immerse the appliance in water or any other liquid.
3. Do not allow the appliance to be exposed to water or moisture during use or storage.
4. Always check the appliance for damage prior to use. If any damage is observed, do not use the appliance.
5. The appliance is intended for indoor use only.
6. Always switch the appliance OFF after use.
7. This appliance has no user serviceable parts. Do not attempt to access the appliance covers.
8. This appliance is for personal use only, not designed for commercial use.
9. Do not use it outdoors.
10. **Do not use** the appliance if it is not working properly, if it has been dropped or if it has been immersed in any liquid.
11. Before using the appliance, ensure that the foil head is securely fitted and not damaged.
12. Do not use the appliance on children.
13. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
14. Children should be supervised to ensure that they do not play with the appliance.
15. Do not operate the charger if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged or dropped into water.
16. Use only the original charger supplied with the appliance.
17. Check that your supply voltage is the same as that stated on the charger.
18. When charging the appliance, the power switch must be off.
19. It is normal for the charger to become warm to touch when charging.
20. Use only attachments provided.
21. Do not replace the batteries with non-rechargeable batteries.
22. Please put the protective cap on the shaver every time to prevent damage on the rotary head. **To avoid personal injury, do not use the shaver if has a damaged rotary head or inner cutter.**
23. The shaver must be used only with provided battery charger, SW-050100AUL.
24. The supply cord cannot be replaced. If the cord is damaged, the appliance should be scrapped.



WARNING: Do not recharge non-rechargeable batteries.



WARNING: Before charging the product, please make sure your hands are dry.

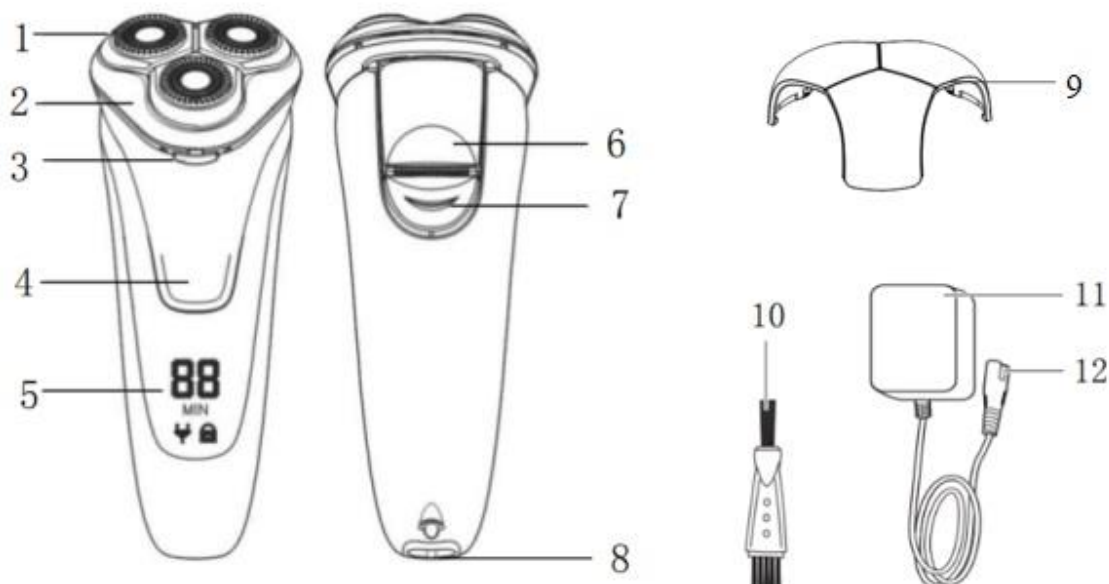


WARNING: Only use the charger supplied with the appliance. Use of other chargers may cause electrical failure and/or fire.

PERSONAL SAFETY



- Never use the appliance on any part of the body other than shaving the face and beard.
- **IMPORTANT! Do not use the appliance if the rotary head is split or broken.**
- Never leave the appliance unattended while switched on.
- Do not touch the blades as they are very sharp.
- Always ensure that the hands are dry before operating or when switching it ON or OFF.

PARTS



- | | |
|-------------------------------|---------------------------|
| 1. Rotary head | 7. Trimmer release button |
| 2. Shaver head | 8. Appliance inlet |
| 3. Shaver head release button | 9. Protective cap |
| 4. On/off switch | 10. Cleaning brush |
| 5. LED display | 11. Adapter |
| 6. Trimmer | 12. Connector |

LED DISPLAY

<p>00/05/10/15/...../60 MIN</p> <p>Time display</p>	<ul style="list-style-type: none"> • It shows the time that the shaver can work.
<p></p> <p>Lock icon</p>	<ul style="list-style-type: none"> • Long-press the on/off switch for 3 seconds, the blue lock icon flashes and the shaver is locked. • Long-press the on/off switch for another 3 seconds to unlock the shaver. • The shaver will be unlocked automatically when it connected to adapter and charged.
<p></p> <p>Plug icon</p>	<ul style="list-style-type: none"> • The plug icon flashes in RED to remind that the shaver battery is low and require recharging. • The plug icon illuminates steady RED when the shaver is charging.

CHARGING

- Please make sure the shaver is switched OFF before charging.
- Fully charge the shaver for 1.5 hours before first use.

NOTE: Normal charging time of the shaver is 1.5 hours. Do not charge for more than 1.5 hours.

- When fully charged, the number display shows 60 and the shaver can continuously work for approx. 60 minutes.

IMPORTANT! Use only with the charger provided, SW-050100AUL.

BATTERY CARE

To ensure maximum life of the rechargeable battery in your shaver, follow these guidelines:

- Do not recharge the shaver between sessions. Wait until the battery is exhausted before recharging.
- Discharge the battery completely at least twice a year (switch on and run until the shaver stops).
- If the shaver has not been used for a long period of time, discharge the battery completely, then fully charge it for 1.5 hours before use.
- Never charge the shaver for more than 1.5 hours.
- Do not use the shaver while charging.
- Do not charge the shaver when the temperature is below 0°C or above 40°C.
- Avoid recharging the shaver in direct sunlight or near a radiating heat source.

OPERATING INSTRUCTIONS

NOTES:

- Improper handling of the shaver may result in damage to the shaver.
- Do not use the shaver for wet shaving.
- Do not use shaving gel or shaving cream.

Normal operation

1. Remove the protective cap from the shaver.
2. Press the on/off switch to turn the shaver on.
3. Stretch your skin and shave against the direction of your beard growth.

NOTE: Applying excessive pressure does not provide a closer shave.

4. While applying gentle pressure, move the shaver head in small circular motions.
5. Press on/off switch to turn the shaver OFF.
6. Clean the shaver carefully and place the protective cap on the shaver.

Using the trimmer

1. Push the trimmer release button downwards until the trimmer flip up.
2. Press on/off switch to turn the shaver ON.
3. Slowly guide the trimmer up to the hair you intend to cut. Always use short strokes to cut your hair. Do not apply too much pressure when using the trimmer. It reduces cutting performance and may cause skin irritation.
4. Press the On/Off switch to turn the shaver OFF and close the trimmer until you hear it click into place.

NOTE: The trimmer always generates a straight cutting edge. If you do not want a straight cutting edge, you must hold the shaver at an angle. For hard-to-reach areas or for very precise cuts, use a comb to check the cut length.

CLEANING AND MAINTENANCE

Make sure to switch OFF the shaver and it is disconnected from mains power before cleaning.

1. Press the release button to flip up the shaver head, then pull out the shaver head.
2. Tap the shaver head gently to remove loose hairs and debris.
3. Wash the shaver head only with running water and allow it to dry thoroughly.
DO NOT submerge the shaver in water or other liquid.
4. Switch ON the shaver for approx. 5–10 seconds to dispel any loose hairs and debris from the shaving system.
5. Use the brush to completely remove the left loose hairs and debris.
6. Firmly attach the shaver head on the shaver and close it in place.
7. Wipe the housing of the shaver with a damp cloth.
8. Put the protective cap on the shaver head. The shaver is now ready for use again.

STORAGE

1. Switch the shaver OFF and clean all components. Make sure that all parts are dry before you pack them up.
2. Store the shaver in a clean, dry area.
3. Make sure that the shaver and the accessories are out of the reach of children and animals.

BATTERY DISPOSAL

If the shaver is to be disposed the batteries should be removed from the appliance before it is scrapped. The shaver must be disconnected from the charger when removing the battery. The battery should be disposed safely. Used batteries should be taken to a recycling facility and not disposed of with household waste.

IMPORTANT: Always fully discharge the batteries before removal and ensure the charger is unplugged.

TECHNICAL SPECIFICATIONS

Model no.	RSCW-7571
Working time	Approx. 60 minutes
Charging time	1.5 hours
Battery Charger	SW-050100AUL
Input voltage	100-240V~ 50/60Hz
Output voltage	5Vd.c. 1.0A
Battery type	Li-ion, 600mAh, 3.7V x1 cell

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us