

100mm

100mm

100mm

100mm


100mm

110mm

K: 42833888 | T: 68765125


WOOD LOOK AROMA DIFFUSER

Instruction Manual

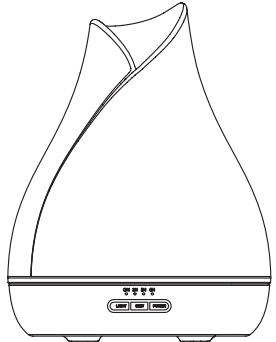


Create an aromatic, soothing atmosphere in your home. Use ultrasonic vibration to transform water into mist. Essential oil can be added to create fragrance.

Includes

Main Unit  
AC Adapter: 24V ,500mA

Names of parts

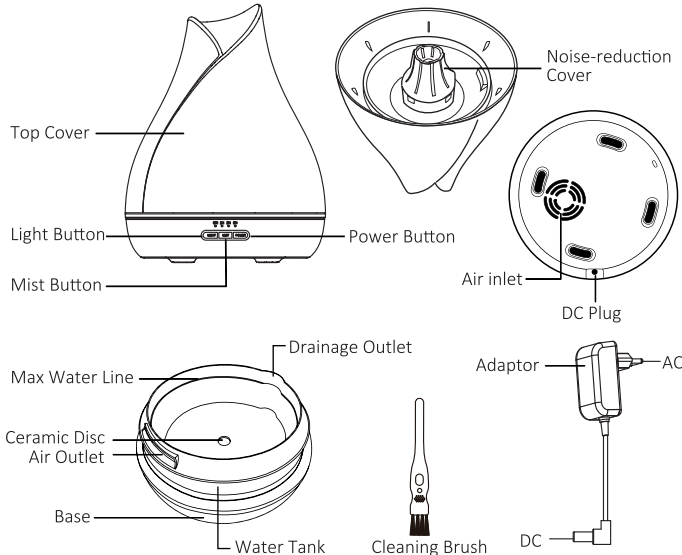


Timer, Mist and Light Buttons

Function	Operation
Timer Settings	Press the POWER button to choose the timer settings: ON/1H/3H/6H/OFF
Misting Modes	1st press of the MIST button will choose high mist, sound "BEEP" will be heard 2nd press of the MIST button will choose low mist, sound "BEEP BEEP" will be heard
7-Colour LED Light and Brightness Modes	1 press of the LIGHT button will turn the light on and the colour will change automatically Continuously press the LIGHT button to switch the colour from red, yellow, green, cyan, blue, purple, white then OFF Press and hold the LIGHT button for 2 seconds to choose 50% brightness, press and hold again to choose 100% brightness
Auto shut off function	When water runs out, unit will switch off.
Operation time	Up to 6 hours.

Set up

Open the top cover.  
Add around 500mL tap water inside the water tank then add 4 to 5 drops of essential oil, depending on your preference of more or less fragrance.

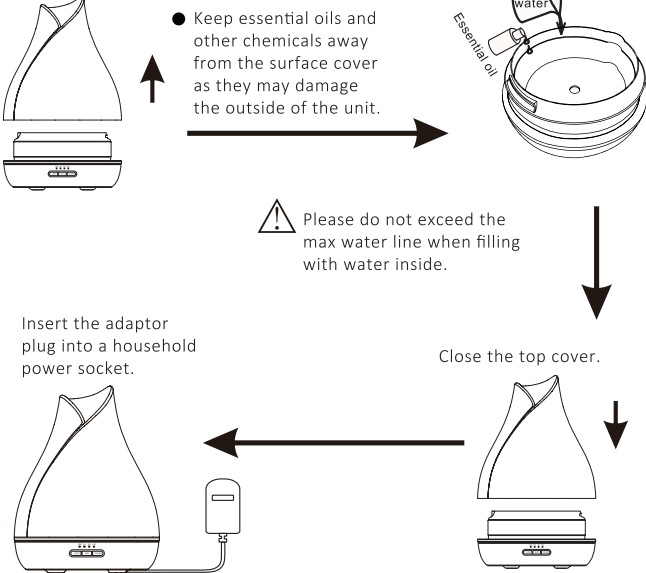


Cleaning and maintenance

The machine should be cleaned after using for 3-5 days continuously, to keep it working normal and extend the lifetime.  
1. Unplug the machine before cleaning.  
2. Please clean water tank with a brush and white vinegar or the dilution of detergent and warm water. Others part of the plastic cover can be cleaned with a soft cloth.  
3. Please do not put the whole machine or base into water. Temperature of water cannot be over 40 degrees to clean.  
4. When the machine is not used for a long period of time, please pour out the water in the tank and wipe off the drops, then place it in a shady and cool place to avoid direct sunlight.  
5. Please do not take apart the noise-reduction cover to clean.  
6. Please clean the noise-reduction cover with the cleaning brush.

Caution:  
Please do not pour out water through the air outlet as this can damage the inside of the machine.

How to pour out the water

To avoid water flowing into the air outlet, please pour out the water correctly.

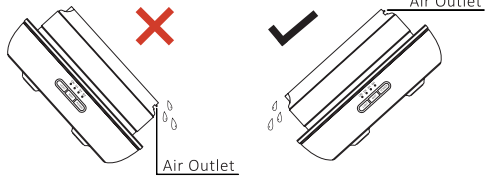

封面

100mm

100mm

100mm

100mm

100mm

110mm

Attention

- To prevent less or no steam from the diffuser, do not add water above the max level mark.
- To prevent melting damage, do not add more than 5 drops of essential oil into the container.
  - 1. Do not use as a medical respirator.
  - 2. Do not use the product when there is an abnormal noise or the diffuser is overheating abnormally.
  - 3. Do not cover or block the mist outlet or air inlet.
  - 4. Do not use inferior essential oils. Use 100% pure essential oils.
  - 5. Do not take off the cover during operation of the diffuser.
  - 6. Do not place near an electric device such as computer, TV or audio equipment.
  - 7. Do not use hot water or mineral water. Always use tap water or distilled water.
  - 8. Keep out reach of children and pets.

Warning

- Important safety instructions:  
The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.
- Unplug the appliance during filling and cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Care should be taken when using the appliance due to the emission of hot water vapour.
- Use supplied AC adaptor only.

IMPORTANT!

Care should be taken with the use of diffusers around animals. Both the choice of essential oils and where animals are should be taken into consideration when in use.

Troubleshooting


If you start up the machine but it doesn't work, please check the following diagnosis.

Problems	Possible Reasons	Handling
No electricity, not working.	Power not connected.	Connect the power, press the button.
	Power wire broken or adaptor burnt out.	Please contact local retailer.
Unable to spray mist or spray is bad.	Is the water level low?	Please fill water.
	Is there too much water inside the tank?	If the water volume exceeds 500mL (max water line), the mist volume will be very small.
	Is the ceramic disc dirty?	Please clean the water tank.
	Is the top cover correctly placed?	Please place top cover in the correct spot.
	Is the bottom air inlet dirty?	Please clear away the dust in the bottom air inlet.
Main body is leaking water.	Is the top cover correctly covered?	If the top cover is not correctly covered, the water will splash out and fall onto the machine body or table.
	Condensation water on the body may be caused by low-temperature or a humid environment.	Please avoid low-temperature and humid environments.

12 Month Warranty

Thank you for your purchase.  
Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.  
For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.  
We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.  
This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.  
Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.  
Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us



封底