 


100mm
100mm
100mm
100mm
100mm

K: 42833895 | T: 68765026

### CERAMIC AROMA DIFFUSER

#### Instruction Manual

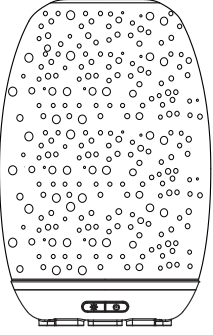 


Create an aromatic, soothing atmosphere in your home. Use ultrasonic vibration to transform water into mist. Essential oil can be added to create fragrance.

**Includes**

Main Unit  
AC Adapter: Input 100~240V.a.c Output 24V.d.c

**Names of parts**

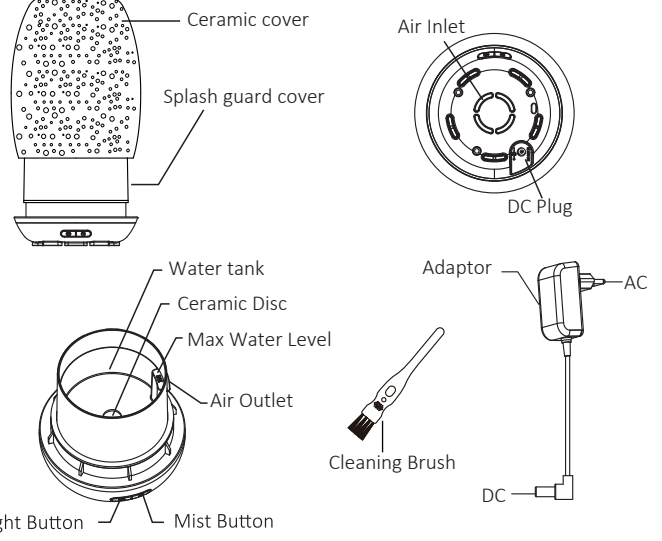

Ceramic cover  
Splash guard cover  
Water tank  
Ceramic Disc  
Max Water Level  
Air Outlet  
Light Button  
Mist Button  
Air Inlet  
DC Plug  
Adaptor  
Cleaning Brush  
DC

**Timer, Mist and Light Buttons**

■ **Light Button (Left side)**

- 1st press: turn on the Red, Green & Blue light.
- 2nd press: lock the current colour of the light.
- 3rd press: turn off the light.

■ **Mist Button (Right side)**

- 1st press: the continuous mist mode will turn on.
- 2nd press: switch to intermittent mist with 15 second intervals, and Red, Green & Blue light will flash.
- 3rd press: turn off the mist.

■ **Light effect: Red, Green & Blue changing colour LED light.**

 
■ **Water capacity: 120ml.**  
This machine has a water shortage detector which will automatically power the unit off if it has no water. Please ensure there is always adequate water to avoid the machine being burnt or broken.

■ **Auto shut off function:** When water runs out, unit will switch off. The machine will automatically power off if abnormal overheating is detected.

■ **Operation time: Up to 4 hours.**

**Set up**

Open the top cover.  
Add around 120ml tap water inside the water tank then add 2 to 3 drops of essential oil, depending on your preference of more or less fragrance.

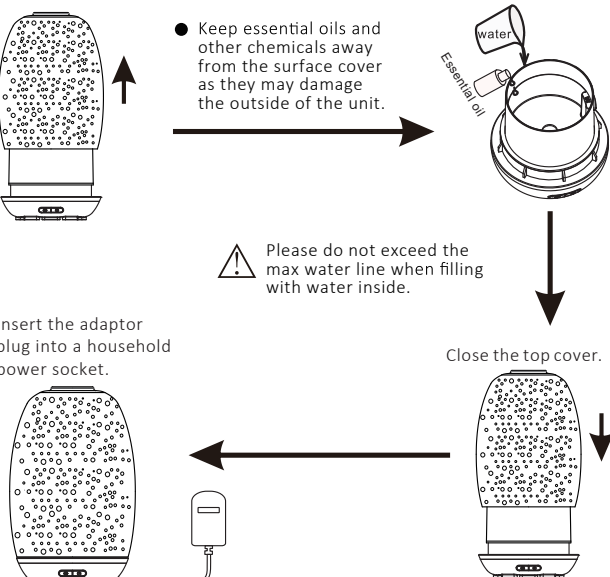

● Keep essential oils and other chemicals away from the surface cover as they may damage the outside of the unit.

⚠ Please do not exceed the max water line when filling with water inside.

Insert the adaptor plug into a household power socket.

Close the top cover.

**Cleaning and maintenance**

 
The machine should be cleaned after using for 3-5 days continuously, to keep it working normal and extend the lifetime.

1. Unplug the machine before cleaning.
2. Please clean water tank with a brush and white vinegar or the dilution of detergent and warm water. Others part of the plastic cover can be cleaned with a soft cloth.
3. Please do not put the whole machine or base into water. Temperature of water cannot be over 40 degrees to clean.
4. When the machine is not used for a long period of time, please pour out the water in the tank and wipe off the drops, then place it in a shady and cool place to avoid direct sunlight.

**Caution:**  
Please do not pour out water through the air outlet as this can damage the inside of the machine.

**How to pour out the water**

To avoid water flowing into the air outlet, please pour out the water correctly.

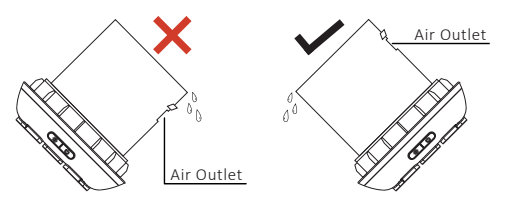

100mm
100mm
100mm
100mm
100mm

110mm

**Attention**

- To prevent less or no steam from the diffuser, do not add water above the max level mark.
- To prevent melting damage, do not add more than 5 drops of essential oil into the container.
- 1. Do not use as a medical respirator.
- 2. Do not use the product when there is an abnormal noise or the diffuser is overheating abnormally.
- 3. Do not cover or block the mist outlet or air inlet.
- 4. Do not use inferior essential oils. Use 100% pure essential oils.
- 5. Do not take off the cover during operation of the diffuser.
- 6. Do not place near an electric device such as computer, TV or audio equipment.
- 7. Do not use hot water or mineral water. Always use tap water or distilled water.
- 8. Keep out reach of children and pets.

**Warning**

- Important safety instructions:  
The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.
- Unplug the appliance during filling and cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Care should be taken when using the appliance due to the emission of hot water vapour.
- Use supplied AC adaptor only.

**IMPORTANT!**  
Care should be taken with the use of diffusers around animals. Both the choice of essential oils and where animals are should be taken into consideration when in use.

**Troubleshooting**

If you start up the machine but it doesn't work, please check the following diagnosis.

Problems	Possible Reasons	Handling
No electricity, not working.	Power not connected.	Connect the power, press the button.
	Power wire broken or adaptor burnt out.	Please contact local retailer.
Unable to spray mist or spray is bad.	Is the water level low?	Please fill water.
	Is there too much water inside the tank?	If the water volume exceeds 120ml (max water line), the mist volume will be very small.
	Is the ceramic disc dirty?	Please clean the water tank.
	Is the top cover correctly placed?	Please place top cover in the correct spot.
Main body is leaking water.	Is the bottom air inlet dirty?	Please clear away the dust in the bottom air inlet.
	Is the top cover correctly covered?	If the top cover is not correctly covered, the water will splash out and fall onto the machine body or table.
	Condensation water on the body may be caused by low-temperature or a humid environment.	Please avoid low-temperature and humid environments.

**12 Month Warranty**

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

