Assembly Instructions

42839774 NOIR ENTERTAINMENT UNIT


CARE INSTRUCTIONS: WIPE CLEAN WITH A DRY CLOTH. DO NOT USE ABRASIVE MATERIALS AND SOLVENTS. CHECK AND TIGHTEN ALL PARTS REGULARLY. DO NOT PLACE HOT ITEMS SUCH AS COFFEE CUPS DIRECTLY ON THE SURFACE. KEEP AWAY FROM WATER AND DIRECT SUNLIGHT. STORE IN A DRY PLACE. FOR DOMESTIC USE ONLY. FOR INDOOR USE ONLY. A MILD ODOUR MAY BE PRESENT WHEN FIRST OPENING THIS CARTON. SIMPLY ALLOW TO AIR OUTSIDE AND THIS WILL FADE.


WARNING: DO NOT STAND OR SIT ON THIS UNIT. DO NOT USE THIS UNIT UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED. DO NOT KNOCK OR DRAG THIS UNIT. USE ONLY ON A FLAT SURFACE.ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY. LOAD DRAWER EVENLY TO PREVENT FROM TIPPING OVER. THIS PACKAGE CONTAINS SMALL PARTS AND SHARP POINTS. KEEP AWAY FROM CHILDREN AND BABIES. MAXIMUM SAFE LOAD: 25KGS FOR TOP PANEL, 10KGS FOR BOTTOM PER SHELF.

Hardware List


| | а | 6x35mm | 10pcs |
|--|---|----------|-------|
| 9 | b | 15x9.5mm | 10pcs |
| | С | 6x30mm | 16pcs |
| The state of the s | d | 4x35mm | 6pcs |
| | е | handle | 1pc |
| >₽ | f | 4x12mm | 2pcs |
| > | g | 2x16mm | 14pcs |

| ~ | h | 4x25mm | 8pcs |
|----------|---|-------------|-------|
| ~ | i | 6x25mm | 4pcs |
| E | j | hinge | 2pcs |
| - | k | 4x14mm | 12pcs |
| | I | 4x18mm | 2pcs |
| / | m | hex key | 1pc |
| | n | Wall fixing | 2pcs |

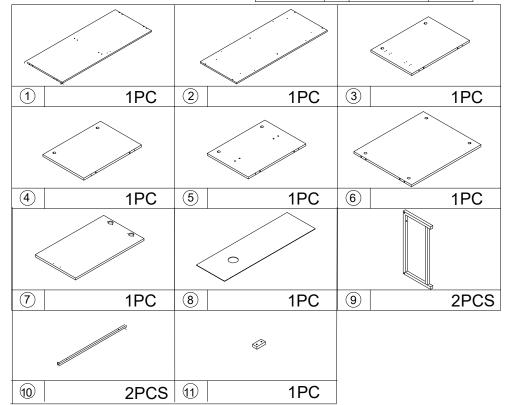

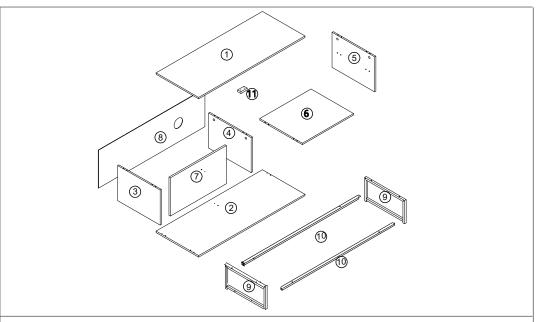

Step 1: Attach part 11 onto board 1 with part I (as per below diagram). Attach part e onto board 7 with part f (as per below diagram)

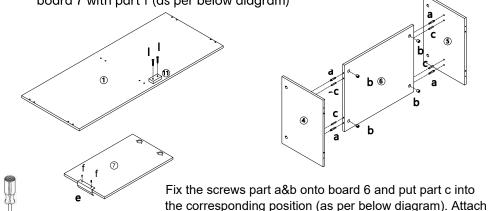


board 4 and 5 to board 6, and then fix the round screws

part b with a screwdriver. Ensure all parts align.

Step 2:

Fix the screws part a&b onto board 1&2&3 and put part c into the corresponding position (as per below diagram).

Attach board 3 and 6 from step 1 together with board 1 and fix the round screws part b with a screwdriver then attach with board 2 together after that fix the screws part d onto board 2 and tighten.

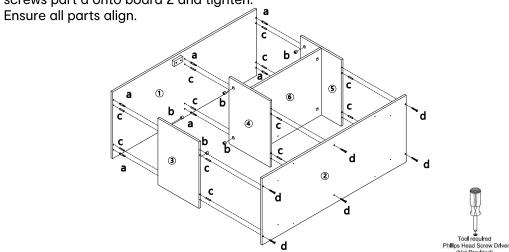

Step 3:


Step 5

Tool required

Attach part 10 onto the bottom board 2 with part h by a screwdriver and use a hex key part m to attach part 9 onto part 10 with screws part i.


Make sure to be on a corresponding position (as per below diagram) and all parts alian.

Attach board 8 onto the back with nails part a with a corresponding position (as per below diagram). Ensure the position of the plug hole.

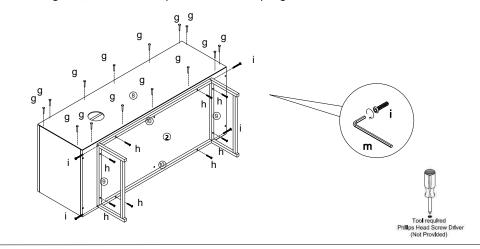

Step 4:

Attach board 7 from step 1 onto board 3 with part j and k by a screwdriver and then all finish.

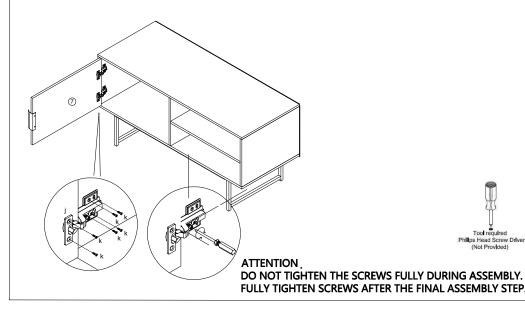

At last, attach the wall fixings onto the wall with part s&q&d. Warning:

> It is strongly recommended that this product is permanently fixed to the wall.

> Please seek professional advice if you are in doubt of what fixing device to use.

> Regularly check that anchors are securely maintained Use safety drawer locks to prevent children climbing

> Stability of tall items may be affected by thick pile carpet or uneven floors

> > Do not place unanchored televisions on furniture (If applicable)

> > Caution: for your safety when attaching the anchor fixings, please note the following: Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).

