

# anko INSTRUCTION

## CAUTION:

**CAUTION-THIS PRODUCT CONTAINS FUNCTIONAL SHARP EDGES, TAKE EXTRA CARE WHEN HANDLING. KEEP OUT OF REACH OF CHILDREN**

Before First Use: Wash all parts in warm soapy water, rinse with clean water and dry with a soft cloth



## USAGE:

|  |  |
|--|--|
|  | <p>To unlock pump mechanism, move the button to the left</p> <p>To lock pump mechanism for storage, push mechanism down and move button to the right to lock</p> |
|  | <p>Place the chopping blade in the center of the bowl</p>  |
|  | <p>Insert vegetable and place cover on the top of the bowl</p>   |
|  | <p>Place the pump mechanism in the top cover so it is inserted into the chopping blade</p>   |
|  | <p>Push down pump mechanism repeatedly until vegetables are chopped into little pieces</p>   |