

INSTRUCTION MANUAL

1:10
SCALE

MULTI-
PLAYERS



8+
years



SAVE THESE INSTRUCTIONS.
READ COMPLETE INSTRUCTIONS BEFORE USE.

Contents

- RC Vehicle x 1
- RC Transmitter x 1
- Instruction Manual x 1
- 7.2V rechargeable Battery Pack x 1
- USB Charger cable x 1
- 1.5 "AA" Battery x 2

 


2.4GHz RC Transmitter x 1



RC Vehicle x 1

BATTERY REQUIREMENTS:

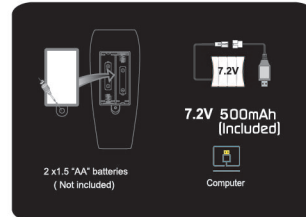

The rechargeable battery only be charged by computer

Battery Precaution

1. The 7.2V rechargeable battery pack must be charged before use by utilising the battery charger which is included
2. Do not overcharge the battery pack. Do not charge for more than 6 hours
3. Do not charge the battery pack if it shows leakage, corrosion, or has loose or exposed wires or other damage
4. Do not cover the battery pack with any sort of materials while charging
5. Do not touch the battery pack when it is hot. Wait until the battery pack cools before installing it in the vehicle and before recharging
6. Do not dispose of the battery in fire
7. Do not dismantle the battery or charger and do not cut the battery or charger cables
8. The battery pack will be warm after charging and hot after use in the vehicle
9. The supply terminals are not to be short-circuited
10. Rechargeable batteries are to be removed from the toy before being charged
11. Rechargeable batteries are for adult charging only

12. Battery replacement must be done by an adult only
13. Battery installation by an adult is required
14. Charge only type (500mAh Max) rechargeable battery packs. Other types of batteries may burst causing injury, or damage to the vehicle. This power unit is intended to be correctly orientated in a vertical or floor mount position. This charger is intended to be used for charging 7.2V rechargeable battery pack with capacity 500mAh Max. It cannot be used for charging non-rechargeable batteries. Regularly examine the battery charger for any damage to the cord, plug, enclosure or other parts. In the event of such damage, do not use the charger or battery pack charge until such damage has been repaired. Note that the 1.5"AA" battery is non-rechargeable and is not to be recharged. Only batteries of the same or equivalent type as recommended are to be used. It will need to be replaced when the transmission is poor.
15. Exhausted batteries are to be removed from the product.

Charging the Rechargeable Battery Pack for the Vehicle:

1. Connect the 7.2V rechargeable battery pack to the battery charger
2. Plug the charger into the standard USB socket
3. The charging time for a full charge is about 3 hours
4. The light in the USB is red when charging
5. When charging is complete, unplug the charger from the AC socket
6. Disconnect the rechargeable battery pack from the battery charger

For Transmitter (Fig.1 and Fig.2)

1. Switch OFF the power
2. Unscrew the screw on the battery cover
3. Open the battery cover
4. Install 2 new 1.5"AA" battery with the correct polarity (+/-) as shown inside the battery compartment
5. Close the battery cover
6. Tighten the screw on the battery cover


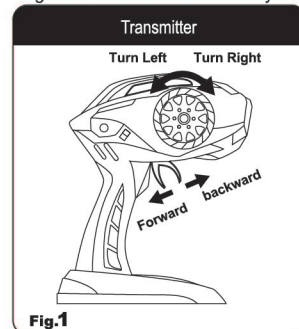 


Fig.1

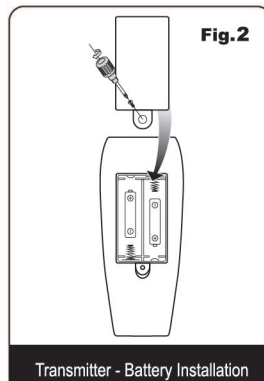 


Transmitter - Battery Installation

Battery Installation

For Vehicle

 1. Switch OFF the power
2. Turn all screw locks of the battery cover to the right
3. Open the battery cover
4. Install a new 7.2V battery pack with the correct polarities (+/-) as shown inside the battery compartment
5. Close the battery cover
6. Turn all screw locks of the battery cover back to the center

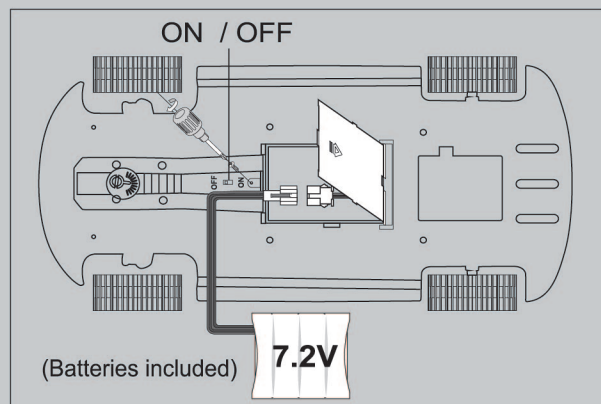


(Batteries included)

How To Bind


1. Turn on the vehicle first, then turn on the transmitter.
2. Keep pulling the trigger of the transmitter to match the vehicle.
3. When the vehicle is functioning, that means they are matched.
4. If it doesn't complete the binding process within 8 seconds, please turn off both the vehicle and transmitter and re-start the binding process
5. When the binding process is complete, whenever you switch the vehicle and transmitter on and off it searches for the memorised code and will only lock onto the transmitter signal containing that code.
6. If you have more than two vehicles, please bind them one by one. When the second vehicle is binding, always keep the first vehicle and transmitter on.
7. Please turn off both the vehicle and transmitter and re-start the binding process if you are changing to another 2.4GHz transmitter.

How To Play

 1. Switch ON the vehicle and transmitter.

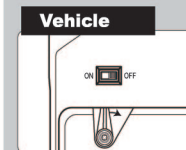


Vehicle

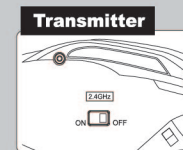 


Transmitter

 3. Use the accelerator trigger to drive the vehicle forwards, stop, or backwards

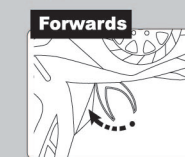

Forwards

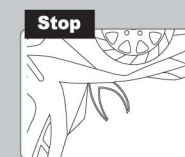 


Stop




Backward

 2. Use the steering wheel to control the vehicle turning left or right

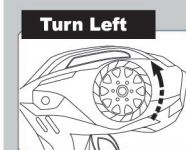

Turn Left

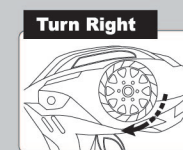 

Turn Right

4. Play on a smooth surface for optimum performance
5. Remember to switch OFF the power of the Vehicle and Transmitter after playing
6. The optimum control range is up to 30 metres outdoors

Performance Tips

1. Do not drive on grass, dirt, sand, dusts, carpet or through water
2. Do not drive in windy or rainy weather
3. Avoid the vehicle directly impacting with obstacles
4. Switch OFF the power when not in use to prevent damage to the vehicle or transmitter due to leakage of electrolytes from batteries
5. Remove all batteries from the Vehicle and Transmitter when not in use for a long period of time
6. Keep fingers, hair and loose clothing away from the wheels
7. The operating range can be affected by a variety of factors:
 - a) Low Voltage of batteries in the Transmitter or Vehicle
 - b) Interference from other items that emit radio frequency signals
8. Outdoor usage is recommended in order to get optimum control range
9. It is recommended to play with the vehicle on a clean and smooth surface
10. Clean the battery compartment to make sure it is free from dust to prevent poor contact of batteries

Cautions

1. Do not attempt to disassemble the Vehicle or Transmitter
 2. Do not operate the Vehicle with the same frequency as other player(s) in the same location as this will interfere and make the Vehicle lose control.
 3. Make sure the batteries are installed with correct polarities (+/-) as shown inside the battery compartment
 4. Remove the package and take out all accessories before giving the Vehicle and Transmitter to a child to play with
- The packaging and instruction manual contains important information. Please keep them for future reference.
Warning! Choking Hazard. Not suitable for children under the age of 3 years due to small parts.
We reserve the right to improve/amend specifications and colours without notice.
Warning! The Antenna of the vehicle is not to be inserted into socket outlets.

Disposal of batteries



Batteries should not be disposed of in the household waste. As the consumer you are legally obliged to return batteries containing harmful substances and all other used batteries. You can hand in your old batteries at public collection points in your area or wherever batteries are sold. You will find these chemical abbreviations along with a crossed-out refuse bin on batteries

containing harmful substances:

Pb=Battery contains lead
Cd=Battery contains cadmium
Hg=Battery contains mercury

The USB power supply cable used with the electric toy shall be regularly examined for damage to the supply cord, plug, enclosure or other parts, and in the event of damage, it shall not be used until the damage has been repaired.