

anko

Spy Walkie Talkies

5+
years


A QUICK LOOK AT YOUR DEVICE



USING YOUR WALKIE TALKIES

1. Slide the ON/OFF switch on each walkie talkie to the ON position.
2. Hold one walkie talkie close to your mouth. Press the Call button, and speak clearly to transmit a message to the other walkie talkie.
3. Release the Call button when you are finished talking so that you can hear any incoming messages from the other walkie talkie. (Talking range: up to 35 metres).
4. For extra light, press the Flashlight button.
5. When you are finished using your walkie talkies, make sure the ON/OFF switch is in the OFF position.

BATTERY INSTALLATION

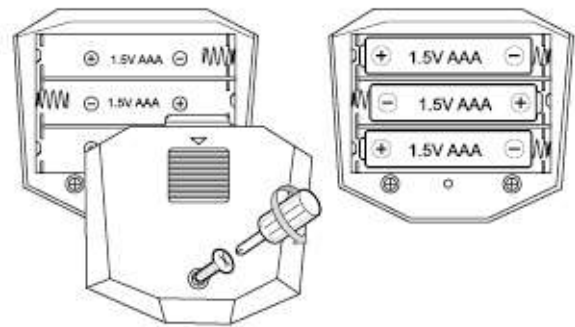

Each walkie talkies requires 3 x 1.5V AAA batteries (Not included), totally requires 6 x 1.5V AAA batteries (Not included).

WARNING: BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE TOY WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. BATTERY INSTALLATION BY AN ADULT IS REQUIRED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

WARNING: FOR SAFETY REASONS, REMOVE ALL TAGS, LABELS AND PLASTIC FASTENERS BEFORE GIVING THIS TOY TO YOUR CHILD.

KEYCODE: 42887904

FOR AU / NZ: IMPORTED FOR KMART STORES IN AUSTRALIA AND NEW ZEALAND.

FOR USA: IMPORTED BY ANKO RETAIL INC. 19500 ALDERWOOD MALL PARKWAY LYNNWOOD WA 98036 USA.

PRODUCT MAY VARY FROM IMAGE SHOWN. PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.



Z516

27MHz

WARNING: OPERATING RANGE CAN BE SIGNIFICANTLY REDUCED DURING INDOOR USE DUE TO INTERFERENCE FROM ELECTRICAL EQUIPMENT SUCH AS COMPUTERS AND/OR LARGE METALLIC OBJECTS.