

6+ YEARS

REMOTE CONTROL MEGA REX MANUAL



PACKAGE CONTENTS

• Mega Rex • Remote Controller • USB Charger • 2 Wings • Tail
• 2 x 300mAh Lithium Polymer Rechargeable Battery

IMPORTANT SAFETY PRECAUTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR MEGA REX.

1. Do not use your mega rex near water. Clean using a soft cloth or paper towel.
2. Do not place your mega rex on any wet surfaces.
3. Do not allow children under age eight to play with your mega rex without adult supervision.
4. Do not expose your mega rex to excessive heat, fumes or fire.
5. Always press all buttons or switches carefully.
6. Do not use in extremely dry environments, as this can lead to static discharge during usage.
7. Do not expose your mega rex to temperatures above 40°C. Keep out of direct sunlight.
8. Do not drop, puncture or expose your mega rex to excessive trauma.
9. Your mega rex is not intended for commercial use.

WINGS AND TAIL INSTALLATION METHOD




As per diagram, insert the wings into the mounting slots on both sides of the mega rex.
As per diagram, insert the tail into the mounting slot on back side of the mega rex.



After using the mega rex, you can hold the button at the bottom to remove the tail.

 MEGA REX



REMOTE CONTROL



INSERTING BATTERIES

Mega rex
1. Lift cover to open battery cover, connect the rechargeable battery pack with connector. (The battery connector will only fit in one way. Do not force the connectors together).
2. Replace battery cover.
Attention: Remove rechargeable battery after you have finished using your product.



 
Remote control
1. Lift cover to open battery cover, insert 2 x 1.5V AAA batteries.
2. Replace battery cover.
Attention: Remove batteries after you have finished using your product.



LITHIUM BATTERY CHARGE INSTRUCTIONS

Attention: Do not charge battery immediately after each play, let the battery cool down for a while.

1. Turn off mega rex.
2. Remove top cover the battery cover and separate the rechargeable battery pack from the connector.
3. Plug the charger into a USB port and battery as shown. (The battery connector will only fit in one way. Do not force the connectors together). The LED light will light up when charging. When it has finished charging, the light turns off.
4. Charging time: approximately 60-80 minutes.



POWERING ON YOUR MEGA REX

Once you have inserted batteries into your mega rex and remote control, you can go ahead and power on your mega rex.

To do so, slide the ON/OFF switch located on the bottom of the mega rex to the ON position.

When you have finished playing with your mega rex, slide the ON/OFF switch to the OFF position.
NOTE: When your mega rex is running low on power, it will stop. Once the batteries are completely depleted, charge the lithium battery and replace the batteries of the remote control as soon as possible to continue use.

MOVING YOUR MEGA REX

You can use your remote control to move your mega rex around in different directions.

By pressing the turn left/right button, your mega rex will turn left/right.
Continuing to hold/press the turn left/right button, your mega rex will turn left/right at the time.



By pressing the step forward/backward button once, the mega rex will walk forward/backward for a distance.

Continuing to hold/press the step forward/backward button, the mega rex will walk forward/backward at the time.



By pressing the slide forward/backward button once, the mega rex will slide forward/backward for a distance.

Continuing to hold/press the slide forward/backward button, the mega rex will slide forward/backward at the time.
By pressing the dance button, the mega rex will dance for a while.

WARNING: THE SAFETY WARNING SYMBOLS ARE USED TO INDICATE

WARNING: THE SAFETY WARNING SYMBOLS ARE USED TO INDICATE THE PRESENCE OF HAZARDOUS SITUATIONS THAT MAY CAUSE PERSONAL INJURY OR PROPERTY DAMAGE. ALWAYS READ THE INSTRUCTIONS CAREFULLY AND FOLLOW THE SAFETY PRECAUTIONS. ALWAYS USE THE PRODUCT IN ACCORDANCE WITH THE INSTRUCTIONS. ALWAYS USE THE PRODUCT IN A SAFE MANNER. ALWAYS USE THE PRODUCT IN A SAFE MANNER. ALWAYS USE THE PRODUCT IN A SAFE MANNER.

WARNING: THE SAFETY WARNING SYMBOLS ARE USED TO INDICATE THE PRESENCE OF HAZARDOUS SITUATIONS THAT MAY CAUSE PERSONAL INJURY OR PROPERTY DAMAGE. ALWAYS READ THE INSTRUCTIONS CAREFULLY AND FOLLOW THE SAFETY PRECAUTIONS. ALWAYS USE THE PRODUCT IN ACCORDANCE WITH THE INSTRUCTIONS. ALWAYS USE THE PRODUCT IN A SAFE MANNER. ALWAYS USE THE PRODUCT IN A SAFE MANNER. ALWAYS USE THE PRODUCT IN A SAFE MANNER.