

# anko

## User Manual

Bluetooth® FM transmitter & Car charger

42913047



### Notice:

Please read user manual carefully before any operations and keep it for your records.

### Safety instructions:

Please read all safety instruction warnings carefully before using this product. Improper use of this product may result in damage to this or attached products. To ensure the production works well, please never use this in the following conditions:

1. Moist or underwater conditions.
2. Conditions near heater or high temperature service.
3. Conditions with direct and strong sunshine.
4. Do not use chemical solvent on cleaning this product.

### Packing contents:

Bluetooth FM Transmitter x 1


3.5mm Audio cable x 1

User manual x 1

### Features:

1. Transmit phone call & music from Bluetooth mobile phone to the car FM stereo system
2. Power from the cigarette socket in the car (DC 12V/24V)
3. USB output to charge external devices (DC 5V/1A).
4. Supports USB/TF/AUX-IN;
5. Switch to hands-free mode automatically from music playing status when receiving calls;
6. LCD screen display
7. FM frequency from 88-108.0MHz
8. Bluetooth version: V5.0

## Function Panels:

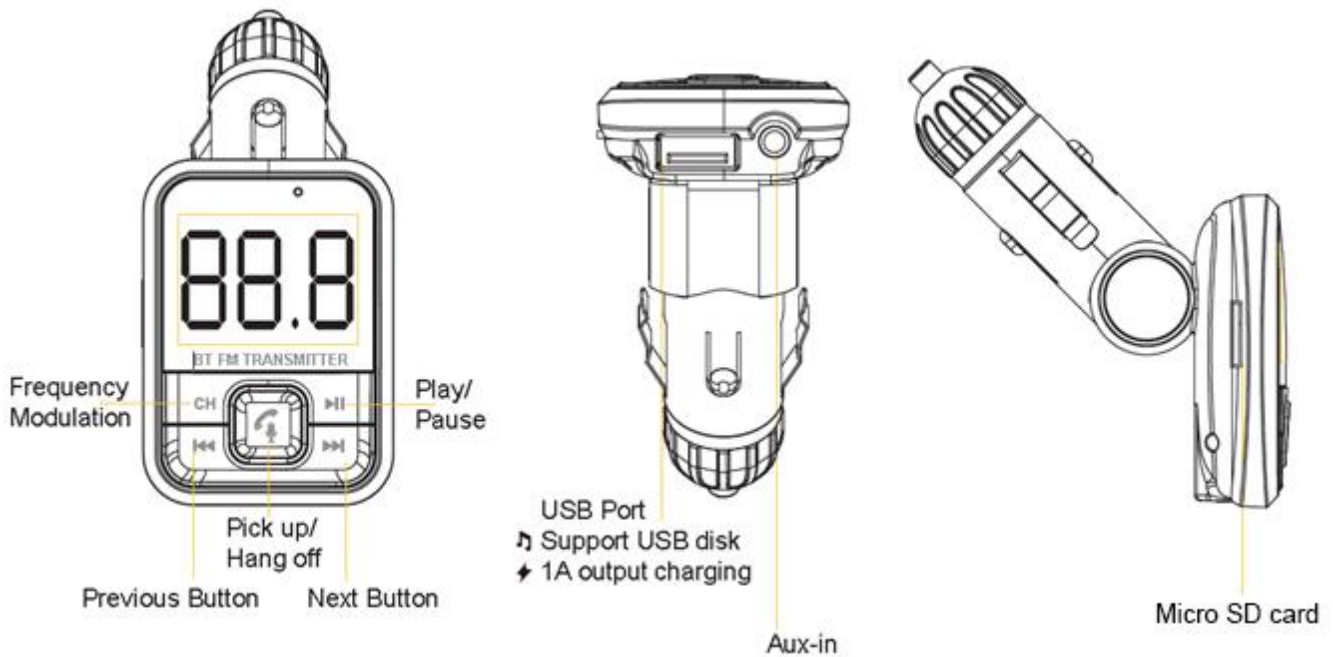

## Operation Instructions:

### Car charger Function

The device has a 5V/1A USB output port that can be used to charge your devices via a USB cable (Not included).

### To use Bluetooth, microSD card, USB drive and Aux-in Mode function, Connect the Bluetooth® FM transmitter to the car radio by FM transmitter.

1. Plug the Bluetooth FM transmitter into your car cigarette socket.
2. Turn your car radio to an unoccupied FM frequency in your area, press the “CH” button and then the LCD screen flash the frequency, press the previous/next button to match the same radio frequency.

### Bluetooth function:

Pairing a Bluetooth device for the first time

1. Turn the unit on.
2. Turn on your external device. Refer to its user manual for instructions on pairing and connecting Bluetooth devices.
3. Using the native controls on your Bluetooth device, select Bluetooth device name
4. ‘KM42747673’ in your Bluetooth settings menu to pair.
5. When successfully paired and connected, a sound will issue from the unit.
6. After initial pairing, the unit will stay paired unless unpaired manually.
7. If your device asks for a pairing password, use “0000” or “1234” to complete the pairing
8. If you have used Bluetooth connection before, the system will start searching for the device last connected. When the device is found, the system will re-connect automatically.

NOTE: Should your device become unpaired or you are not able to connect it, repeat the above steps.

### Play music with microSD card and USB drive.

Insert the microSD card/USB disk into the slot, music will play automatically when there is MP3 files stored

NOTE: When it's on "CHG" status, it can't read the USB disk, long press the "CH" until it flash "USB", then plug the USB disk

microSD card: compatible for 32GB max memory.

USB drive: compatible for 64GB max memory.

### AUX-in mode.

To connect with mobile phone or other audio equipment.

Use provided 3.5mm Aux cable to play AUX-IN function. Plug one side 3.5mm Aux-in to the unit and connect with another side to the 3.5mm port of mobile or audio equipment.

### Fuse Replacement

In case of fuse damage and need to replace. Unscrew the bottom end of the cigarette plug. Replace with fuse 1A 250V 5x20mm, (not included).



Unscrew here to replace the fuse

## Operation Guide:

Operation Guide	BT FM transmitter
1.How to play and stop	Short press "▶▶" to Pause/Play
2.How to adjust the Volume	Long Press "▶▶" to increase the Volume. Long press "◀◀" to decrease the Volume.
3.How to change the frequency	press "CH" first :Then short Press "▶▶" to increase the frequency press "CH" first :Then short Press "◀◀" to decrease the frequency
4.How to choose music	Short Press "▶▶"to play the next song. Short Press "◀◀" to play the previous song;
5.How to use the Hands-free function	Short Press "📞" to answer/ reject the phone call. Long Press "📞" to direct reject incoming phone call. Press "📞" twice to redial the last phone call.
6.How to charge for a device.	Plug into the USB port directly.

7.How to play the USB disk music	When it's on "CHG" status, it can't read the USB disk, long press the "CH" until it flash "USB", then plug the USB disk.
----------------------------------	--

## Specifications:

- Bluetooth Version: 5.0
- Frequency range: 88-108.0 MHz
- Product input: DC 12-24V
- Charger output: 5V d.c.1A
- Music format: MP3
- microSD card (Max capacity): 32GB
- USB drive (Max capacity): 64GB
- Transmit Distance: about 3 m
- Product color: Black

## 12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](http://Kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.