

# **anko**

**High Power Juicer**

**XJ-14416A2**

**User Manual**



**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

# **IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed including the following:

1. The appliances for household and indoor use only.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
6. Do not use the appliance if the rotating sieve or the protecting cover is damaged or has visible cracks.
7. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
8. This device is intended to extract the juice from soft fruits and vegetables.
9. This device is not suitable for mincing hard foods (e.g. nuts etc.) or hard fruit and vegetable cores. Stone fruits must be pitted before being juiced.
10. This device may not be used by children. Children must be kept away from the device, cord and plug.
11. Children should be supervised to ensure that they do not play with the appliance.
12. Defects arising due to improper handling, damage or attempts at repair are excluded from the warranty. This also applies to normal wear and tear.
13. The plastic foils and bags pose a suffocation hazard! Keep young children and animals away from the packaging material.
14. Keep your head, hands, hair, jewelry or clothing away from rotating parts of the device.
15. Do not reach into the feed chute to push down food. Only use the plunger to push down food.
16. The blades in the juicer sieve are sharp! Be careful when handling the blades.
17. Only turn the device ON if it has been completely and properly assembled and if the locking lever is properly engaged!
18. Ensure that the power supply cord does not pose a trip-ping hazard. Don't allow the cord to hang over tables or the like. Someone could pull the device down with it.
19. Store the device out of the reach of children!
20. Never operate the device without food.
21. Never fill the device with frozen or hot fruits or vegetables!
22. Do not forcefully push fruits and vegetables into the device!
23. Never use the device without the collection containers.
24. Do not allow the device to fall.
25. Only use original parts provided by the manufacturer.
26. Do not pull or carry the device by the power cord.
27. Do not subject the device to extreme temperatures, severe changes in temperature, moisture, wetness or direct sunlight.
28. Do not use any corrosive or abrasive cleaning agents to clean the device. They could damage the surface.
29. Maintain adequate distance to heat sources such as stoves or ovens to prevent damage to the device.
25. Do not place any open flames, e.g. burning candles, in the direct vicinity of the device, power cord and plug.

30. Do not insert any objects (spoons, knives etc.) in the feed chute while the device is operating.
31. The device is not suitable for continuous operation. To prevent damage to the electric motor, do not use the device continuously for more than 60 seconds. Then, let the device cool down sufficiently before using it again.
32. **IMPORTANT! The maximum continuous operating time is 1 minute. Allow it to rest for at least 5 minutes before using it again.**
33. Do not use the appliance if the rotating sieve or the protecting cover is damaged or has visible cracks.
34. If the supply cord is damaged, it must be replaced by qualified electrical person in order to avoid a hazard or the product must be disposed.

## SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

### KNOW YOUR HIGH POWER JUICER



1. Pomace container for fruit and vegetable waste (with juice discharge)
2. Motor unit
3. Locking lever
4. On/Off switch with two speed settings
5. Anti-slip suction feet
6. Juice filter (sieve) with motor receptacle
7. Juice collection container
8. Juice discharge
9. Lid with feed chute and plunger

## **BEFORE USING THE HIGH POWER JUICER**

1. The plastic foils and bags pose a suffocation hazard! Keep children and animals away from the packaging material.
2. Unpack the product contents and make sure that they are complete and check for any damages. If the appliance, mains power cord or plug has any signs of damage do not use the appliance.
3. Before using the appliance, remove all packaging material and any labels attached to the device, which may have been provided for protection during transportation or for advertising purposes.
4. The appliance may have production residue stuck to it. It is recommended to clean the device before first use.

## **PREPARING & EXTRACTING**

1. Set up the device on a level, stable and non-slip surface.
2. Place the pomace container with the juice discharge (1) on the motor unit. In the process, make sure that the juice discharge is seated in the corresponding recess of the main unit.
3. Place the juicer sieve with the motor receptacle (6) on the drive disc of the motor unit (2). It must audibly lock into place.
4. Place the lid (9) on the pomace container with the juice discharge. Make sure it is properly seated.
5. Pull the locking lever (3) up and lock the lid.
6. Place the juice collection container (7) under the juice discharge. Make sure that the recess on the collection container is properly positioned under the discharge.
7. Connect the appliance to a mains power outlet. The supply cord plug must be easily accessible after the device has been connected to mains power for safety.
8. Your juicer is now ready for use.
9. Turn the juicer ON by moving the On/Off switch to position 1 (low speed) or 2 (high speed) depending on the desired speed. **IMPROTNAT! The juicer must not be operated continuously for more than 1 minute to prevent the motor from overheating!**
10. Add the foods you want to extract the juice from in the feed chute. Use the plunger to push down food. The juice runs through the juice discharge and pulp and seeds etc. are collected in the pomace container.
11. Move the On/Off switch to the OFF position to turn the device off.
12. Disconnect the mains plug from the socket after use.
13. Clean the device and accessories after every use.

**IMPORTANT! Do not leave the unit unattended during use.**

## **USEFUL TIPS**

1. Freshly prepared juices of fruits and vegetables only have a limited time until they spoil. Consume the produced juice and store the rest of it in the refrigerator.
2. With the juicer you can extract the juice from virtually all kinds of fruits and vegetables. The more the water the fruits/vegetables contain the more juice can be extracted. Waterless fruits and vegetables such as bananas or avocados are not suitable for juice extraction.
3. If possible, use ripe fruits in order to get more juice.
4. Wash your fruits and vegetables thoroughly before extracting the juice from it.

5. Remove the peel if you would like to extract the juice from fruits and vegetables with hard peel (e.g. melons, mangos, citrus fruits).
6. Stone fruits (such as cherries, plums, peaches...) must be seeded before extracting the juice from it.
7. If necessary, cut the fruits/vegetables into small pieces so that it readily fits into the feed chute.
8. Fruits and vegetables with thin peel (e.g. apples, pears, carrots...) do not have to be peeled. In this case we recommend that you don't remove the peel in this case because it contains valuable vitamins.
9. Leafy vegetables can be processed best if they are firmly rolled up in advance.

## **Recipe**

Load (ingredients)	Quantity	Time of operation
Soaked carrots	2,2 kg extracted within 1 min, then allow it to rest for at least 5 minutes before using it again.	On: 1 min

## **HOW TO CLEAN & STORE YOUR HIGH POWER JUICER**

Prior to each cleaning, disconnect the appliance from mains power. Never submerge the electric motor unit in water or other liquids. Be careful when handling the juicer sieve, as the blades are sharp! When cleaning, do not use any corrosive or abrasive cleaners. They could damage the surface.

1. Ensure that the device is switched off and not connected to mains power.
2. Ensure that all rotating parts in the juicer have come to a complete stop.
3. Open the locking lever.
4. Take the lid and the plunger off.
5. Remove the juicer sieve from the drive disc of the motor unit. To do so, pull it up and off carefully using both hands. Note: When using the device for the first time, the juice filter (sieve) fits very tight on the drive disc. For this reason, be careful when removing it to prevent injury!
6. Remove the pomace container with the juice discharge.
7. Empty the pomace container and clean all removable parts with warm water and a mild detergent or in the dishwasher. Then dry all parts thoroughly. Please keep in mind: All removable parts can be cleaned in the dish washer. However, frequent cleaning in the dishwasher may dull the blades of the juicer sieve. For this reason, we recommend cleaning juicer sieve by hand only.
8. If necessary, clean the motor unit with a damp cloth.
9. Assemble the device once all parts have dried completely.
10. Store the device in a clean, dry, frost-free location that is not accessible to children and animals.

## **HOW TO SOLVE COMMON PROBLEMS**

If the juicer is not working properly, please check whether you are able to rectify the problem yourself first. Do not attempt to repair a defective appliance yourself.

<b>Problem</b>	<b>Potential cause/solution</b>
The device is NOT working.	<ul style="list-style-type: none"><li>• Is the mains supply cord plug properly connected to a mains power outlet?</li><li>• Is the mains power socket defective? Try another power outlet socket.</li><li>• Check the fuse on your mains power outlet connection.</li><li>• Is the device correctly assembled? Check if the juice filter is correctly seated and if the locking clips have been closed properly.</li><li>• Is the device activated? Press the On/Off switch.</li></ul>

## **TECHNICAL SPECIFICATION**

Voltage: 220-240V~ 50-60Hz

Power: 600W

## **12 MONTH WARRANTY**

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125(Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at [Kmart.com.au](http://Kmart.com.au) for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.