

 

 
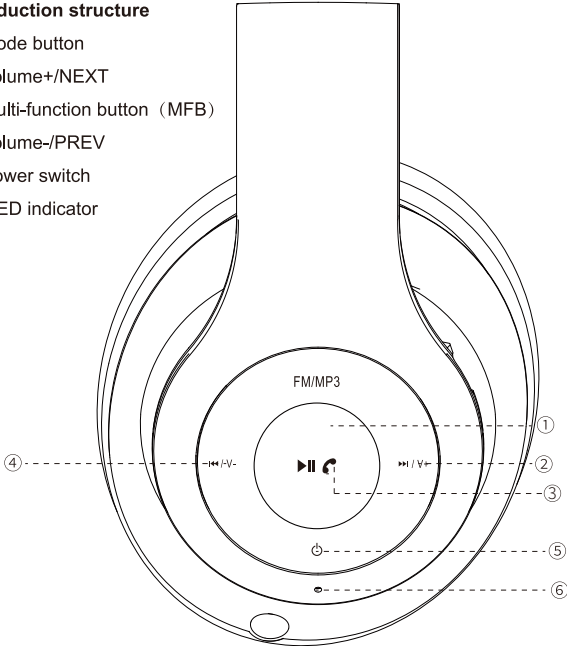 







 


 

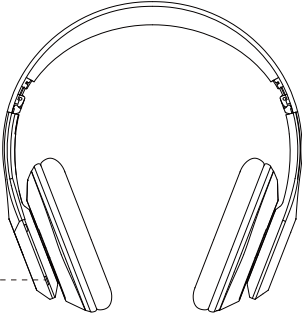 

 





<div><div><div>anko</div><div>INSTRUCTION MANUAL</div></div><div></div><div><div>Keycode: 42967286</div><div>Bluetooth Foldable Headphone</div></div><div>Please read all the information carefully before you use the product and keep the manual for future reference.</div></div>	<div><div>Packing list:</div><div><div><div>Headphone*1</div></div><div><div>Dual 3.5mm audio cable*1</div></div><div><div>User's Manual*1</div></div><div><div>Micro USB Charging Cable*1</div></div></div><div>1</div></div>	<div><div>Production structure</div><div><div>1.Mode button</div><div>2.Volume+/NEXT</div><div>3.Multi-function button（MFB）</div><div>4.Volume-/PREV</div><div>5.Power switch</div><div>6.LED indicator</div></div><div></div><div>2</div></div>	<div><div>Bluetooth headphone turn ON/OFF</div><div>1. Turn on: Hold down the power switch button  for 3 seconds.</div><div>2. Turn off: Hold down the power switch button  for 3 seconds.</div><div><div>Bluetooth connection</div><div>Follow the steps (Please make sure that your phone is built-in Bluetooth function)</div><div>1. Hold down the power switch button  for 3 seconds, the LED indicator flashes alternately with blue and red, the headphone enter the pairing status.</div><div>(Note: The headphone can automatically enter pairing status after power on if there is no reconnection. As the headphone can automatically reconnect with the last device that you had paired. To re-connect, you just need to turn it on.)</div><div>2. Activate the Bluetooth function and search for “KM42967286” referring to your phone instructions.</div><div>3. Manually click “KM42967286” to connect. If the LED flashes blue slowly, the connection is successful.</div></div><div><div>Answering incoming calls</div><div>Press the Multi-function button  once to answer incoming calls.</div><div>Tip: Since some mobile phones default to answer calls via their own receiver, please refer to the instructions of your phone and set on your phone.</div></div><div><div>End the current call</div><div>Press the Multi-function button  once to end the current call.</div></div><div><div>Reject incoming calls</div><div>Press the Multi-function button  for 1 second when there comes a call.</div></div><div><div>Last number redial</div><div>Double press the Multi-function button  to redial the last calling number.</div></div><div><div>Music playing</div><div>1.Play/Pause: Short press the Multi-function button  ;</div><div>2.PREV: Short press  to select the previous song;</div><div>3.NEXT: Short press  to select the next song;</div><div>4.VOL+: Long press  to increase volume;</div><div>5. VOL-: Long press  to decrease volume.</div></div><div><div>Mode switching</div><div>Short press the mode button FM/MP3 to select mode. (Bluetooth/Micro SD card/AUX in/FM)</div></div></div>
<div><div>Micro SD card mode</div><div>Insert a Micro SD card, the headphones will automatically recognize and play MP3 music automatically.</div><div></div><div>Micro SD card</div><div><div>Wired mode: Dual 3.5mm Audio Cable connecting To Audio Jack</div><div>1. Plug and play: Connecting the headphone to a music player with the provided dual 3.5mm audio cable, the headphone can be used as wired headphone without starting.</div><div>2. In this mode, you can't use any function of the headphone, including pause playback, volume adjustment, microphone and so on.</div></div><div><div>FM mode</div><div>1. Short press the mode button FM/MP3 to select FM mode, then press the Multi-function button  once to scan and memorize the FM radio stations.</div><div>2. Short press  and  to select the desired channels. Press and hold  or  button to adjust the volume.</div></div><div>4</div></div>	<div><div>To charge the headphone</div><div>1. As product is built-in non-removable and rechargeable battery, please use the provided micro USB cable to charge.</div><div>2. Fully charge the product before the first use. It takes 2 hours to charge for the subsequent use.</div><div>3. The LED indicator turns red when charging, and the LED indicator turns off when the battery is fully charged.</div><div><div>Notes</div><div><div>• Please choose the charger that is certified by the regular manufacturer.</div><div>• The battery performance may decrease as repeating charging and using the product. It's a normal phenomenon for all rechargeable batteries.</div></div><div><div>Specification</div><div>Bluetooth Version: V5.0</div><div>Battery: 400mAh</div><div>Playing time: Up to 8H</div><div>Talk time: Up to 8H</div><div>Charging time: 2H</div><div>Standby time: 300H</div></div><div><div>Warnings 1:</div><div><div>• Please follow the instruction to operate.</div><div>• Please charge the headphone with input power below 5V/1A, in order to protect the battery.</div><div>• Please store or use the headphone in a normal temperature environment.</div><div>• Please keep the headphone from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments. As it is not anti-high temperature.</div><div>• Don't jam the ports of the headphone, such as charger port, LED port and microphone etc.</div><div>• In order to protect your hearing and extend the headphone service life, it is not recommended to adjust the volume to the maximum level for a long time.</div><div>• Whatever reasons damage the headphone, please feel free to contact our after-sales staff in time rather than repair by yourself.</div></div><div><div>Warning 2:</div><div><div>• Working temperature: 0℃ ~ 45℃ .</div><div>• Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.</div><div>• Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.</div><div>• Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery that can result in an explosion.</div><div>• Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.</div><div>• A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.</div></div></div><div>5</div></div></div></div>	<div><div>12 Month Warranty</div><div>Thank you for your purchase from Kmart.</div><div>Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.</div><div>Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.</div><div>Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.</div><div>Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.</div><div>For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.</div><div>6</div></div>	

材质：128g双铜纸过哑胶双面印刷

风琴折