

WOODEN CLIMBING FRAME INSTRUCTIONS

Keycode: 43018192

WARNING! Requires adult assembly only. Use only under adult supervision.

Not suitable for children under 3 years. Only for one child use.

WARNING! Not for commercial use. Do not repeatedly assemble and disassemble the climbing frame. Do not jump on this product.

Contains functional sharp point. Make sure all screws, nuts and bolts are firmly tightened before using the product. Only use on flat ground. Do not expose to the sun. For indoor use only.

Not for children with a body mass of more than 30kg / 66.1lb.

Remove the wooden climbing frame and related pieces from the box. Set all the parts out and read the assembly instructions prior to use. Keep the packaging until assembly is complete.


CONTENTS:

The product consists of below components, please assemble each part step by step.



- A. 2pcs Wooden panel
- B. 12pcs Wooden support pole
- C. 24pcs 6x38 Screws
- D. 2pcs Fixing bolts
- E. 4pcs Rubber label

Assembly Instructions

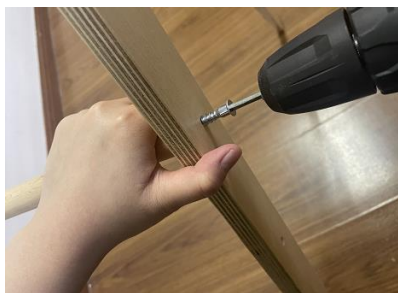

Put one end of the wooden pole to the hole on panel then take the screws and pass them through the hole, using the tool (screwdriver or cordless drill) to tighten.

Note: Please do not tighten firmly before all wooden poles are assembled.

Fix one end of all 12pcs wooden poles to one panel, tighten half firstly, then fix another end of poles to other panel.

Make sure each wooden pole is put correctly into the hole on panel and then tighten all wooden poles firmly.

LOCKING HOLE

After assembling all wooden poles, use the bolt through the different locking hole on top of panel to fix the climbing frame.



Open



Folded

ANTI SLIP

In order to ensure the climbing frame is stable and non-slip, please stick the rubber stickers to the bottom of the panels.



Storage & Care Instructions

- Check and tighten all parts regularly.
- Keep away from water and direct sunlight.
- For indoor and domestic use.

MADE IN CHINA

FOR AU / NZ: IMPORTED FOR KMART STORES IN AUSTRALIA AND NEW ZEALAND.