










Assembly Instructions










43028580 LAUNDRY HAMPER CABINET

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
CARE INSTRUCTION: WIPE CLEAN WITH A SOFT DRY OR DAMP CLOTH. KEEP AWAY FROM WATER AND DIRECT SUNLIGHT. FOR INDOOR AND DOMESTIC USE. CHECK AND TIGHTEN ALL PARTS REGULARLY.


WARNING: THIS PRODUCT MUST BE ATTACHED TO THE WALL TO HELP PREVENT TIPPING OVER. DO NOT STAND OR SIT ON THE UNIT. DO NOT LEAN ON THE PRODUCT. DO NOT DRAG THE PRODUCT. USE ONLY ON A FLAT SURFACE. DO NOT USE UNTIL ALL SCREWS, BOLTS AND KNOBS ARE FIRMLY SECURED. THIS PRODUCT CONTAINS SMALL PARTS AND SHARP POINTS, KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY. MAXIMUM TOTAL LOADING WEIGHT: 30KG (10KG FOR THE TOP PANEL AND EACH HAMPER)

Hardware list

	a	6X35mm	22PCS
	b	15X10mm	22PCS
	c	6X30mm	18PCS
	d	4X35mm	24PCS
	e		4PCS
	f	3X10mm	26PCS
	g		4PCS
	h		2PCS
	i		2PCS


	j		2PCS
	k	4X12mm	2PCS
	l	3X12mm	4PCS
	m	4X10mm	2PCS
	n		2PCS
	o		2PCS
	p	4X30mm	4PCS
	q		4PCS
	Tool required Philips Head Screw Driver (Not Provided)		

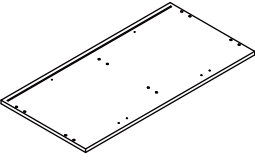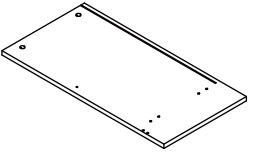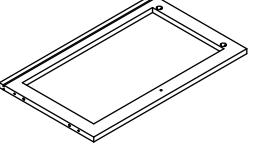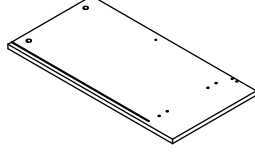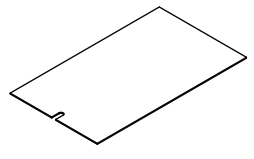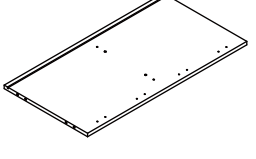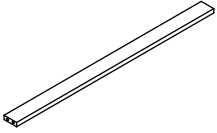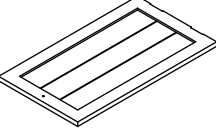					
A	1 PC	B	1 PC	C	1 PC
					
D	1 PC	E	2 PCS	F	1 PC
					
G	1 PC	H	2 PCS	I	2 PCS
					
J	2 PCS	K	2 PCS	L	2 PCS
					
M	2 PCS	N	2 PCS	O	2 PCS

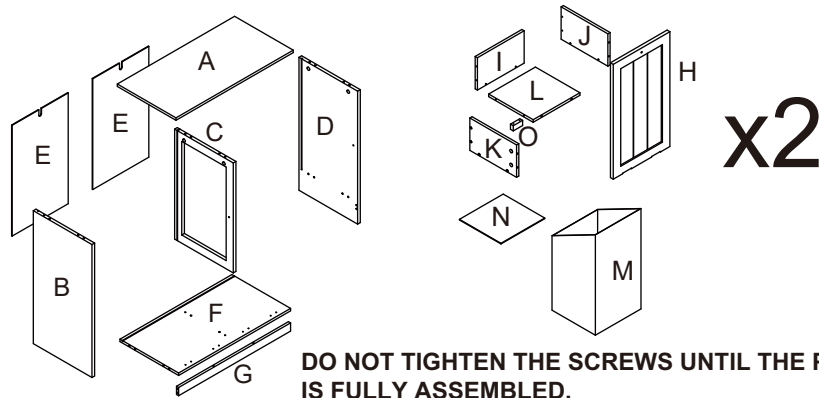 


DO NOT TIGHTEN THE SCREWS UNTIL THE PRODUCT IS FULLY ASSEMBLED.

 
STEP 1

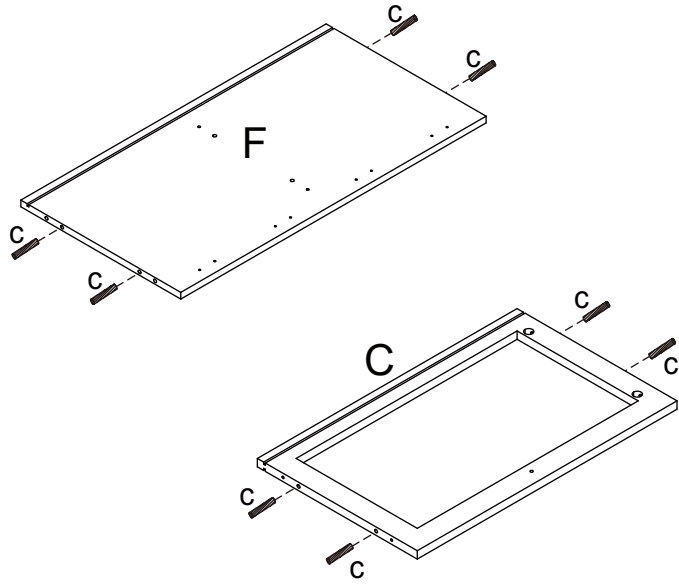


 c X 8

 STEP 2

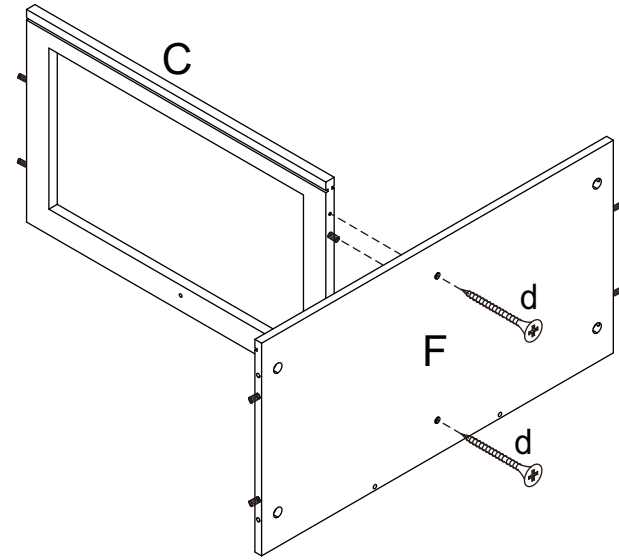



 d X 2

 STEP 3

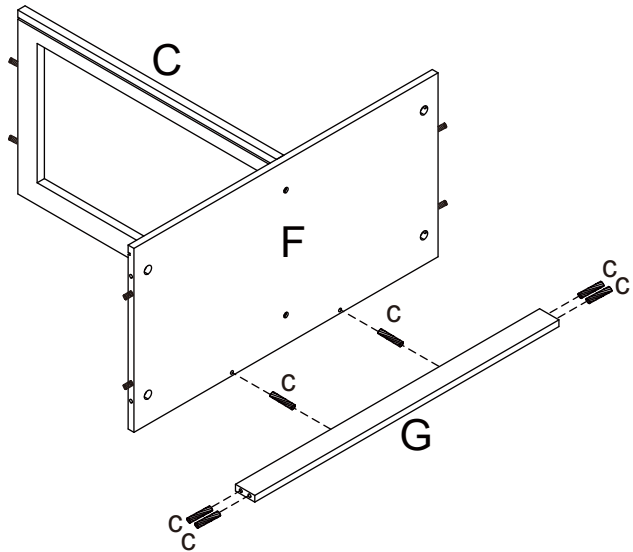


 c X 6

  STEP 4

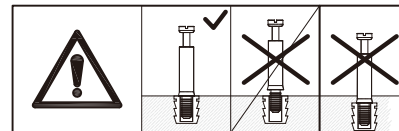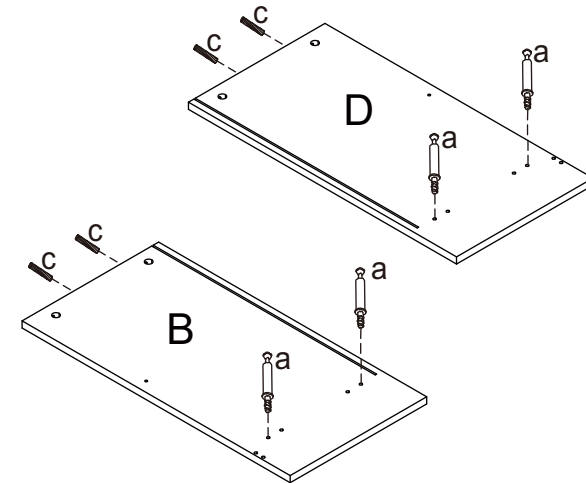


 a X 4  c X 4

 
STEP 5

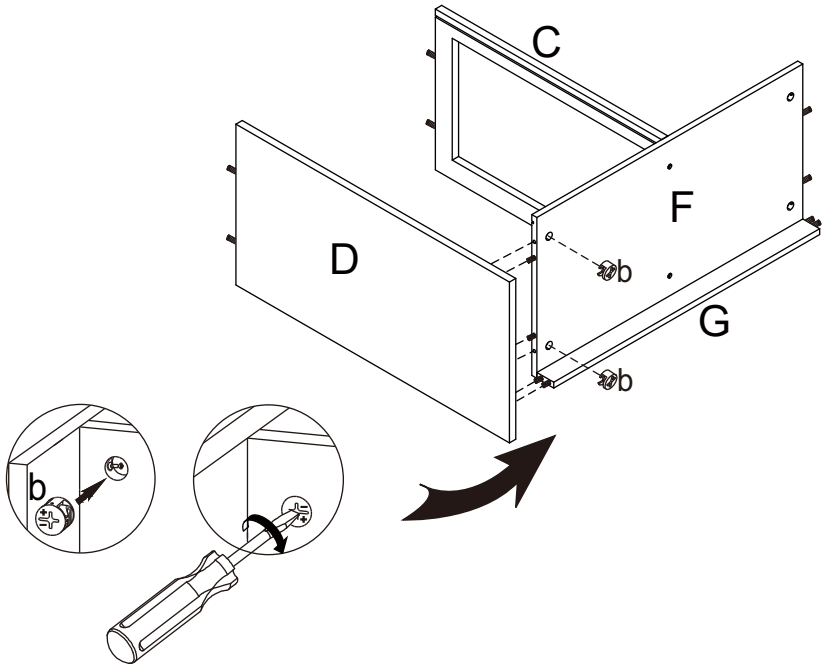


 b X 2

 STEP 6


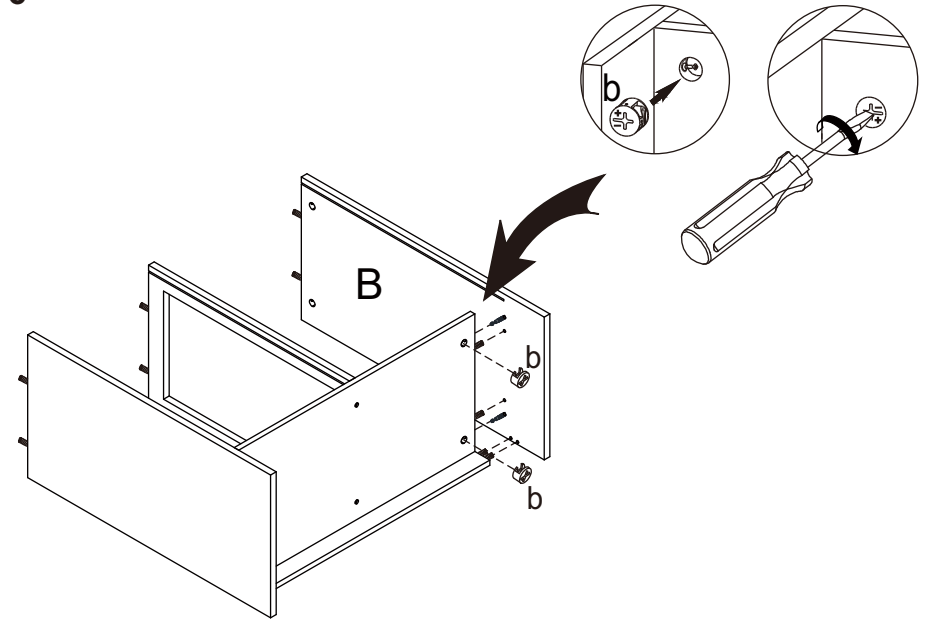


 b X 2

   STEP 7

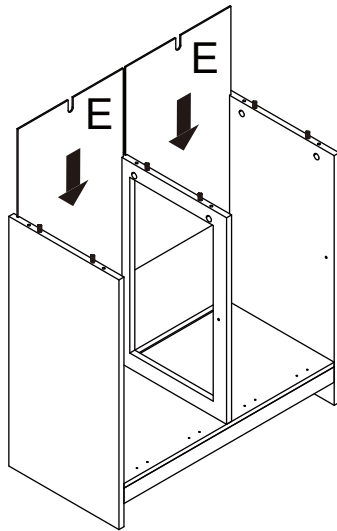


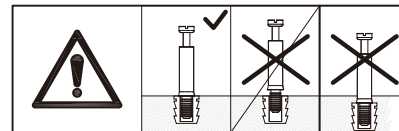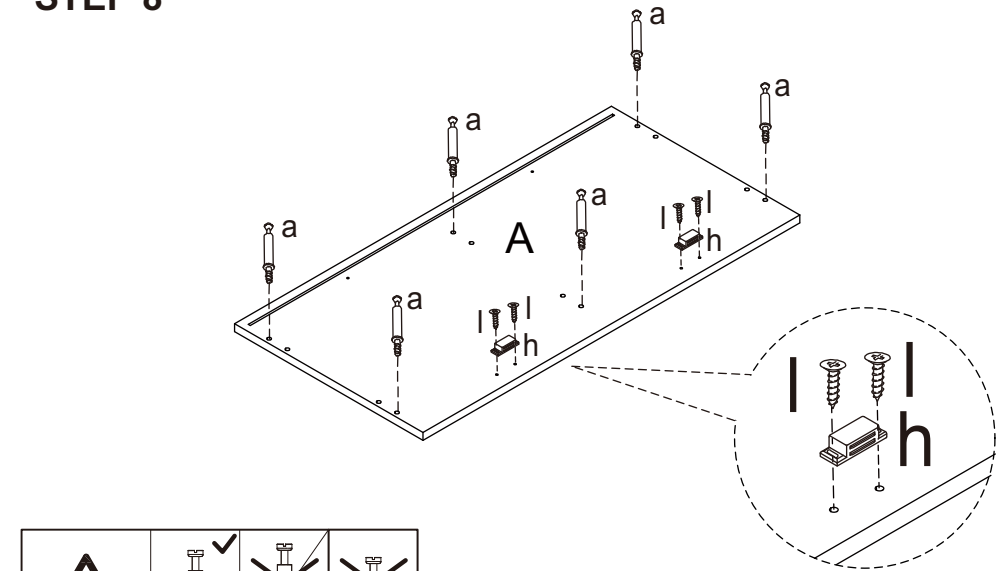

STEP 8



 
 a X 6  h X 2  l X 4

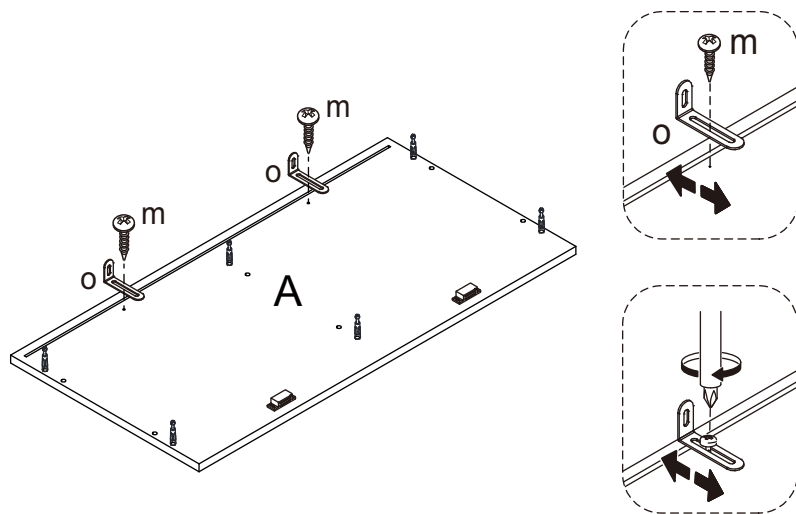STEP 9



 m X 2  o X 2

 STEP 10

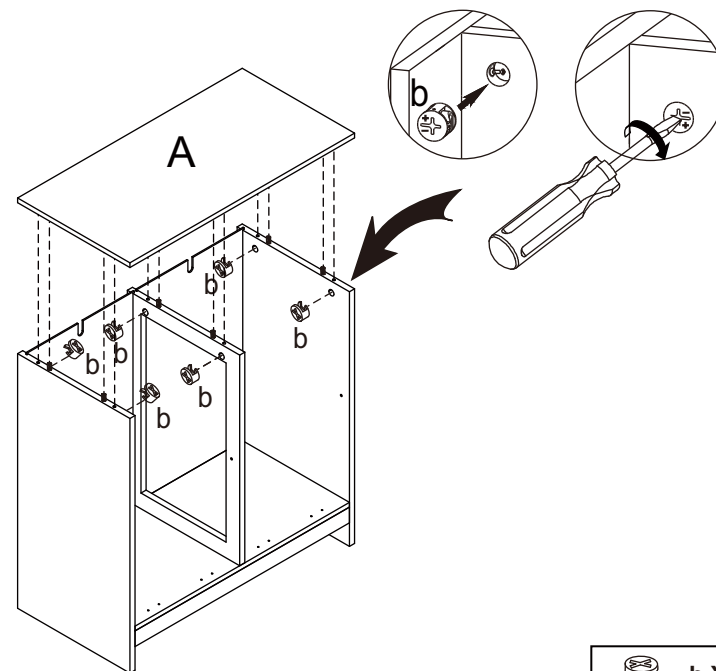

 b X 6

STEP 11

 
 


WALL FIXINGS INCLUDED



TOPPLING HAZARD


WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.

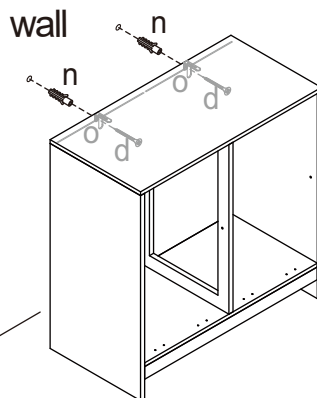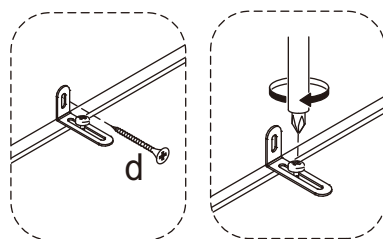

 d X 2  n X 2

STEP 12

 x2

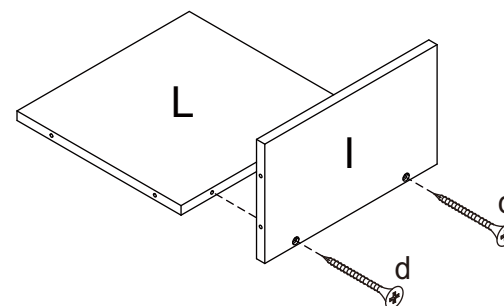

 d X 4

Warning:

 
- This product must be permanently fixed to the wall to help prevent tipping.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors.
- Do not place unanchored televisions on furniture.

Caution: for your safety when attaching the anchor fixings, please note the following:

- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).

STEP 13


x2

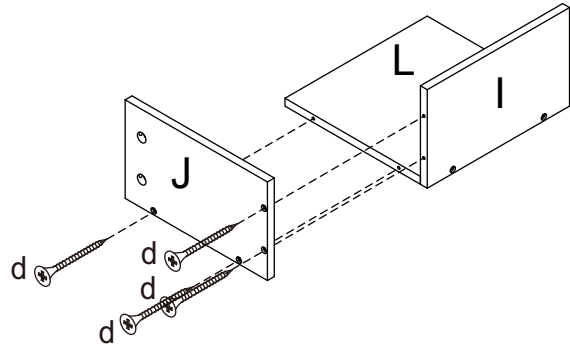

d X 8

STEP 14


 
x2

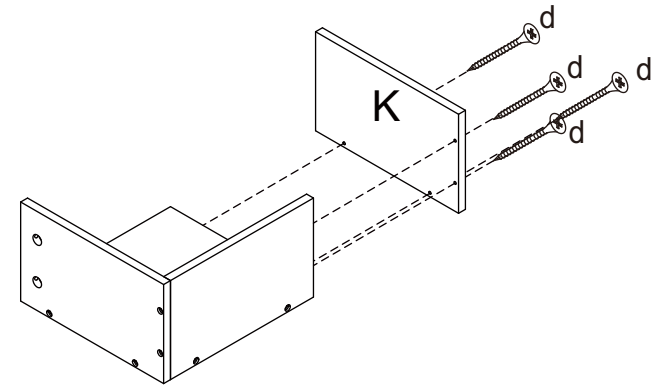

d X 8

STEP 15

  
x2

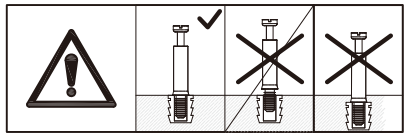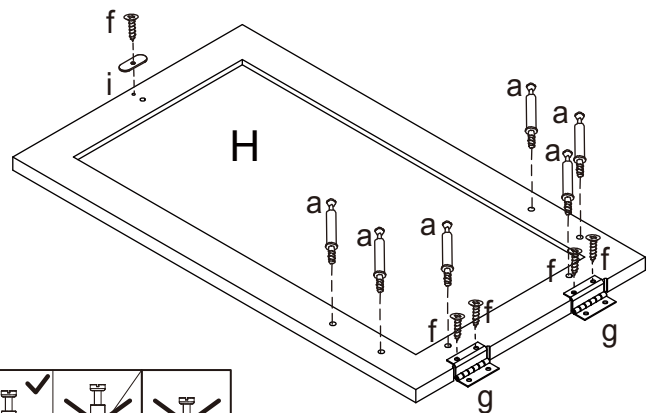

a X 12 f X 10 g X 4 i X 2

STEP 16

 
x2

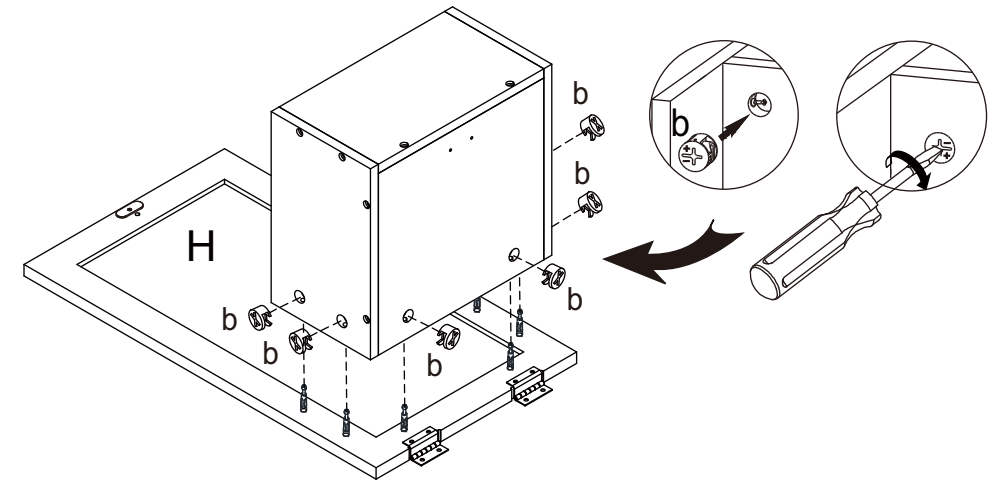

b X 12

STEP 17

 
x2

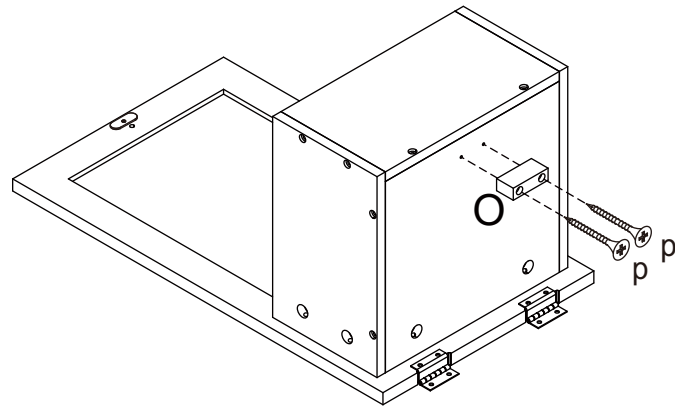

 p X 4


STEP 18

 x2

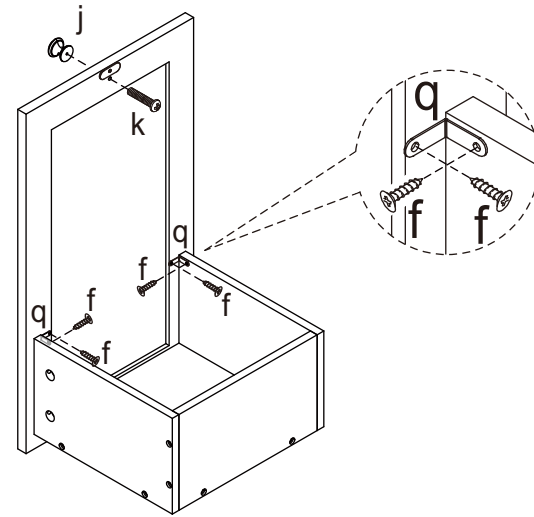



 f X 8  j X 2  k X 2  q X 4

 STEP 19

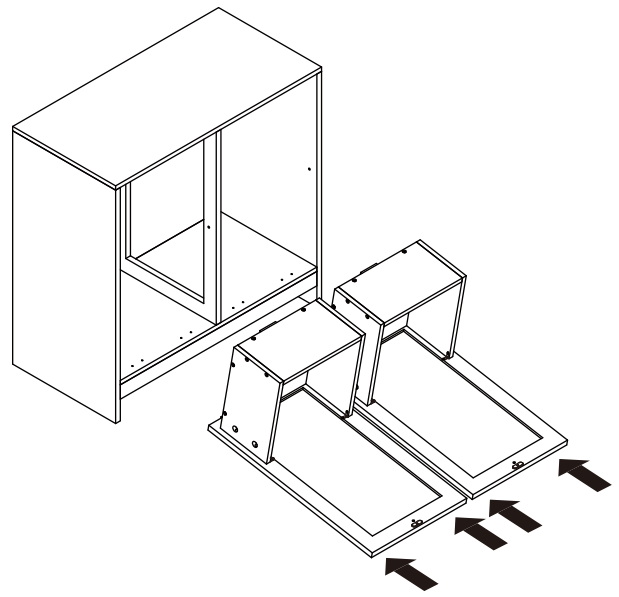


 
STEP 20

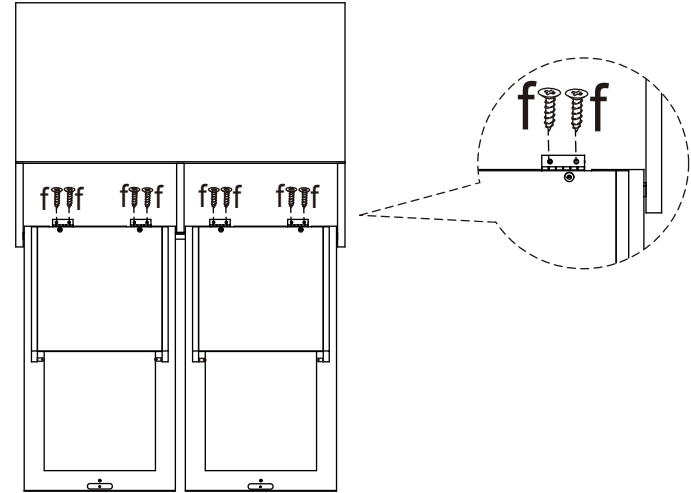


 f X 8

 STEP 21

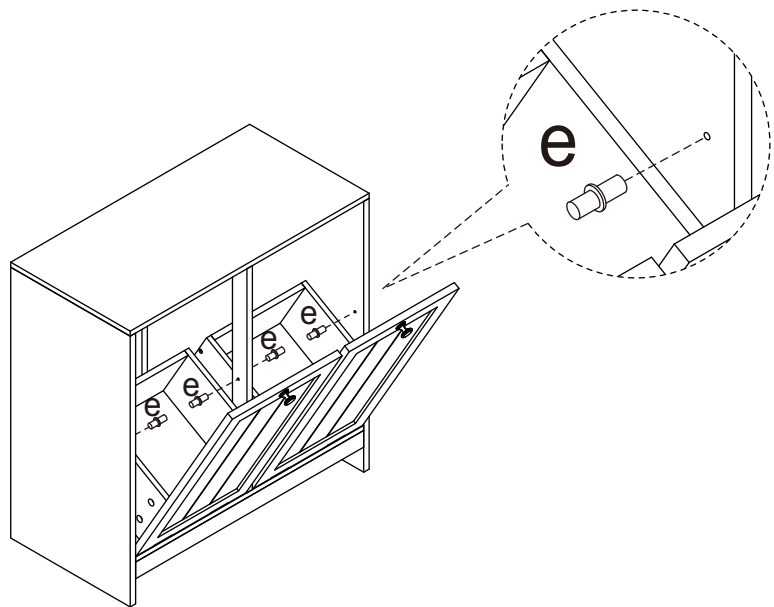


 e X 4

 STEP 22

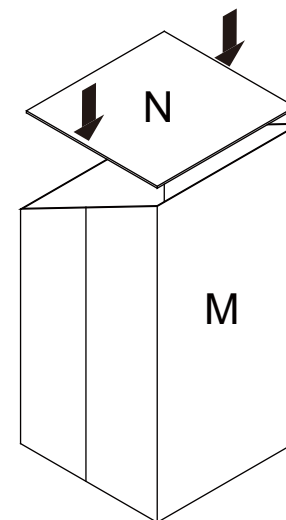

 STEP 23

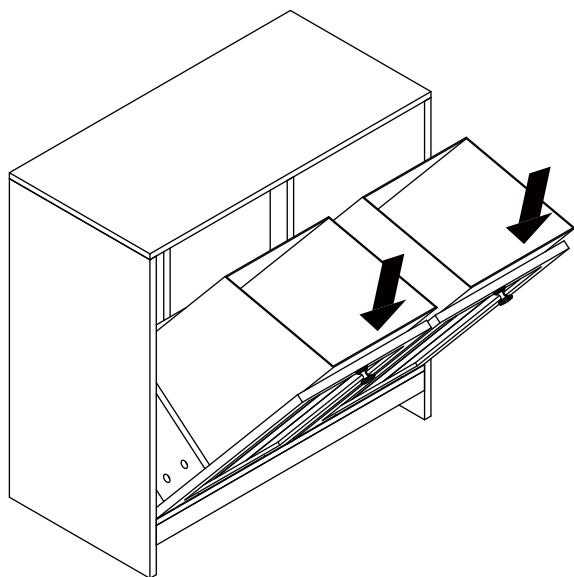

STEP 24

