

Assembly Instructions GAMING DESK


 





PLEASE READ THE INSTRUCTIONS CAREFULLY. BE SURE YOU HAVE ALL PARTS BEFORE YOU START ASSEMBLING. PLACE ALL GAMING DESK PARTS ON A CLEAN AND FLAT SURFACE, SUCH AS CARPET OR RUG TO PREVENT FROM BEING SCRATCHED.

WARNING:





 

THIS PACKAGE CONTAINS SMALL PARTS AND SHARP POINTS, KEEP AWAY FROM CHILDREN AND BABIES UNTIL ASSEMBLY IS COMPLETED. ADULT ASSEMBLY REQUIRED. DO NOT SIT OR STAND ON DESK. AVOID SCRATCHING THE SURFACE. DO NOT KNOCK OR DRAG THE PRODUCT. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY. WHEN CLEANING THE SURFACE USE A DAMP CLOTH OR DRY CLEAN CLOTH. DO NOT USE DETERGENT OR CHEMICAL CLEANERS. AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT. MAXIMUM SAFE LOAD: 40KGS.

A MILD ODOUR MAY BE PRESENT WHEN FIRST OPENING THIS CARTON. SIMPLY ALLOW TO AIR OUTSIDE AND THIS WILL DISSIPATE.


CHECK YOUR HARDWARE

A		Adjustable Pad	4PCS	E		M6×40mm	2PCS
B		M6×35mm	4PCS	F		Cable clamp	4PCS
C		M6×12mm	4PCS	G		Φ18x6.5x1.5	4PCS
D		M5×12mm	6PCS				


PART LIST

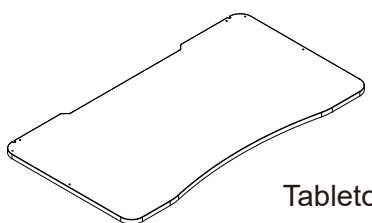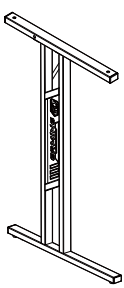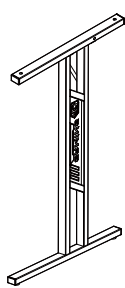①	1PCS	②	1PCS	③	1PCS
	Tabletop		Left leg		Right leg
④	1PCS				
	Cross-bar				
⑤	1PCS	⑥	1PCS		
	Light coverings		Diagonal bars		

 
TOOLS REQUIRED




Step 1

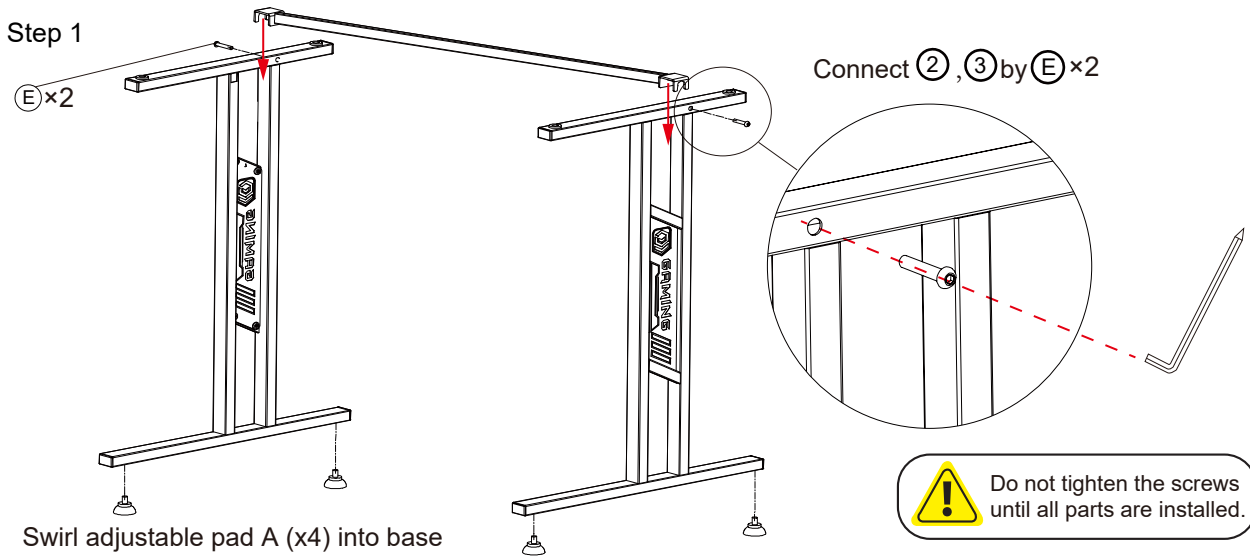

Step 2


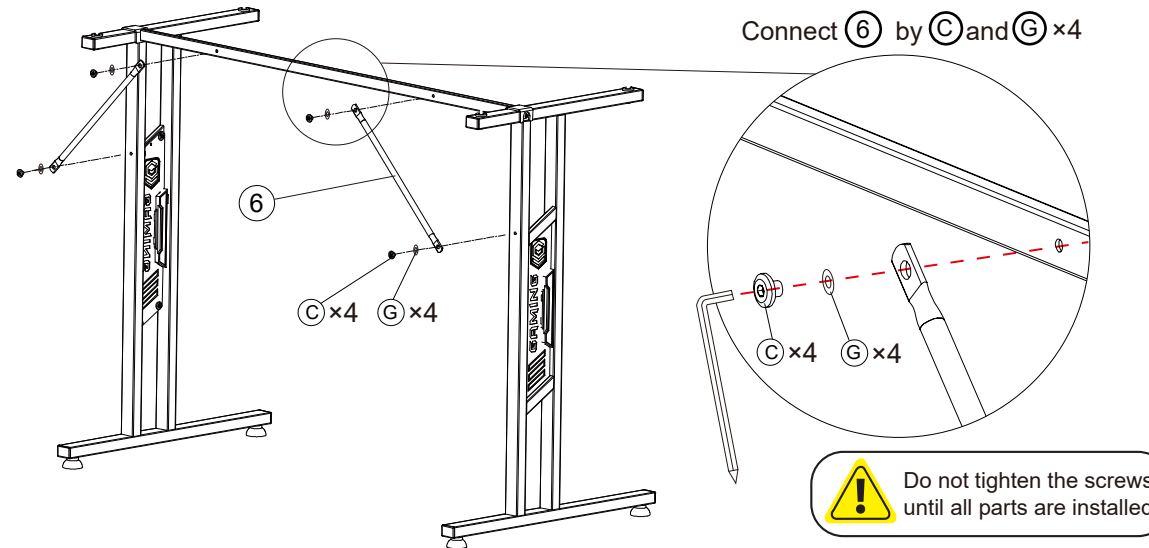


Step 3

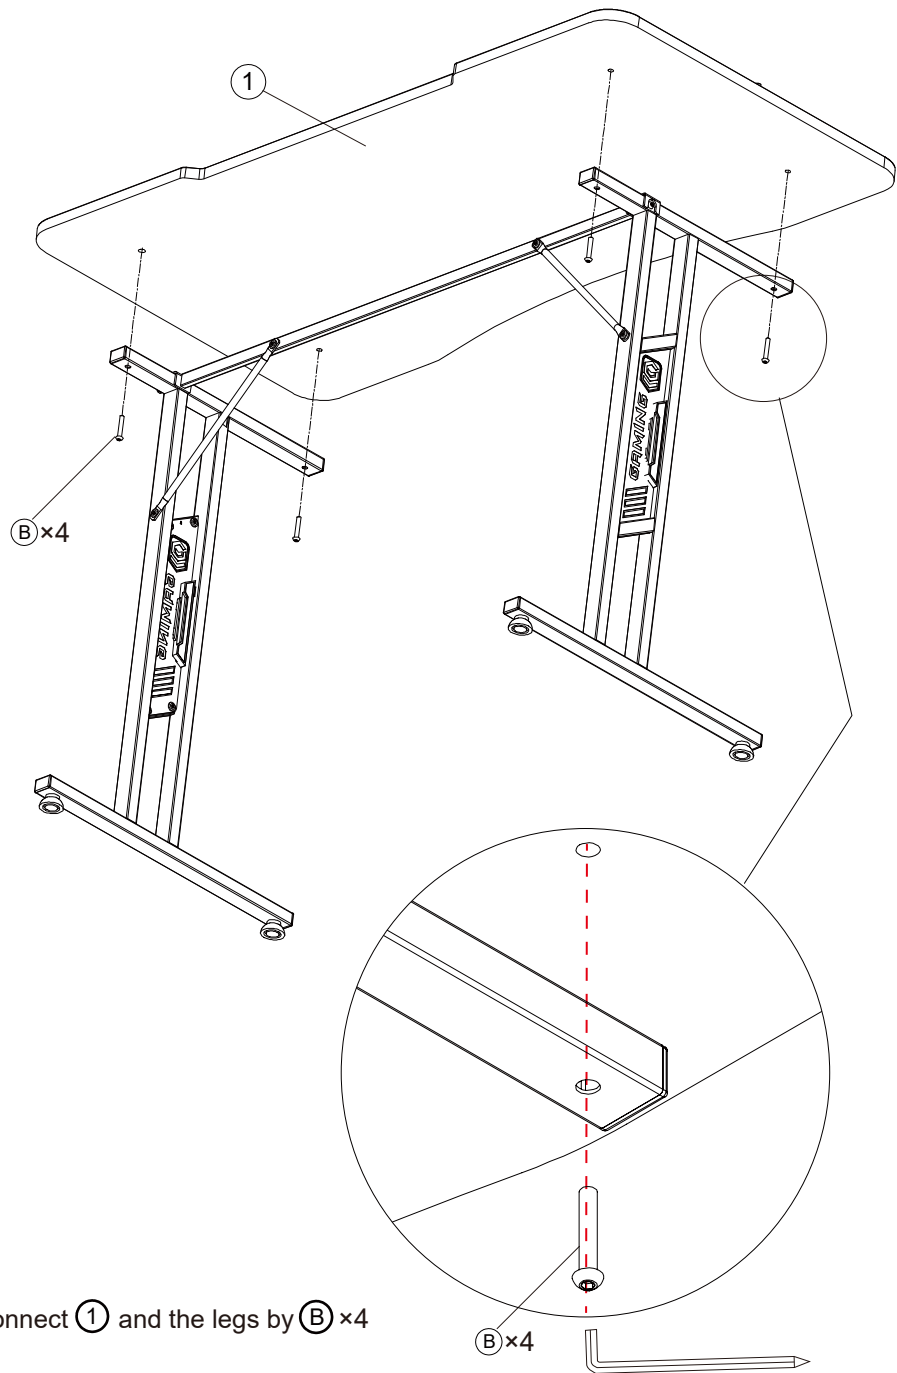


Connect ① and the legs by ② × 4

 Step 4 Connect the wire interfaces, then put the wire interfaces into the legs.

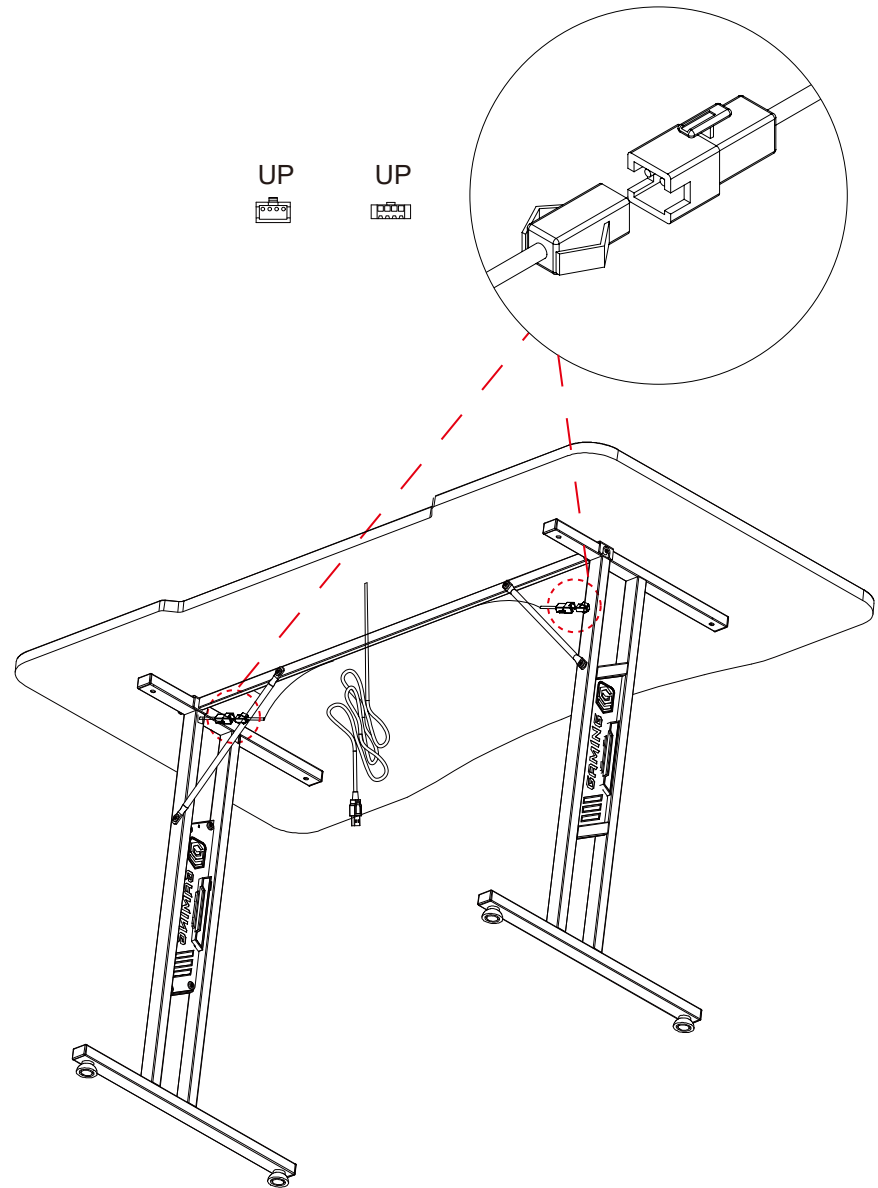

Uncover the back glue of F and stick it under the desktop, F can be used to arrange cables

Step 5

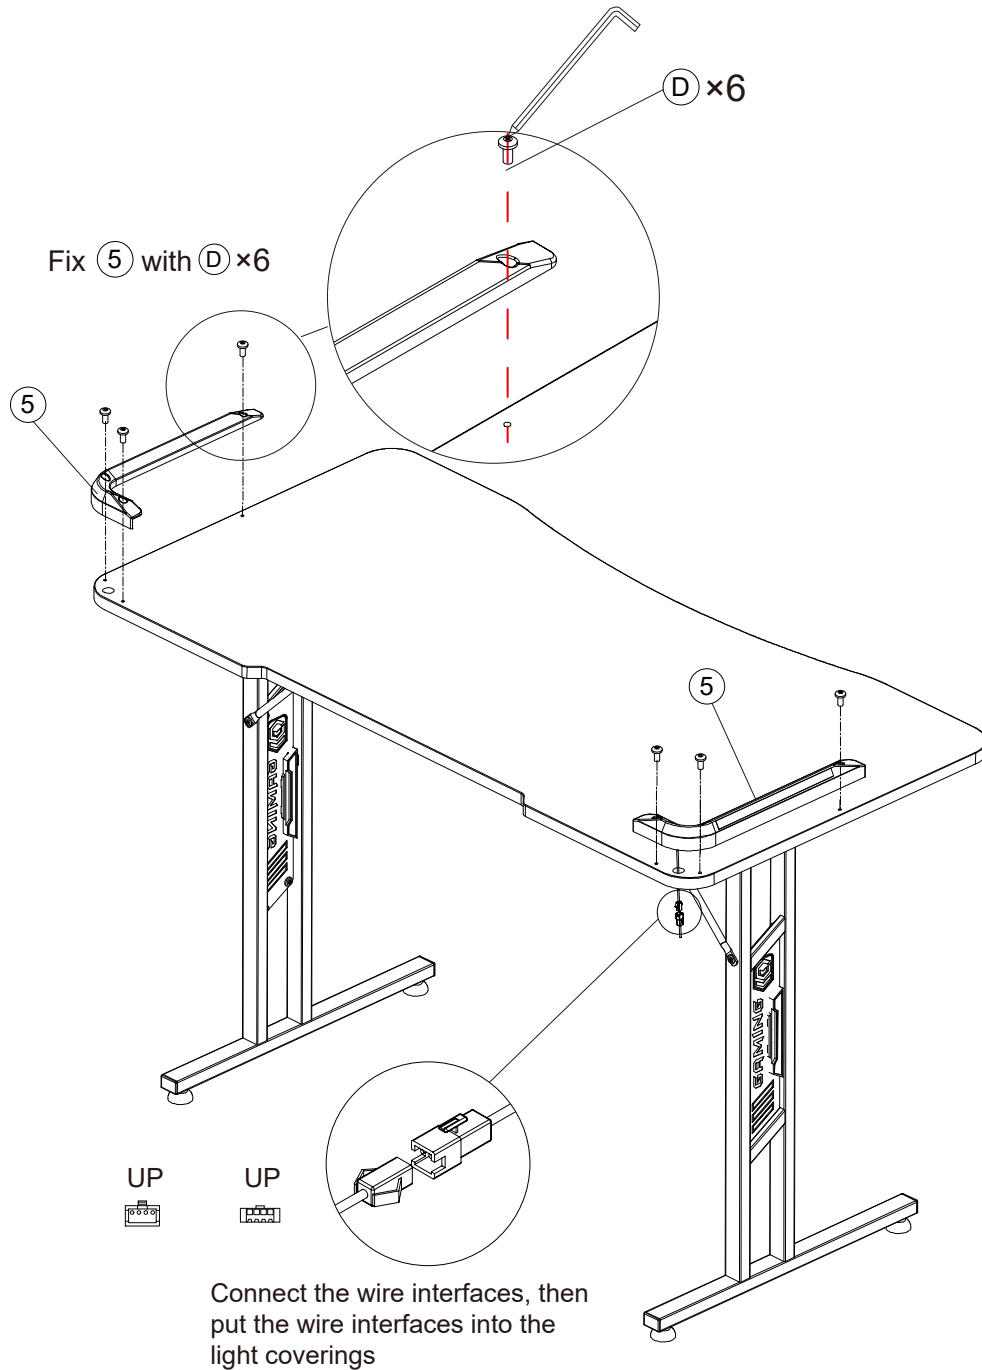

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided.

This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.