

Playpen with Base Instruction Manual

6-24
months

15
kg
MAXIMUM
WEIGHT
OF CHILD



KEYCODE: 43-094-578

MADE IN CHINA

FOR AU / NZ: IMPORTED FOR KMART
STORES IN AUSTRALIA AND NEW ZEALAND.

KMART CUSTOMER SERVICE
AU: 1800 124 125 NZ: 0800 945 995

The illustrations shown in this manual are for reference only. The manufacturer reserves the right to change any specification or feature without further notice.

**IMPORTANT! PLEASE READ CAREFULLY BEFORE USE AND KEEP
FOR FUTURE REFERENCE.**

IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY BEFORE USE AND KEEP FOR FUTURE REFERENCE.

- Your child’s safety may be affected if you do not follow these instructions.
- Use only spare parts delivered by importer for replacing parts.
- Prolonged exposure to sunshine may cause changes in the colour of materials and fabrics.
- Do not expose this product to extreme temperatures.

WARNING

- Never leave your child unattended.
- Adult assembly required.
- The use of this playpen is for children with maximum weight up to 15 kg.
- To prevent injury from falls, the playpen shall no longer be used when the child is able to climb out of the playpen.
- Do not allow any children, animals or other objects to be placed under or near the playpen while child is in the playpen.
- Be aware of the risk of open fire and other sources of strong heat such as electric bar fires, gas fires etc in the vicinity of the playpen.
- **WARNING:** Ensure that the playpen is fully unfolded and all the locking mechanisms are locked before placing child in the playpen.
- Your playpen, including side railings and base must be correctly set up prior to use.
- All assembly fittings should always be tightened properly and checked regularly. Retighten if necessary.



WARNING






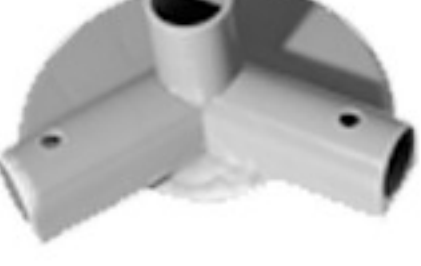


- To avoid injury, ensure your child is kept away when assembling or packing up this playpen.
- Do not let your child play with this product.

- Keep this product away from children when not in use.
- The use of this playpen is recommended for 1 child only.
- Never move playpen while child is in it.
- Only use playpen on a firm and horizontal level.
- Never put playpen near steps, stairs or uneven surfaces.
- **WARNING:** Do not place the playpen near an open fire or another heat source.
- Avoid hot liquids, power cables and other possible dangers that may come within range of a child.
- Do not add padding or any objects inside your playpen which will permit a child to climb out of the playpen.
- Do not place items with a string around child’s neck (pacifier cords, hood strings etc).
- Do not leave anything in the playpen or place the playpen close to another product which could provide a foothold or present a danger of suffocation or strangulation e.g. strings, blind/curtain cords etc.
- **WARNING:** Do not use the playpen without the base.
- To avoid suffocation, do not use additional padding such as a mattress, water mattress, or pillow inside the playpen.
- Do not continue using playpen if parts are broken or if fabric is ripped or torn.
- Replace any damaged parts immediately.
- Do not use accessories or replacement parts other than those recommended by instruction manual.
- Only replacement parts supplied or recommended by the manufacturer / distributor shall be used.

This product conforms to EN12227:2010

Suitable for domestic use only. Both indoors and outdoors.


Parts List

Module	Quantity	Length (mm)	Picture display
653pipe	6	653mm	
598pipe	6	598mm	
627pipe	6	627mm	
Base hub	6		
Corner	6		
Inlay	1		




1. 653 Pipe 2. 598 Pipe 3. 627 Pipe 4. Base hub 5. Corner


1. Place the 598 pipe into the base hub.

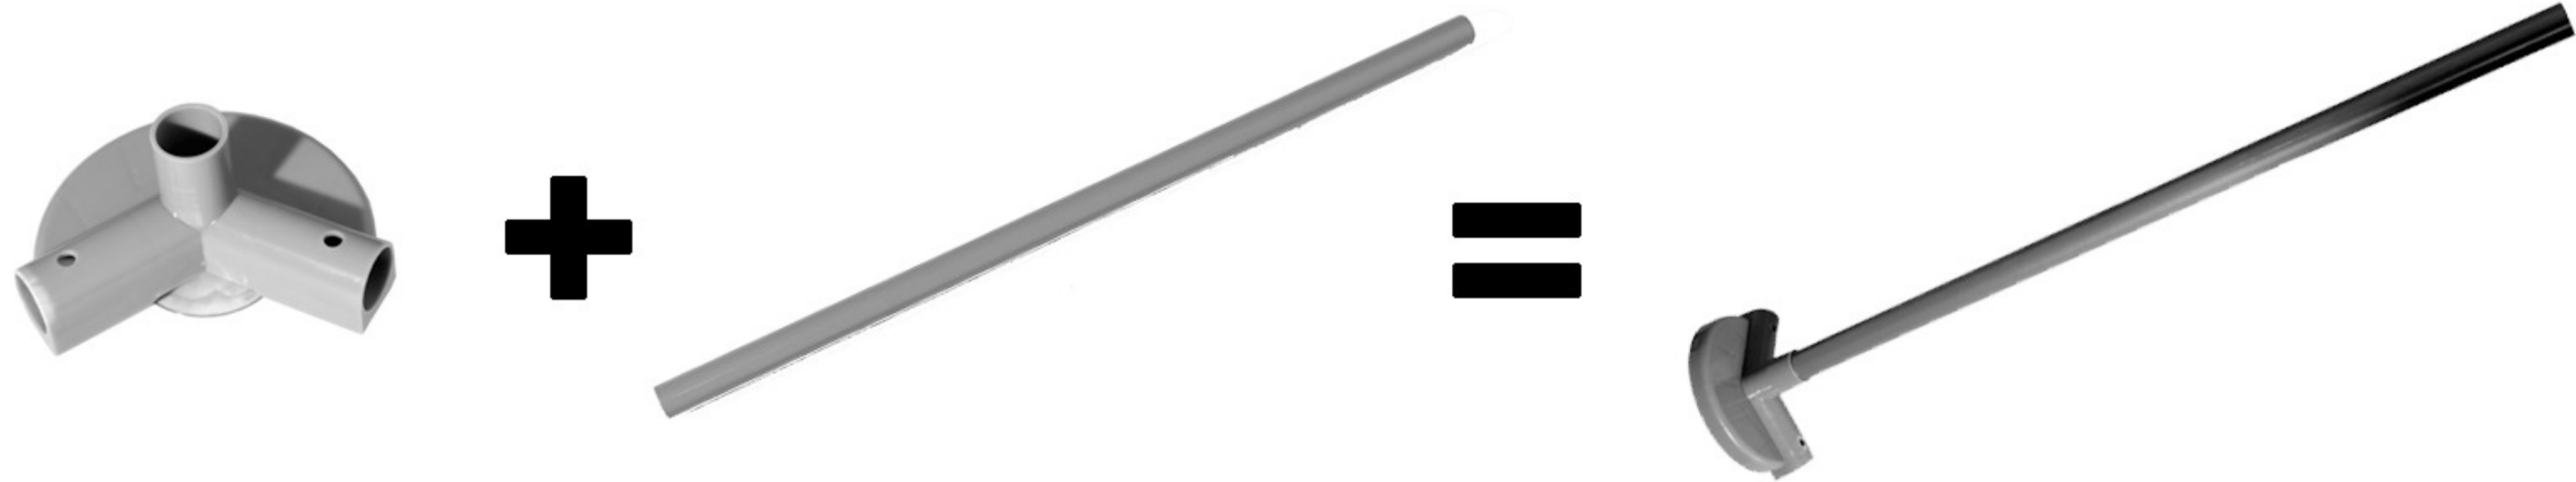


2. Insert the 598 pipe into the fabric cover of the inlay. Repeat for all sides.

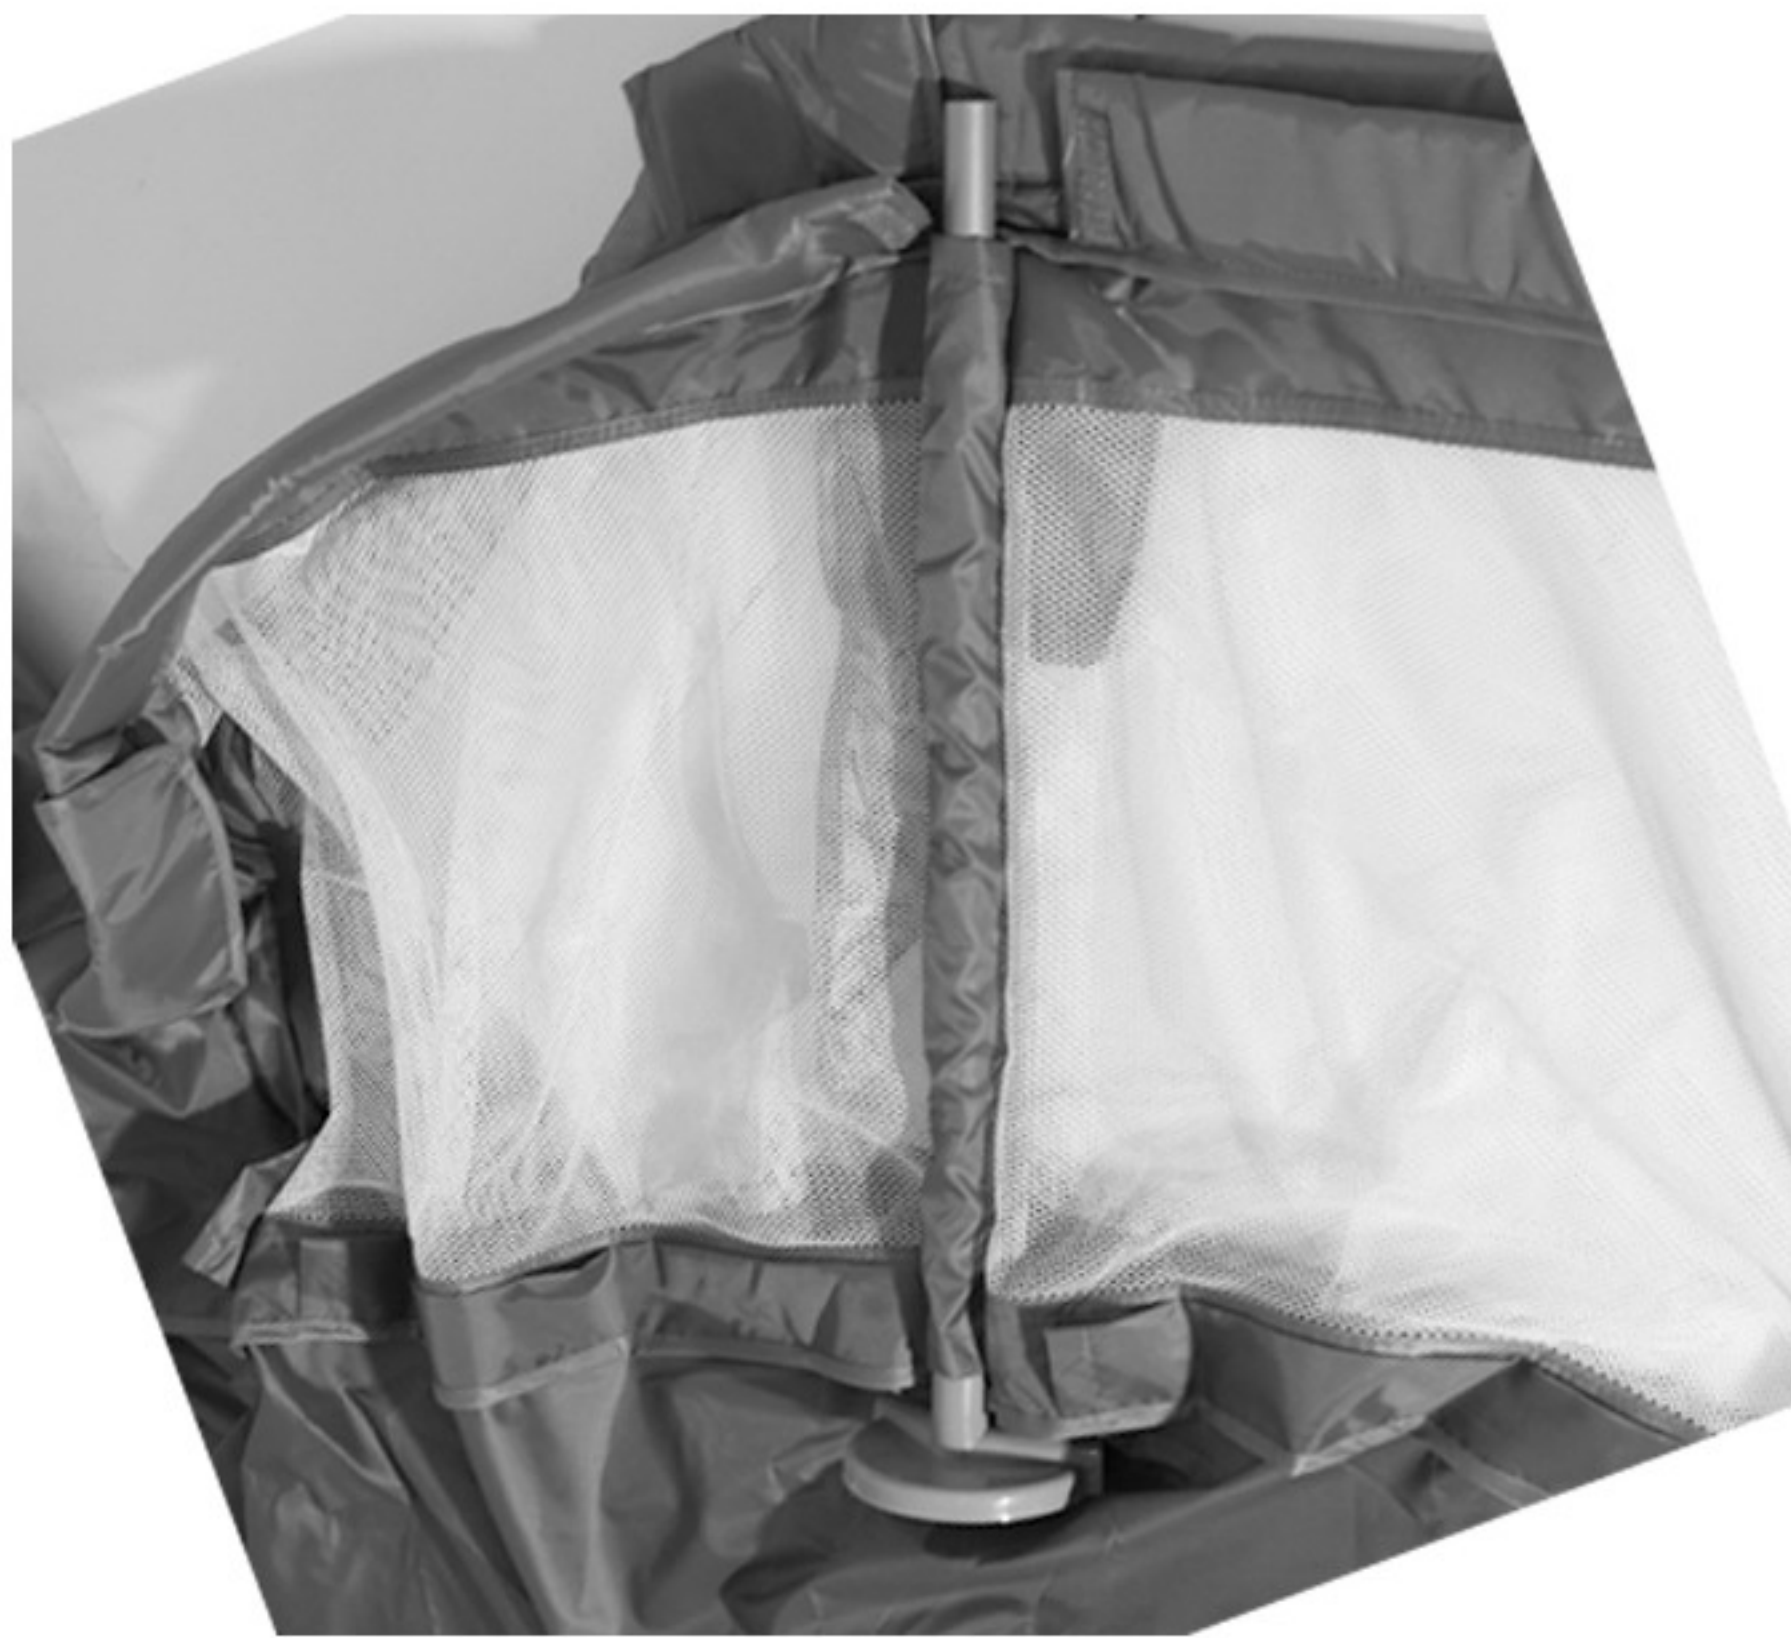

3. Insert the 627 pipe into the fabric cover at base of frame and fix it into the base hub. Ensure the spring button on the tube is visible from the hole of base hub.

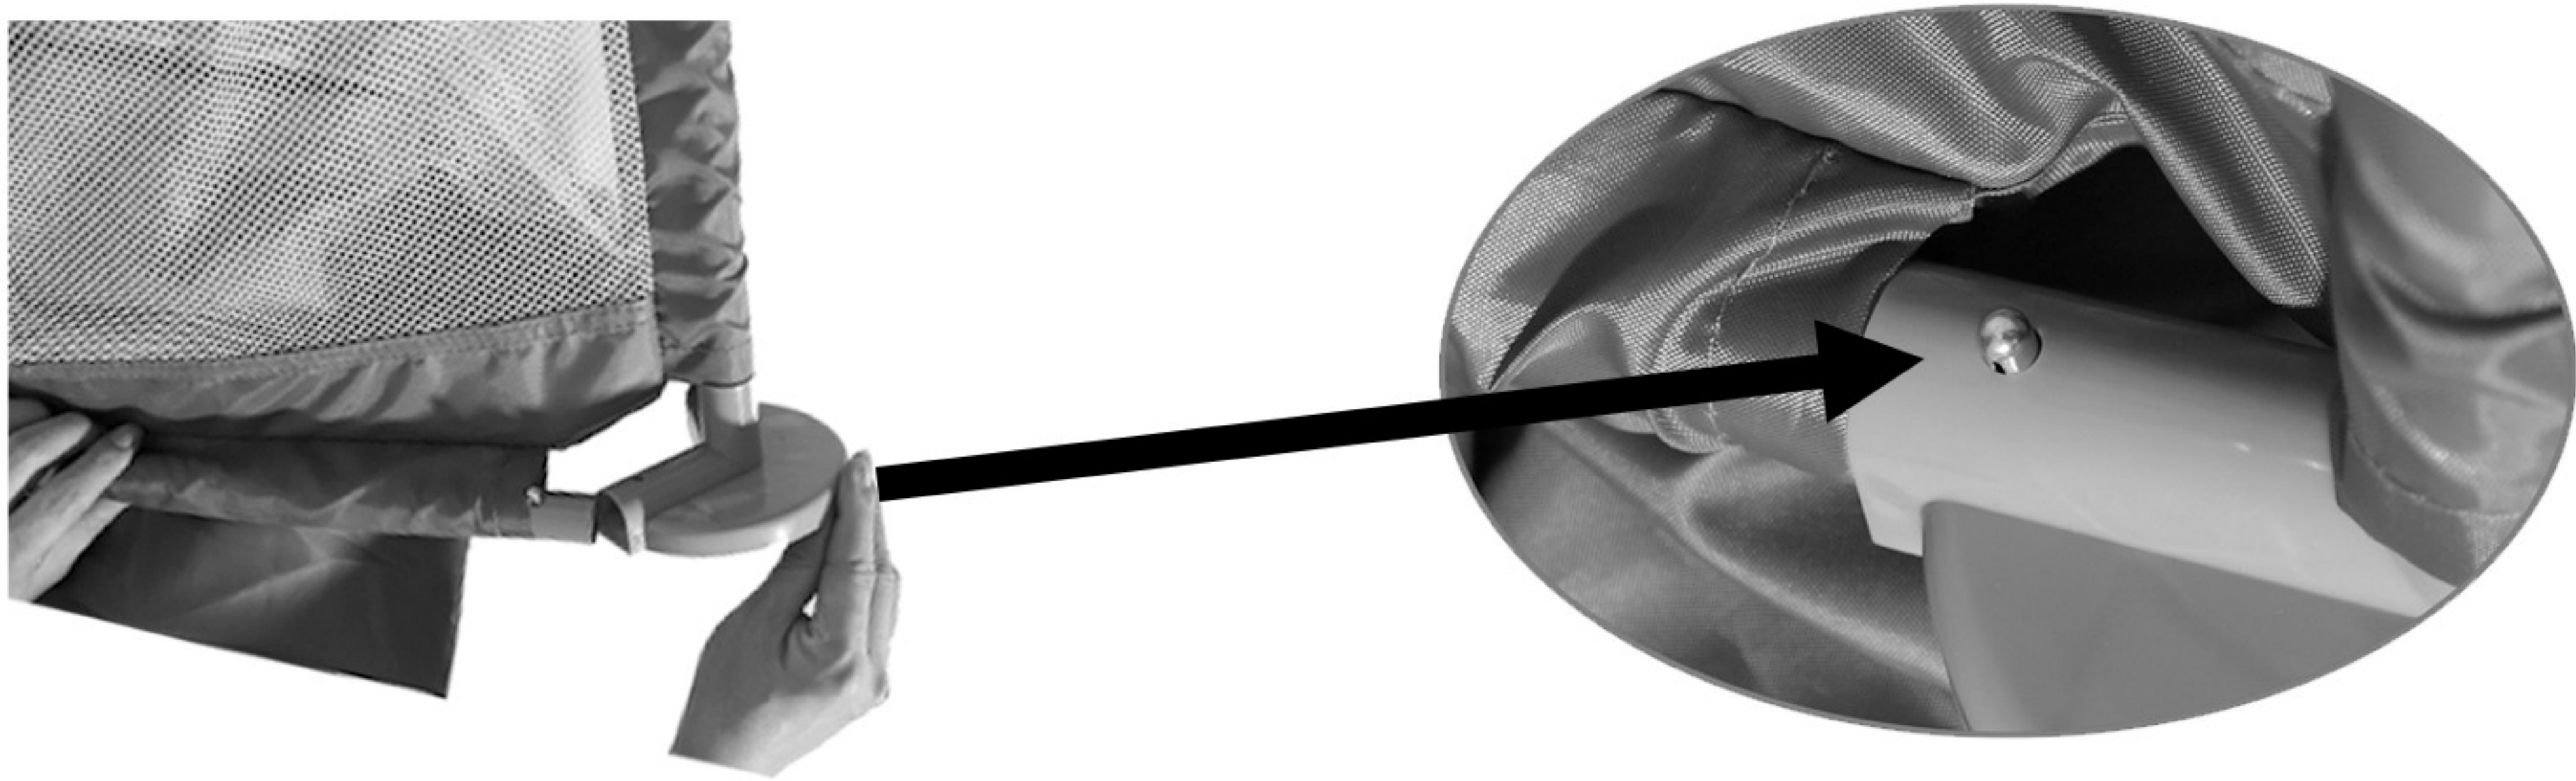

4. Repeat for all sides.

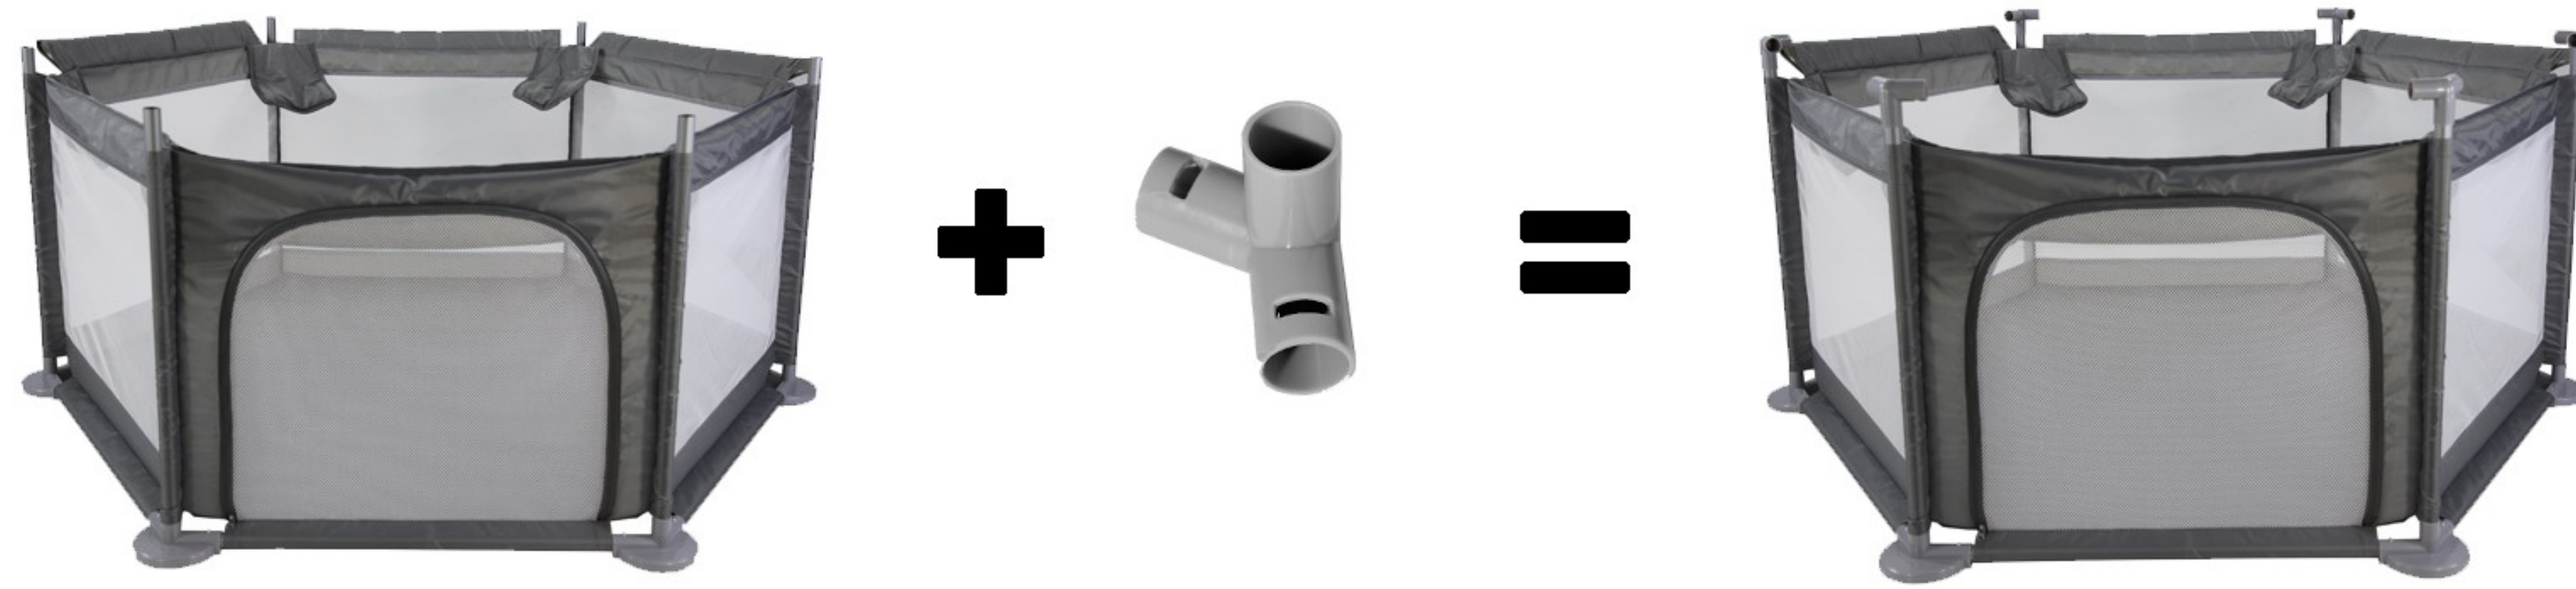

5. Fix the plastic corner onto the top of 598 pipe. Repeat for all sides.


6. Insert the 653 pipe into the fabric cover at top of frame and fix into the plastic corner. Ensure the spring button on the pipe is visible from the hole of plastic corner.

7. Repeat for all sides.



Note: For easier assembling, fix the tube at the zipper side last.

8. Zip up the zipper and fix the zipper head into the metal hook. The product is now fully assembled.

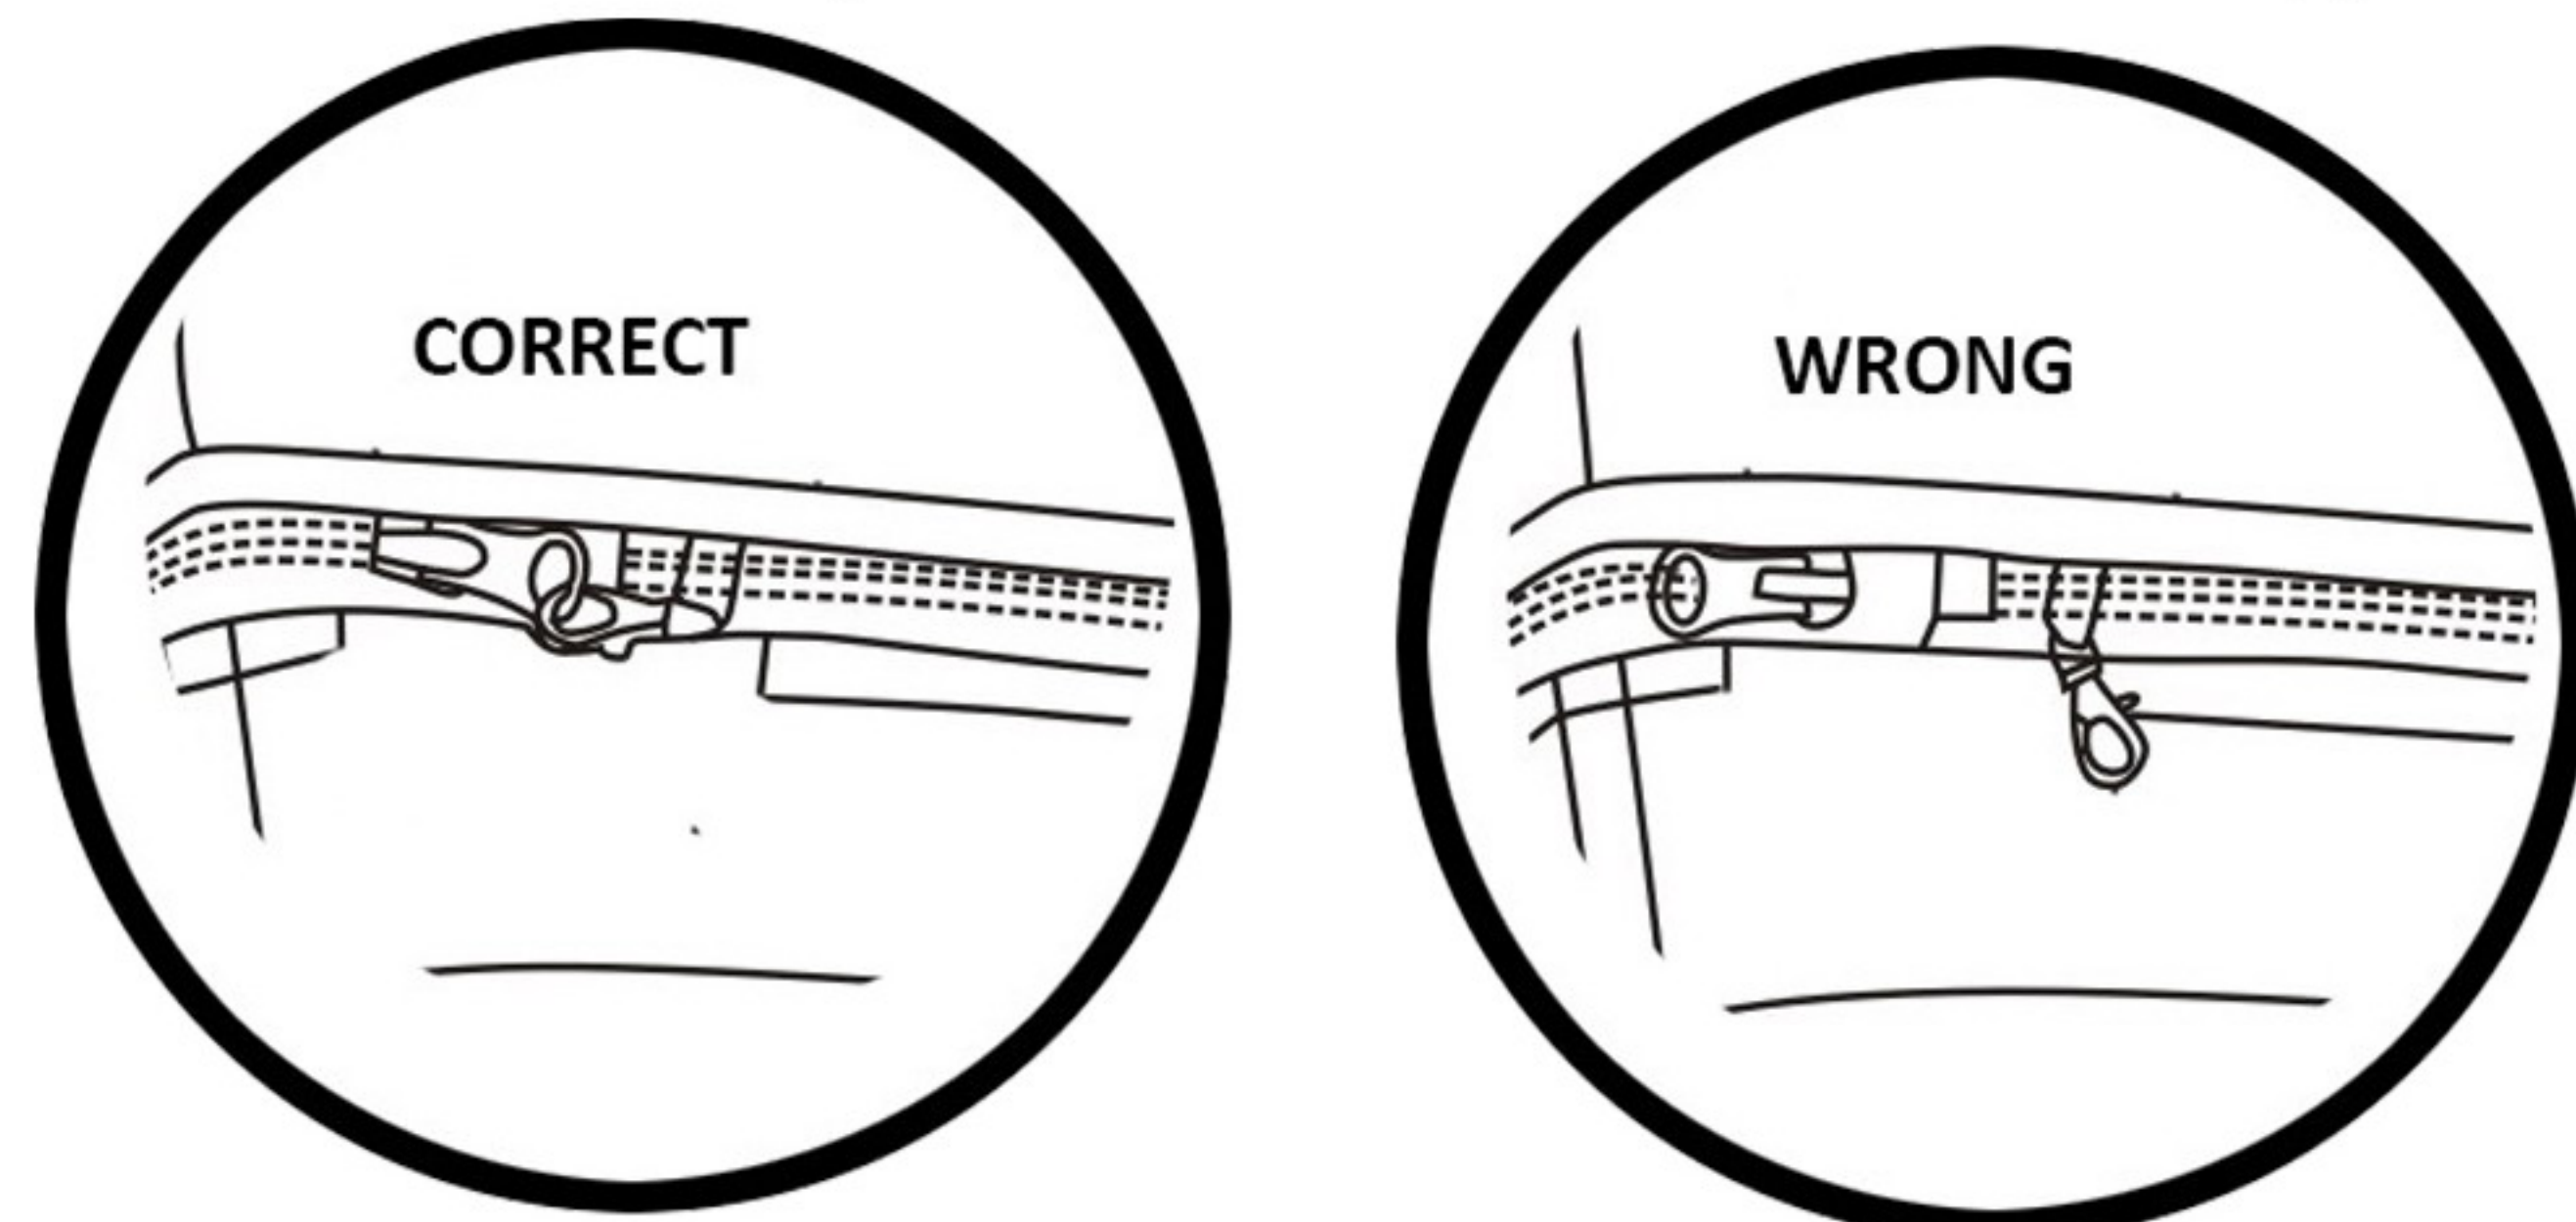

CARE AND MAINTENANCE

To prolong the life of your nursery product, keep it clean and do not leave in direct sunlight for extended periods of time.

Do not use abrasive cleaners.

Removable fabric covers and trims may be cleaned using warm water with a household soap or a mild detergent.

Allow it to dry fully, preferably away from direct sunlight.

Always store your product in a clean dry place.

Do not leave in the boot of car.

Do not allow this product to come into contact with sand or salt water as sand causes corrosion and salt water the formation of rust.

Do not dry clean or use bleach.

Do not machine wash, tumble or spin dry.

Fabric and frame may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding and storing it away.

In some climates, the parts may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet.

Always store the product in a well ventilated area.

Always check parts regularly to ensure assembly has not been compromised.

To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.