


# RC STUNT QUADCOPTER

## MANUAL


*Please read the instructions before operating the product.*




**AGES 8+ YEARS**

**Attention:** The quadcopter includes a built-in rechargeable battery that is non-rechargeable. The included rechargeable battery is not fully charged prior to shipment and must be charged before the first use.

### QUADCOPTER

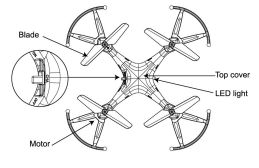

### REMOTE CONTROL

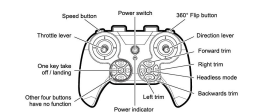


**1**

### BATTERY INSTALLATION

- Unscrew to open battery cover, insert 4 x 1.5V AA batteries. (see Diagram 1)
- Replace battery cover.

**Attention:** Remove batteries after you have finished using your product.




**2**

### LITHIUM BATTERY CHARGE INSTRUCTIONS



**Attention:** Do not charge battery immediately after each play, let the battery cool down.

- Turn off quadcopter.
- Connect USB charging cable plug with quadcopter charging interface, see Diagram 2. (The battery connector will only fit in one way, do not force the connectors together)
- Put the cable into the computer USB interface. The USB indicator will glow when it has started charging.
- Once the indicator lights up, the battery is fully charged. Unplug the USB charging cable from computer USB interface and disconnect with quadcopter.

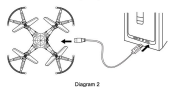






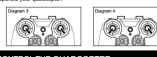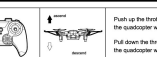


**3**

- The quadcopter's gyroscope needs to be calibrated after pairing. Pull the throttle lever and direction lever to the lower right of the same time (see Diagram 3). You will hear one beep sound and the LED light on quadcopter will change from flashing to steady lighting. This means that the calibration has been successful.
- There are two ways to fly / launch the quadcopter.
  - Normal mode:** Pull the throttle lever to the lower left and the direction lever to the lower right at the same time (see Diagram 4), the quadcopter will unlock while the propeller starts to work.
  - Altitude hold mode:** No need to unlock the quadcopter, press the one key take off / landing button after pairing the quadcopter. The quadcopter will automatically rise to a height of about 1.5 metres. Now you can operate your quadcopter.

### HOW TO CONTROL THE QUADCOPTER

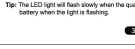
 


		<p>Push up the throttle lever slowly, the quadcopter will ascend.</p> <p>Put down the throttle lever slowly, the quadcopter will descend.</p>
		<p>Move the throttle lever left, the quadcopter will rotate anticlockwise.</p> <p>Move the throttle lever right, the quadcopter will rotate clockwise.</p>
		<p>Push up the direction lever, the quadcopter will fly forward.</p> <p>Put down the direction lever, the quadcopter will fly backwards.</p>
		<p>Move the direction lever left, the quadcopter will fly to the left.</p> <p>Move the direction lever right, the quadcopter will fly to the right.</p>

**Tip:** The LED light will flash slowly when the quadcopter is low in battery. Please recharge the battery when the light is flashing.

**4**

### FLIPPING THE QUADCOPTER

**Tip:** Ensure the quadcopter flying height at least 3 metres from the ground when you perform a 360 degree flip function.

		<ol style="list-style-type: none"> <li>Press the flip button, you will hear a beep sound.</li> <li>To flip to the right, push the direction lever right and then release it. The quadcopter will turn to the right.</li> <li>To flip to the left, push the direction lever left and then release it. The quadcopter will turn to the left.</li> </ol>
		<ol style="list-style-type: none"> <li>Press the flip button, you will hear a beep sound.</li> <li>To flip forward, push up the direction lever and then release it. The quadcopter will turn to the right.</li> <li>To flip backward, push down the direction lever and then release it. The quadcopter will turn to the left.</li> </ol>

### HEADLESS MODE

In headless mode, any side of the quadcopter can be treated as the front of the quadcopter.

**How to transfer from normal mode to headless mode:**

- You can enter headless mode during stable flying or before flying.
- Press the headless mode button, you will hear a beep sound, the LED light on the quadcopter will flash, that means the quadcopter has entered headless mode. You can play with the quadcopter in headless mode now.
- Press the headless mode button again, you will hear a beep sound, the LED light on quadcopter will be lit, the quadcopter will switch back to the normal flying mode.





**5**

### HOW TO CHANGE THE SPEED MODE

- Low speed mode:** This is the default speed mode of the quadcopter.
- Medium speed mode:** Press the speed button, the quadcopter will be in the medium speed mode when you hear two beep sounds.
- High speed mode:** Press the speed button again, the quadcopter will be in the high speed mode when you hear three beep sounds. Press the speed button again, the quadcopter will go back to the low speed mode when you hear a beep sound.

### HOW TO TRIM THE QUADCOPTER

Slowly raise the throttle stick and tilt the quadcopter 180° off the ground, you can use the trim to correct the action if the quadcopter turns to the wrong direction.

- If the quadcopter drifts forward, press the backwards trim button as shown in Diagram 5, to tilt backwards until it stops drifting. If the quadcopter drifts backwards, press the forward trim button as shown in Diagram 6 to tilt it forward until it stops drifting.
- If the quadcopter drifts to left, press the right trim button as shown in Diagram 7 to trim it to right until it stops drifting. If the quadcopter drifts to right, press the left trim button as shown in Diagram 8 to trim it to left until it stops drifting.

### HOW TO LAND THE QUADCOPTER

There are two ways to land the quadcopter.

- Press the one key take off / landing button to land the quadcopter.
- Hold one throttle lever down until the quadcopter lands on the ground.

**6**

### WARNING

- Please follow the instructions to connect and control your drone. Some parts may operate by an adult.
- This product contains small parts and is a flying device.
- Do not touch the eye and ear directly.
- Do not touch working propellers.
- Do not fly towards people or other people.
- Adult supervision is required.
- Non-orthopedic members are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not use the motor batteries or batteries of other types.
- Do not short circuit the battery or put the battery in fire.
- Do not leave the RC quadcopter with charging 1.
- When the battery is low, please return the quadcopter and recharge it.
- Charge the RC quadcopter under indoor and avoid fire, hot surface items.
- Turn the charger off when the RC battery is charged, and always unplug it from the to.
- Do not use the product for a long time. Remove the battery after use.
- Do not use the product for a long time.
- Do not repair or drop the quadcopter or remove covers.
- Do not use the product with damaged parts.
- The user is responsible for ensuring that the product will not cause harm to themselves or others.
- The manufacturer and dealer assume no responsibility for damage or damage to property caused by improper use.
- The packaging and instruction contain important information of products, please keep for future reference.
- Only fly during the day and keep your quadcopter within visual line of sight. This means being able to see the quadcopter with your own eyes (not through a screen) at all times.
- Do not fly your quadcopter higher than 120 metres (400ft) above the ground.
- Keep your quadcopter at least 30 metres away from other people.
- Do not fly your quadcopter over or near an area showing public safety or where emergency operations are underway without prior approval. This could include situations such as a car crash, police operations, a fire and associated firefighting efforts, and search and rescue.
- Only fly over water of a lake.
- Do not fly over or down people. This could include beaches, parks, events, or sport fields where there is a game in progress.
- Do not fly over land. Stay away from controlled airspace if your quadcopter weighs more than 100g. Flying within 50m of a non-controlled airspace or quadcopter landing site (NLOS) is possible, but only if no national aviation is operating in that area. If you require more of a report, please contact your local aviation authority.

There are two ways to land the quadcopter.

- Press the one key take off / landing button to land the quadcopter.
- Hold one throttle lever down until the quadcopter lands on the ground.

**7**