

anko

Coffee Grinder
CG9701B-SA
User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

 
Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Before using, check that the voltage of wall outlet corresponds to the one shown on the rating plate.
3. Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner.
4. **IMPORTANT!** If the supply cord is damaged, it must be replaced by qualified electrical person in order to avoid a hazard.
5. Switch off the appliance and unplug from outlet when not in use, before putting on or taking off parts, or approaching parts that move in use, and before cleaning.
6. Do not let the power cord hang over edge of table or hot surface.
7. To protect against risk of electrical shock, do not put unit, cord, or plug in water or other liquid. Only the transparent top cover may be immersed in water for cleaning.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
9. Children should be supervised to ensure that they do not play with the appliance.
10. Ensure fingers are kept well away from moving parts.
11. **CAUTION: Do not remove grinding cover until blade has completely stopped rotating.**
12. Do not attempt to operate without the top cover in place.
13. The use of accessory not recommended by the manufacturer may cause injuries to persons.
14. Check grinding bowl for presence of foreign objects before use.
15. Misuse may cause injury.
16. Care is need when handling cutting blades, especially when removing the blade from the chamber, emptying the chamber and during cleaning
17. Do not use outdoors.
18. **Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.**
19. **For operating time, please refer to “USING YOUR COFFEE GRINDER” section.**
20. **For cleaning, please refer to “CLEANING AND MAINTENANCE” section.**

WARNING: The maximum operating time is 40 seconds. Allow it to cool down for at least 1 minute before using it again. After 3 cycles of operation, allow the coffee grinder (electric motor) to cool down to room temperature for approx. 30 minutes before using it again. Failing to follow the above instructions may cause electric motor burnout.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

KNOW YOUR COFFEE GRINDER

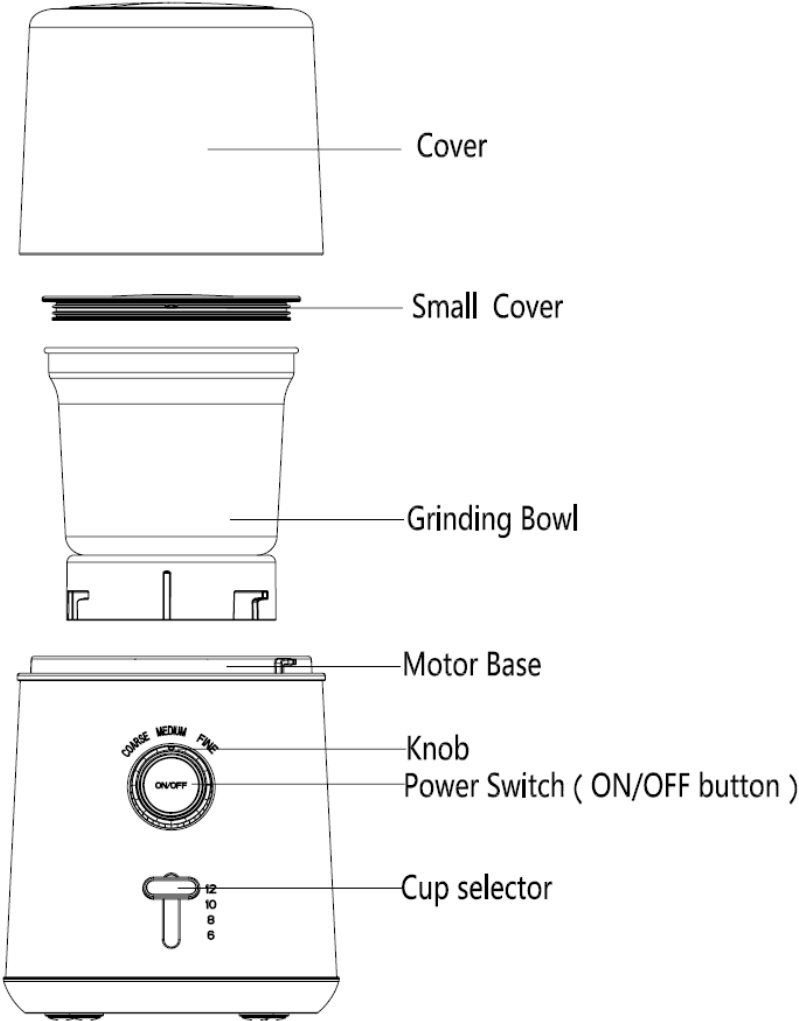

BEFORE THE FIRST TIME

Carefully unpack your coffee grinder and remove all packing materials. To remove any dust that may have accumulated during packaging, wipe the grinding bowl, blades with a damp lint-free cloth or sponge. Use extreme care as the blades are sharp. The transparent cover can be immersed in water for cleaning. Dry thoroughly after cleaning.

Caution: Never immerse the motor base in water for cleaning and do not fill the grinding bowl with water for cleaning.

USING YOUR COFFEE GRINDER

1. Place the coffee grinder on a flat stable surface.
2. Assemble the grinding bowl into the motor base, then turn the bowl clockwise until a ‘click’ sound is heard. When disassembling, turn the bowl anti-clockwise to detach it.
3. Pour coffee beans into the grinding bowl. It must be noted the quantity of coffee beans shall not exceed 85g. Since different coffee beans may have different weight, the maximum quantity of beans should not exceed the MAX line !
4. Put on the small transparent cover. Place the grinding cover onto the grinder. Turn clockwise to lock and insert the power cord plug into a mains power outlet.
5. Move the cup selector to select the number of cups to be brewed. Turn grind knob clockwise to select COARSE, MEDIUM, or FINE grind. Refer to charts on table 1 and table 2 for grinding and cup selection. Press the power switch (ON/OFF button) to start grinding. It will switch OFF automatically after grinding.

The number of cups corresponds to the working time for coarse, medium, and fine grinding:

Table 1

	coarse	medium	fine
6cup	15 second	29 second	37 second
8cup	17 second	31 second	39 second
10cup	19 second	33 second	40 second
12cup	21 second	35 second	40 second

The weight of the number of coffee beans per cup:

A cup of coffee beans is approximate 7g.

Table 2

Cups	Maximum weight
6cup	42g
8cup	56g
10cup	70g
12cup	84g

TIPS:

- A gauge has been added on the cover for your convenience to help estimate “cups” in the absence of a scale.
- For best flavor, store coffee beans in an airtight container.
- Grind beans immediately before brewing.
- Grinding times will vary by amount and fineness setting.
- To ensure optimal grinding performance, allow coffee grinder to cool for at least 1 minute between uses.
- Coffee flavor and strength are personal preferences. Vary the type of coffee beans, amount of coffee, and fineness of grind to find the flavor you prefer.

SELECT	CUPS
6	1-6
8	7-8
10	9-10
12	11-12

WARNING: The maximum operating time is 40 seconds. Allow it to cool down for at least 1 minute before using it again. After 3 cycles of operation, allow the coffee grinder (electric motor) to cool down to room temperature for approx. 30 minutes before using it again. Failing to follow the above instructions may cause electric motor burnout.

6. View the consistency of coffee grounds from the transparent cover.

IMPORTANT: If you want to remove the cover to check the consistency of the coffee grounds, ensure not to remove the cover until blades have come to a complete stop.

7. Once the desired grind has been obtained, wait until the machine stops, and unplug the power cord from the mains power outlet.
8. Remove the transparent cover. Disassemble the grinding bowl and pour out the coffee ground directly.

CLEANING AND MAINTENANCE

1. **CAUTION:** Be sure to unplug this appliance from mains power before cleaning. To protect against electrical shock, do not immerse cord, plug or motor base in water or liquid. After each use, always make sure the power cord plug is first removed from the mains power outlet.
2. Wash cover with water and mild detergent. The cover is not dishwasher safe. Rinse thoroughly and dry. Never immerse the motor base or fill the grinding bowl with water.
3. Wipe the grinding bowl and blades with a lint-free cloth. Extreme care should be exercised as the blades are sharp.

GRINDING TIPS

1. The **COARSE** grind is generally used for percolators and coffee urns. **MEDIUM** grind is used for drip coffee makers and steam-type espresso machines. **FINE** grind is used for espresso machines with an electric pump.
2. Vary the grinding times to suit your taste and type of beans you grind.
3. For the freshest, most flavorful coffee, grind only enough for the pot you are making. Coffee beans keep up to 2 months in the freezer in an airtight container and can be ground while still frozen. Coffee grounds left in your grinder can become stale and affect the flavor of freshly ground coffee. Be sure to clean grinding chamber, blade and cover after each use.

Technical Specification

Voltage: 220-240Va.c. 50-60Hz

Power: 200W

12 MONTH WARRANTY

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.