

anko

CAUTION – THIS PRODUCT CONTAINS FUNCTIONAL SHARP EDGES, TAKE EXTRA CARE WHEN HANDLING. KEEP OUT OF REACH OF CHILDREN

Before First Use: Wash all parts in warm soapy water, rinse with clean water and dry soft cloth.



Slicer



Small Grater



Large Grater



Zester



Crinkle Cut



STEP 1

To remove the blade, hold the handle of the blade & slide it out of the grater base.



STEP 2

Remove the desired blade from the side storage area by holding the handle & sliding out.



STEP 3

To insert desired blade, hold the handle & slide it in the grater base along the inner tracks until it snaps in place.

Note: The crinkle cut blade is always in place at the end of the grater base; this blade does not remove.



STEP 4

Place the grater base over the food holder, and place the prepared vegetable into the prongs on the finger guard, hold it over the grater base, while pressing downward on the finger guard slide it back & forth over the blade to slice.



21X28.5CM