

说明书: 四色双面印刷
 材质: 157克铜板纸
 成品尺寸: 150X110mm

anko

Instruction Manual



Keycode: 43157129

2.4Ghz Wireless Mechanical Keyboard

Packing: //////////////////////////////////////

61keys Mechanical Keyboard, USB-C Cable ,Keyboard Receiver

CAUTION: //////////////////////////////////////

1. This product shall be supplied by a power source not exceeding PS1 only.
2. The battery in product is non-replaceable. Danger of explosion if battery is incorrectly replaced.
3. Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
4. Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
5. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
6. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
7. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
8. The ambient temperature for normal operating is 25°C.
9. The label marking on bottom enclosure.
10. Noted: Please charge the battery in time when it runs out or it will affect the battery life.
11. Turn off the switch when the keyboard is no longer use. Please charge the battery for every 2 months.

How to use: //////////////////////////////////////

1. Plug the receiver into the computer USB port.
2. Switch the on/off switch at the back of keyboard.
3. Start to use the keyboard.

The keyboard compound key functions are controlled as follows: //////////////////////////////////////

FN+Esc	`	FN+A	Play/Pause	FN+.>	Page Down
FN+Shift+Esc	~	FN+S	Previous Track	FN+ ←	Lighting Effect Switch (Total Eight Effects)
FN+1	F1	FN+D	Next Track	FN+] }	Increase The Brightness
FN+2	F2	FN+F	Decrease The Volume	FN+[{	Decrease The Brightness
FN+3	F3	FN+G	Increase The Volume	FN+`"	Faster The Light Effect
FN+4	F4	FN+H	Mute	FN+; :	Slower The Light Effect
FN+5	F5	FN+U	PrtScr SysRq	FN+/?	↑
FN+6	F6	FN+I	Scroll Lock	FN+Alt	←
FN+7	F7	FN+O	Pause Break	FN+ []	↓
FN+8	F8	FN+J	Insert	FN+Ctrl	→
FN+9	F9	FN+K	Home	FN+WIN	Lock/Unlock WIN
FN+0	F10	FN+L	Page Up	FN+V	2.4G Reconnect Receiver
FN+“_”	F11	FN+M	Delete		
FN+“=+”	F12	FN+,<	End		

FN+V(2.4G):When keyboard does not match the receiver: Long press the FN+V until the light flashes, then plug the receiver into the computer to match the code.

Battery charging: //////////////////////////////////////

The charging indicator is located under the space bar.

1. Low battery: The "Win" key will keep flashing when battery low, please charge.
2. Battery charging:
 - Switch on: When charging, the space bar shows red light.
 - Switch off: When charging, the space bar shows orange light.
3. Fully charged: Green light on.

Product specifications: //////////////////////////////////////

Specification item	2.4Ghz wireless mechanical keyboard
Connection method	2.4Ghz
Product type	Mechanical keyboard
Built-in battery	3.7V rechargeable lithium battery
Number of keys	61 keys
Product size	29x 10 x 3.9cm
System compatibility	Compatible Windows 7/8/10 or later
Input	DC 5V 610mA