

anko

True Wireless Noise Cancelling Earphones

Operating instructions

 
Includes:

- > TWS earphones
- > USB-C charging cable
- > Small & Large size silicone ear tips



43-233-885

Product Overview:

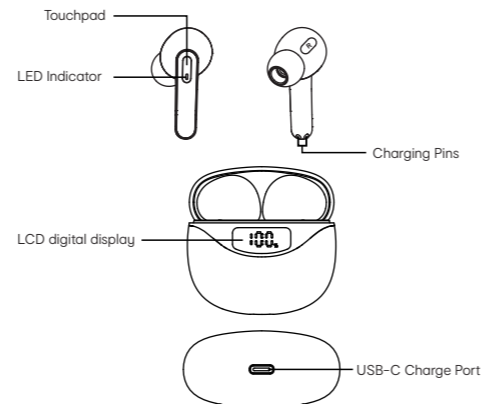

CAUTION: The battery in this product is not replaceable.

 
- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

WARNING: Do not dispose of unit in fire or water. > Never attempt to disassemble and reassemble. > Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. > Check with your local authority for recycle advice. > Keep your device and all accessories out of the reach of children and animals. > Small parts may cause choking or serious injury if swallowed. > Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 40°C). > Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. > Do not allow your device to get wet—liquids can cause serious damage. > Do not handle your device with wet hands.

Before first use

Unpacking

- > Remove all packaging
- > Remove the sticker on the charging contact point

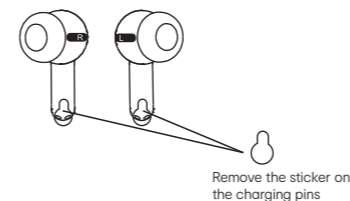

- > Please keep the packaging. The appliance can be stored in it if not used for a longer period of time.

Charge

- > This appliance is powered by a built-in rechargeable battery. So the Charging Case and the earbuds are needed to be fully charged before first use.

Charge the Case

- > Connect the USB-C charge cable into the socket on the charge case.
- > Plug the cable into a standard USB 5V/500mA output.
- > The LCD screen on the case will show the battery charging status while the case is charging and will show 100% status when fully charged.
- > When fully charged, unplug the charging cable.

 
Notice: The USB-C (Type-C) power source for the apparatus shall not exceed 5V 3A.

Charging the Earphones

- > Put the Earphones into the charging case. The LCD screen will show "L" and "R", indicating that Earphones are placed correctly in the case.
- > Close the charging case lid. The Earphones LED indicator will stay red while the Earphones are charging. When charging is complete the LED will turn OFF. (Note: the Earphones come with a built-in rechargeable battery. Before using them for the first time, we recommend you fully charge the battery. A full charge takes approximately 2 hours.)

- > The case LCD screen will show the Earphones battery status when the Earphones are placed into the case correctly.

WARNING: The Earphones can only used with the provided charging case.

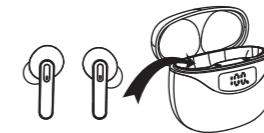

- > Now the appliance is ready for use.


How to use these earphones:

A. Power On

- Make sure the earbuds and your device are next to each other (within 3 feet / 1 meter).

Option 1

 - Open the charging Case and take the earbuds out, the earbuds will power on automatically.

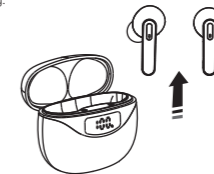

Option 2

- When the earbuds are not in the case and in power-off status, touch and hold the touchpad for 2 seconds to power on.



B. Pairing the Earphones with Bluetooth® devices

- > Go to Bluetooth settings on your Bluetooth device (phone, tablet, etc.)
- > Turn the Bluetooth ON, on your device.
- > Open the charging case and remove the Earphones, they will automatically turn on (or can be turned on manually). When the LED indicator on one side earphone flashes red and blue alternately, which the other side flashes blue, pair the earphones with your device.
- Tip: When there is no earphone flashing red and blue alternately, place the earphones back into the case and take them out again.
- > Select the pairing name of your Earphones on the list of available devices.
- Pairing name is: KM43233885.
- > The Earphone LED indicator will flash blue once every 5 seconds when connected.

C. Functions

Music	Tap the earphones of either earphone once
Play / Pause	Two touch the touchpad of Left (L) earphone
Next	Two touch the touchpad of Right (R) earphone
Previous	Two touch the touchpad of Right (R) earphone

Phone Calls	Tap the touchpad of either earphone once
Accept / End a call	Tap the touchpad for 2 seconds
Reject Call	Tap the touchpad for 2 seconds
Redial last call	Tap the touchpad of either earphone 3 times

Active Noise Cancelling & Transparent

Long press the touchpad about 2 seconds, then the Transparent mode and ANC ON/OFF mode of the earphones are replaced alternately as you need.

The **Active Noise Cancelling** feature will electronically mute background noise. It can be used to enhance the quality of any music or audio that is playing through the earbuds.

Transparent Mode enables the earbuds to pick up external sounds, so you can stay aware of your surroundings.

D. Power Off

Option 1

- Place the earbuds back into the case to automatically power off.



Option 2

- Touch and hold the touchpad for 4 seconds to power off the earphones, and the red indicator light will be on for 2 seconds.

Option 3

- If there is no connection with a wireless device within 3 minutes after powering on, the earbuds will automatically power off.

Trouble shooting

Problem	Possible cause	Solution
The appliance does not work.	The appliance is out of power.	Charge the appliance (refer to section "charging the appliance").
Wireless connection cannot be established or poor music playback/phone calling.	Out of detection range. Transmission conditions not optimal (for example: thick walls).	Move closer to the wireless device (less than 10 metres). Remove/bypass obstacles, check the wireless setting of the device to be paired.
No Sound.	The wireless device is muted or volume is too low.	Readjust the wireless device volume.

Specifications:

Model No.:	43233885
Version:	Bluetooth V5.3
Support profiles:	A2DP, HFP
Frequency response:	20Hz ~ 20KHz
Impedance:	32 Ohm
Drive size:	10mm
Sensitivity:	105dB±5dB
Working distance:	10 meters
Earbud battery capacity:	2 x 40mAh
Charging case battery capacity:	260mAh
Earbud charging time:	approx. 2 hours
Charging case's charging time:	2 ~ 3 hours
Charging voltage:	5V DC
Music time:	4 hours
Talk time:	3 hours
Standby time:	25 hours

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.