

anko

Bluetooth® On-Ear Headphones



Operating instructions

12 month warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on **1800 124 125 (Australia)** or **0800 945 995 (New Zealand)** or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

CAUTION: The battery in this product is not replaceable.

- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

WARNING Do not dispose of unit in fire or water. > Never attempt to disassemble and reassemble. > Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. > Check with your local authority for recycle advice. > Keep your device and all accessories out of the reach of children and animals. > Small parts may cause choking or serious injury if swallowed. > Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). > Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. > Do not allow your device to get wet—liquids can cause serious damage. > Do not handle your device with wet hands.


Includes:

- > Bluetooth headphones
- > charging cable
- > 3.5mm audio cable



43-233-915

Function overview:

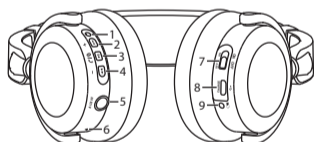

- Status indicator**
- + / ►► button**
 - Increase volume
 - Go to next track
- ◀ / 0 / ► button**
 - Call function
 - Bluetooth pairing
 - Audio playback
 - Voice assistant
- / ◀◀ button**
 - Decrease volume
 - Go to previous track
- AUX IN socket**
 - Connect the 3.5mm audio cable with music players or mobile phones.
- Microphone**
- ON/OFF Switch**
 - Switch the headphones on/off.
- Charger connector**
- Battery indicator**

Switching On/Off

To switch on, switch the **ON/OFF** switch to **ON** position, then press and hold **0** until the status indicator lights up.

- If the earphones are already paired with a Bluetooth device before, it will automatically connect with the last paired device when both are in pairing mode.

To switch off, press and hold **0** until the status indicator lights up for few seconds, and you will hear a voice prompt "Power off".

Operation

If you receive or make a call while listening to music, the music is paused until you end the call.

To	Press
Increase volume	+ repeatedly as desired
Decrease volume	- repeatedly as desired
Call Functions	
Answer / end a call	0 once
Reject a call	Hold 0 2 seconds then release
Redial last call	0 twice
Playback Functions	
Voice assistant	Hold 0 for about 2 seconds
Play / pause track	►► once
Skip to next track	Hold ►►
Go to previous track	Hold ◀◀

Specifications


Model	43233915
Sensitivity	106±3 dB
Impedance	32 Ω
Rated Input	5V DC
Frequency Response	20 Hz – 20 kHz
Bluetooth Interface	Bluetooth V5.3
Bluetooth Profiles	A2DP, HFP
Working Distance	10 Meters
Battery Capacity	300mAh
Charge Time	2.5 hours
Music Time	> up to 21 hours
Talk Time	> up to 20 hours
Standby Time	approx. 300 hours

Charging the Battery

This Bluetooth headphone is powered by rechargeable Li-polymer battery, please use the provided USB cable to recharge the battery.

When using this product for the first time, charge it fully first.

- Connect the USB charging cable with the headset USB port.
- Connect the other end of the USB charging cable to a powered USB device.
- It takes about 2.5 hours to fully charge the battery

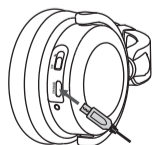

Status	Battery Indicator
Low battery	The Status indicator will light up red.
Charging	The Battery indicator will light up red.
Fully charged	The Battery indicator light will extinguish.

Bluetooth Pairing

- Ensure the earphones is switched off.
- Switch the **ON/OFF** switch to **ON** position.
- Press and hold **0** for 5 seconds to enter Bluetooth pair mode with a voice prompt of "Power on, pairing" and the LED indicator will flash red and blue. The headphone will pair to the latest paired device automatically if available.

⚠ If no Bluetooth device is paired within 5 minutes, the headphones will switch off.

- Activate the Bluetooth feature on your Bluetooth device and start searching. Then select "KM43233915".
- If necessary, enter the passcode, "0000", to pair and connect the earphones. Some device also ask to confirm the headset connection after pairing.
- The blue indicator will light up and the earphones will beep after you have successfully paired the earphones.
- Once connected you will hear a voice prompt "Connected".

⚠ The Bluetooth feature will disable while using the 3.5mm audio cable.

Hints and Tips

Product not working:

- Recharge the product.
- Ensure the product is switched on.
- Ensure your Bluetooth-enabled device's wireless function is active.
- Ensure there are no other wireless devices in discovery mode.
- Move the product closer to the device.
- Pair again the product and the device.

Aux Mode

When the headphone is in Bluetooth mode, insert the Aux audio cable into the headphone, the Bluetooth headphone will turn off and switch to Aux mode, connect the opposite end to the phone/computer or other device with 3.5mm jack, then you can play music.