diecut K Size:210x143mm

正面

12 month warranty

Thank you for your purchase from Kmart Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with the accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect. Please retain your receipt as proof of purchase and contact our

Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at **kmart.com.au** for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation

- CAUTION: The battery in this product is not replaceable.
 1. Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
 2. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a

- battery, that can result in an explosion. 3. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas. 4. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

WARNING Do not dispose of unit in fire or water. > Never attempt to disassemble and reassemble. > Waster electrical products should not be disposed of with household waste, please recycle where facilities exist. > Check with your local authority for recycle advice. > Keep your device and all accessories out of the reach of children and animals. > Small parts may cause choking or serious injury if swallowed. > Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). > Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. > Do not allow your device to get wet—liquids can cause serious damage. > Do not handle your device with wet hands.

anko

Bluetooth® Over-Ear Headphones **Operating instructions**

Includes > Bluetooth headphones > charging cable > audio cable



()

43-233-977

说明书保修卡用80克书写纸单黑双面印刷





How to use these headphones tion Operation Play: Press 🜬 button

Pause: Press ▶∎ button Previous Track: Press and hold – << button Next Track: Press and hold ▶▶ + button Answer Call: Press ►II button End Call: Press ▶∎ button Reject call: Press and hold ▶II button for about 2 seconds Redial Last Call: Press ► button twice Voice assistant: Press ►II button 3 times

Volume Up: Press ►► + button Volume Down: Press - ◄◄ button

Power ON/OFF

Power ON: Move the power switch to the "ON" position. LED indicator will flash red and blue Power OFF: Move the power switch to the "OFF" position.

Pairing the Headphone with Bluetooth Devices

> Once the headphone is powered on, you will hear a voice prompt "Power on", It will enter into pairing model and the LED indicator will flash red and blue. The headphone will pair to the latest paired device automatically if available

> If not previously paired, search on your electronic device's Bluetooth menu and select the pairing name " KM43233977 ".

> Once connected you will hear a voice prompt " Connected"

> To shut down the Bluetooth function on the current connected device, Press and hold $\blacktriangleright\!\!\!H$ button for about 5 seconds, you will hear a voice prompt "Disconnected" , your electronic device will return the headphone into pairing mode with the LED indicator flashing red and blue. The headphone can now be paired to a different device.

Aux Mode

When the headphone is in Bluetooth mode, insert the Aux audio cable into the headphone, the bluetooth headphone will turn off and switch to Aux mode, connect the opposite end to the phone/computer or other device with 3.5mm jack, then you can play music.

Batteru Charaina

- This Bluetooth headphone is powered by rechargeable Li-polymer battery.
- > Please use the provided USB cable to charge the battery
- > Insert the micro USB cable end into the headphone charging port
- > Insert USB charging cable into a suitable USB port
- > The LED will turn red when charging and turn blue when the headphone is fully charged It takes max 3 hours to fully charge the battery

Specifications:

Model No: 43233977 Version: Bluetooth V5.3 Working distance: 10 Metres Music time: approx. 12 hours Talk time: approx. 12 hours

Support profiles: A2DP, HFP Standby time: approx. 150 hours Charging voltage: 5V d.c. Battery capacity: 300mAh Charge time: Max.3 hours