

Product Overview

Android 6.0+ Game Controller Mode
How to connect:

1. Press **X** firstly then **Home button** together to power on the gamepad, **LED3** indicator will flash and wait for pairing.
2. Open the interface of **Setting** on Android device, open **Bluetooth**.
3. Scan the devices and search for device name **DS 4 Wireless Controller**, then connect it.
4. **LED3** indicator will be long on after connected successfully.

Note:

- The Android Game Controller mode allow player to play the android games from google play market, but request the games can support game controller.
- Please install the controller into the clip if needed when using.

iPhone/iPad Controller Mode for IOS13.0 above
How to connect:

1. Press **B** firstly, then **Home button** together to power on the gamepad, **LED4** indicator will flash and wait for pairing.
2. Open the interface of **Setting** on the device, open **Bluetooth**.
3. Scan the devices and search for device name **DS 4 Wireless Controller**, then connect it.
4. **LED4** indicator will be long on after connected successfully.

Nintendo Switch Controller Mode
Please turn off the Airplane Mode when you connect controller to switch console, then power on your Nintendo Switch console, follow the steps to connect your controller.

1. Find Controller option.

2. Click Grip/order.

3. Press **L1** firstly then **HOME button** together to power on gamepad until 4 LED indicators

flash in turn, after 5-7 seconds, the controller will connect to console automatically.

Note:
When following conditions occur, reconnect referring to first time to pair and connect.

- Upgrade
- Reset
- Change the console

Ps4/Ps3 Controller Mode
How to connect:

1. Connect the controller to Ps4/Ps3 console with type-C cable, **LED1,2,3** indicator will long on after console recognized.
2. Press **HOME** button to start pairing to console, LED indicator turn to LED4 and flash.
3. Few seconds later, **LED4** indicator turns to long on, the controller connect to Ps4/Ps3 console.
4. Plug off the cable, it will be wireless connection.

PC Wired Controller Mode
In this mode, it includes X-Input Mode and D-Input Mode.
X-Input Mode:

Connect controller to PC with type-C cable, after Windows system recognized, the controller will start to work, **LED1,2,3** indicator will be long on.

D-input Mode:
Under the mode of X-Input, long press the **HOME** button to switch to D-Input Mode, **LED3** indicator will be long on.

Android 6.0+ V3 Mode (Key Mapping Mode)
How to connect:

1. Press **A** firstly then **HOME** button together to power on the gamepad, **LED1** indicator will flash and wait for pairing.
2. Open the interface of **Setting** on Android device, open **Bluetooth**.
3. Search for device name **KM43244027**, then connect it.
4. **LED1** will be long on after connection successfully.

Change the Set Key configuration:
In V3 mode, after the gamepad is connected to the phone, the default button layout is "No. 1" and the button layout can be modified according to the virtual button of the game. While playing the different games, you can set four groups of key layout, and the keys switch as below:
Press **Right direction+HOME** button to switch to the **No.2** button layout, **LED1,2** indicators on.

Press **Down direction+HOME** button to switch to the **No.3** button layout, **LED1,2,3** indicators on.
Press **Left+direction+HOME** button to switch to the **No.4** button layout, **LED1,2,3,4** on.
Press **Up direction+HOME** button to switch to the **No.1** button layout, **LED1** indicator on.

Edit Key Configuration:
Before playing the games, please check and revise the key layout based on different mobiles and after you save the changes, ok to start the games.

Follow the steps to edit or revise key configuration:
1).Log in Google Play Store to download the APP "Shooting Plus" and install it to your Android mobile/tablet PC.

- 2). Open the Floating Window for "Shooting Plus".
- 3). Connect the controller to your Android device and open the APP.
- 4). Enter the game, press **START** button on the controller to release the key mapping menu as below photo:

- 5). Move the buttons to the position of the correspondence virtual buttons as your style.
- 6). Tap "Save" the settings and tap "Close" to enjoy your games.

Reset the default key configuration: **Open the APP-Click the Setting-Advanced Settings-Reset Device.**

Note:
•After reset the key configuration, disconnect the controller then reconnect again.

- In the game, press the **SELECT** Button to view the key configuration. Press the **START** Button to start the key configuration edit.
- The edit key configuration is saved in the current key configuration number.
Eg: If use the No.1 to edit, it will save in No. 1

Update:
If there is problem for the connection while the console update, follow the update methods:
1).Download the APP "Shooting Plus V3" from Google play or Apple store, then install it to your phone.
2).Connect Android phone with Shooting Plus V3 mode(**A+HOME** button to power on).
3).Open APP Shooting Plus V3 Mode, then follow the instruction to finish the update.

Power ON/OFF
Short press **HOME** button, the controller will power on and reconnect to the last device that paired and connected.
Long press **HOME** button around 5 seconds, the controller will power off with all LED indicators off.

Sleeping Mode & Reconnect
Sleeping Mode: The connection will turn into sleeping mode automatically without any operation within 5 minutes not use.
Reconnect: Short press **HOME** button to power on the gamepad, it will reconnect to the last mode automatically which you connected before, and this operation applies to all controller modes.

Turbo Function & Speed Adjustment
Buttons can be set to the Turbo function (which is called for short function buttons): **A/B/X/Y/L1/L2/R1/R2** button.
Enable/Disable the TURBO speed function:
1. Press the **TURBO** button and one of **A/B/X/Y/L1/L2/R1/R2** button simultaneously to enable the TURBO function.
2. Repeat the step 1 to disable the TURBO function.

Adjust TURBO speed:

- Press **TURBO** button + direction **UP** button to adjust to the fastest TURBO speed.
- Press **TURBO** button + direction **RIGHT** button to adjust to the middle TURBO speed.
- Press **TURBO** button + direction **DOWN** button to adjust to the slow TURBO speed.

Clear TURBO function:
Long press **TURBO** button with around 5 seconds, wait **LED1,2,3,4** indicator flash together with 1 second's vibration, then all TURBO functions were cleared.

Adjust Vibration Intensity (Only available for Nintendo Switch Controller Mode)
This controller have 4 levels of vibration intensity and Strongest/ Moderate/ Weakest/None Vibration will be LED1/ LED2/ LED3/ LED4 on.

- Make sure you connect the controller to the switch console.
- Press 4 buttons (L1/L2/R1/R2) simultaneously for around 2 second.
- Release the 4 buttons when you feel the vibration.
- The vibration mode can be adjusted by repeating above operation.

RGB lighting Control
Press **RGB control** button to change 3 kinds of RGB light effect:
Breathing light mode/ Fixed light mode/Light off mode

How to charge

- Plug the type-C Cable to USB adaptor (Not included).
- Charging time: approx. 3.5 hours, when charging LED4 indicator will flash slowly, after full charging, indicator will keep lighting.
- LED4 indicator will flash to remind you to charge when the battery is low.

Reset
Please use the pin to click the RESET hole to rest the controller while the situation of crash after charging or while playing game.

12 Month Warranty
Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

aniko
Instruction manual

Keycode: 43244027
RGB Wireless Controller

Please read all the information carefully before you use the product and keep the manual for future reference.

Caution
>Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation.
>Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
>Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
>Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
>A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

Specification
Product size: 152*115*58mm
Product weight: 214g
Rechargeable lithium battery 800mAh
Charging time: approx. 3.5hours
Play time: up to 5 hours play time

Back

Front