

anko

Mini Breakfast Maker AK-C012-4 User Manual




PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS


When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS

1. To protect against electric shock do not immerse the appliance, power cord, plugs in water or other liquids.
2. Close supervision is necessary when any appliance is used by or near children.
3. This appliance is NOT A TOY.
4. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
5. DO NOT use the accessories other than what is provided with the appliance.
6. If the supply cord is damaged, do not use. The supply cord must be replaced by a qualified electrician in order to avoid a hazard, or the product must be disposed of.
7. The appliance is intended for household use only. Do not use outdoors or for commercial purposes.
8. This appliance is intended to be used indoors in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farmhouse, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not touch hot surfaces on the appliance. Only use the handle provided.
12. Extreme caution must be used when moving an appliance containing hot oil or other liquids.
13. Do not use appliance for other than intended use.
14. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.
16. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
17. Do not use an extension cord with this appliance.
18. Always operate the appliance on an even surface. Make sure that there is enough ventilation, so that hot steam can be released safely during use.
19. To avoid the danger of fire, never leave the appliance unattended. And never use the appliance near flammable material or near items sensitive to heat, such like curtain or wall, kitchen cabinets...etc., risk of burning and/or heat damage.
20. Before connecting the appliance to a mains power outlet, the heating plates must be in closed position.
21. Use only heat-proof synthetic or wooden utensils to prevent damage to the non-stick coating on the heating plates. Make sure that the utensils are not pointed or have sharp edges.
22.  **Caution, hot surface. Care must be taken. The surface is liable to get hot during use.**
23. For cleaning cooking surface, please refer to section "Cleaning and Maintenance".

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

KNOW YOUR MINI BREAKFAST MAKER

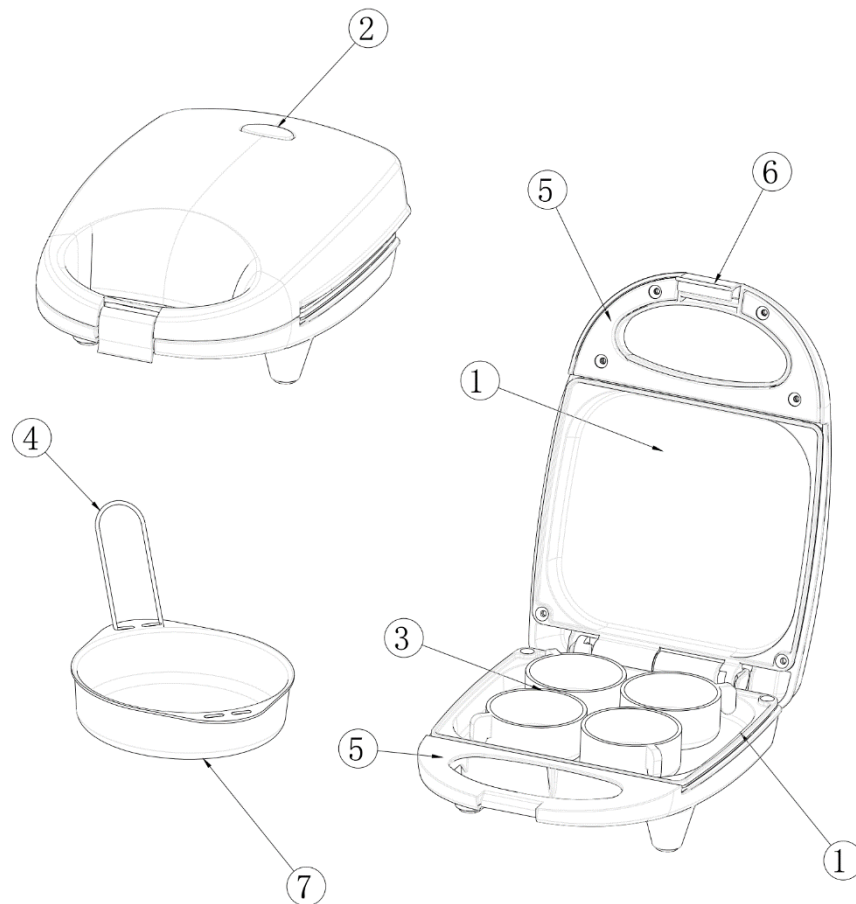

| | | | |
|---|-----------------------------|---|-------------------|
| 1 | Heating plates | 5 | Handle |
| 2 | Indicator light | 6 | Locking clip |
| 3 | Silicon egg bite cup (4pcs) | 7 | Egg sandwich tray |
| 4 | Fetch tool | | |

BEFORE FIRST USE

IMPORATNT!

Place the appliance on a heat resistant surface only. Some kitchen bench top surfaces are sensitive to heat and may be damaged due to heat. Placing the appliance on a heat resistant mat is recommended.

The appliance has been packaged carefully to ensure the product reaches you in good condition. If the product has been damaged, dropped, has a malfunction in any way, or if the supply cord is damaged, do not use. Return the product to Kmart for replacement.

Carefully unpack your appliance. Make sure you do not discard any packaging material until all parts of the appliance have been found.

Carefully wipe the exterior of the appliance to remove any dust that may have accumulated during production. Dry with a dry towel. Do not use harsh abrasive cleaners.

HOW TO USE YOUR MINI BREAKFAST MAKER

WARNING: DO NOT touch the hot surface while the appliance is operating. These can become very hot. Use oven mitts for extra caution to open Lid while cooking.

1. Before cooking with the silicon egg bite cups and egg sandwich tray, they must be seasoned. Brush a small amount of vegetable oil or your favorite non-stick cooking spray on the egg bite cups/egg sandwich tray and wipe off any excess with a paper towel. Your mini breakfast maker is now ready to use.

NOTE: THIS APPLIANCE DOES NOT NEED TO BE PREHEATED.

2. Fill egg bite cups/egg sandwich tray $\frac{3}{4}$ full with your desired egg mixture and place the cups/tray on the heating plate.

3. Close Lid.

NOTE: DO NOT close the locking clip. Your Egg bites require space to expand during the cooking process.

4. Connect the appliance into a mains power outlet. The indicator light will illuminate to indicate the appliance is heating. The indicator light will cycle ON and OFF with the thermostat. This indicates the unit is maintaining the cooking temperature during use.

5. After approximately 5 minutes, or when the steam has evaporated from the cooking surface, check your eggs. The mini breakfast maker may be opened during the cooking to check their progress.

NOTE: Egg bites/egg sandwich will be ready within 8-14 minutes. Cooking time may vary based on ingredients used and personal preference.

Always use the fetch tool provided to remove the egg sandwich tray from the heating plate to avoid risk of injury or burns.

CAUTION: Care must be used when opening and closing the lid, as internal parts, including Egg Bite Cups and Egg Sandwich Tray will be hot and steam may escape when opening the lid.

Do not cut food on the Egg Bite Cups/Egg Sandwich Tray or Heating Plate.

6. When cooking is complete, unplug the product from the mains power outlet.

NOTE:

The bottom Heating Plate can also be used to cook bacon, sausage, pancakes, omelets, sandwiches, and more.

The first heating process should take place without any foodstuffs. Let it heat for about 10 minutes.

You may notice slight smoke and/or smell from the appliance when the heating element is heating up.

This is normal and harmless! After dry heating for a few minutes, it should be disappear.

WARNING:

Always unplug the product from the electrical power outlet when it is not in use or will be left unattended.

Never use sharp forks or knives to remove food from the egg bite cups/egg sandwich tray, as this would damage the non-stick coating on the cooking surface. Use heat-resistant wood or plastic utensils only.

CLEANING AND MAINTENANCE

This appliance should be cleaned after every use.

CAUTION: Make sure the appliance is unplugged from mains power and allow the appliance to cool down completely before cleaning.

CAUTION: Never immerse the appliance in water, other liquids or in a dishwasher!

Wipe the Heating Plates with a cloth dampened with warm soapy water.

1. Clean the egg bite cups/egg sandwich tray by washing in warm soapy water with a sponge or cloth.
2. Wipe the outside of the appliance with a soft cloth dampened in warm soapy water.
3. Dry the heating plates, egg bite cups/egg sandwich tray and outside of the appliance with a clean cloth or paper towel.

DO NOT use steel wool pads or other abrasive cleaners on the heating plates or the egg bite cups/egg sandwich tray as they may damage the non-stick coating.

STORAGE

1. Ensure the appliance is disconnected from mains power.
2. Allow the appliance to cool down completely.
3. Do not wrap the power cord around the appliance.
4. Store the appliance in a dry location and out of the reach of children.

TECHNICAL DATA

Voltage: 220-240V~ 50-60Hz

Power: 520W

RECIPE

Cheddar and broccoli egg bites, egg sandwiches or omelet

Ingredients:

5 Eggs

2 tbsp. shredded sharp Cheddar cheese

2 tbsp. cottage cheese

Pinch of salt

Pinch of freshly ground pepper

2 florets cooked broccoli

Directions:

Whisk eggs, cheddar cheese, cottage cheese, salt and pepper until well combined. Cut broccoli florets into small pieces and place in bottom of egg bite/egg sandwich tray. Pour egg mixture into egg bite cups/egg sandwich tray is $\frac{3}{4}$ full. Makes approximately 8-10 egg bites, 2 egg sandwiches, or 1 omelet.

Tomato basil egg bites, egg sandwiches or omelet

Ingredients:

5 Eggs
2 tbsp. cottage cheese
3 leaves fresh basil (coarsely chopped)
 $\frac{1}{4}$ cup finely diced tomatoes
2 tbsp. crumbled feta cheese

Directions:

Whisk eggs, basil, tomatoes, and feta until well combined. Pour egg mixture into egg bite cups one at a time until egg bite/egg sandwich tray is $\frac{3}{4}$ full. Gently stirring egg mixture before filling to ensure ingredients are evenly distributed in egg bite cups. Makes approximately 8-10 egg bites, 2 egg sandwiches, or 1 omelet.

Cheesy bacon egg bites, egg sandwiches or omelet

Ingredients:

5 Eggs
2 bacon slices, cooked and crumbled
2 tbsp. shredded Cheddar cheese
1 tbsp. shredded Monterey Jack cheese
2 tbsp. Cottage Cheese
Pinch of salt
Pinch of freshly ground pepper

Directions:

Whisk eggs, cheddar, cottage cheese, Monterey jack, salt and pepper until well combined. Add crumbled bacon to bottom of egg bite/egg sandwich tray. Pour egg mixture into egg bite cups/egg sandwich tray is $\frac{3}{4}$ full. Makes approximately 8-10 egg Bites, 2 egg sandwiches, or 1 omelet.

Tomato basil feta egg bites, egg sandwiches or omelet

Ingredients:

5 Eggs
3 leaves fresh basil (coarsely chopped)
 $\frac{1}{4}$ cup finely diced tomatoes
2 tbsp. crumbled feta cheese
2 tbsp. cottage cheese

Directions: Whisk eggs, basil, tomatoes, feta and cottage cheese until well combined. Pour egg mixture into egg bite cups one at a time until egg bite cups/egg sandwich tray is $\frac{3}{4}$ full. Gently stirring egg mixture before filling to ensure ingredients are evenly distributed in egg bite cups. Makes approximately 8-10 egg bites, 2 egg sandwiches, or 1 omelet.

12 Month Warranty

Thank you for your purchase from Kmart.

Kmart Australia Ltd warrants your new product to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

Kmart will provide you with your choice of a refund, repair or exchange (where possible) for this product if it becomes defective within the warranty period. Kmart will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre on 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or alternatively, via Customer Help at Kmart.com.au for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to our Customer Service Centre at 690 Springvale Rd, Mulgrave Vic 3170.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.