


# anko

**Mini Jaffle Maker  
SP-011-J  
User Manual**

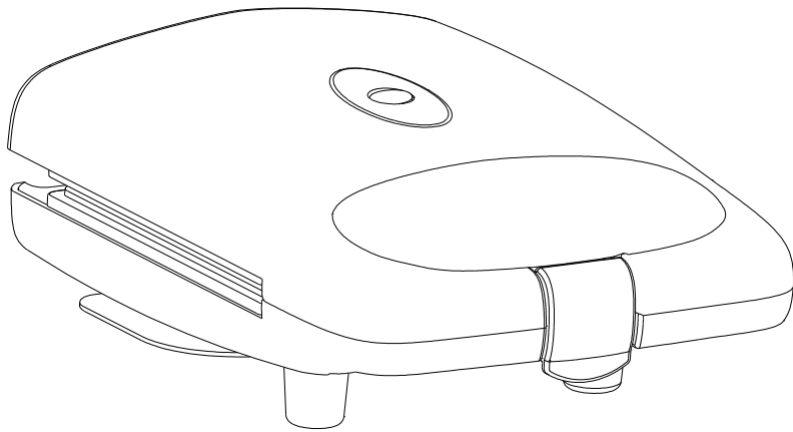


**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**

## IMPORTANT SAFEGUARDS


When using electrical appliances, basic safety precautions should always be followed, including the following:

### READ ALL INSTRUCTIONS

1. To protect against electric shock do not immerse the appliance, power cord, plugs in water or other liquids.
2. Close supervision is necessary when any appliance is used by or near children.
3. Unplug from mains power outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
4. **If the supply cord is damaged or show any sign of wear and tear do not use.** The supply cord must be replaced by a qualified electrician in order to avoid a hazard, or the product must be disposed.
5. The appliance is intended for household use only. Do not use outdoors or for commercial purposes.
6. This appliance is intended to be used indoors in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farmhouse, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
7. Do not let cord hang over edge of table or counter or touch hot surfaces.
8. Do not place on or near a hot gas or electric burner, or in a heated oven.
9. Do not touch hot surfaces on the appliance. Only use the handle provided.
10. Extreme caution must be used when moving an appliance containing hot oil or other liquids.
11. Do not use appliance for other than intended use.
12. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
13. Children should be supervised to ensure that they do not play with the appliance.
14. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
15. Do not use an extension cord with this appliance.
16. Always operate the appliance on an even surface. Make sure that there is enough ventilation, so that hot steam can be released safely during use.
17. To avoid the danger of fire, never leave the appliance unattended. And never use the appliance near flammable material or near items sensitive to heat, such like curtain or wall cabinet...etc., risk of burning and/or heat damage.
18. Before connecting the appliance to a mains power outlet, the heating plates must be in closed position.
19. Use only heat-proof synthetic or wooden utensils to prevent damage to the non-stick coating on the heating plates. Make sure that the utensils are not pointed or have sharp edges.
20.  **CAUTION: hot surface. Handle with care. The surface is liable to get hot during use.**
21. For cleaning instructions, please refer to section "Cleaning and Maintenance".

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

## KNOW YOUR MINI JAFFLE MAKER

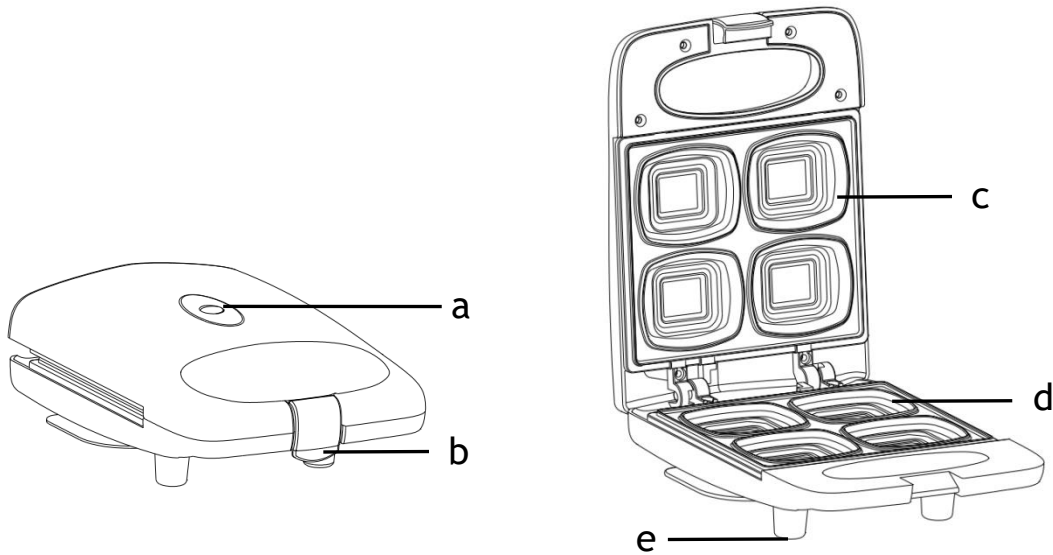

- a. Power indicator light
- b. Locking clip
- c. Top baking plate
- d. Bottom baking plate
- e. Rubber feet

### **BEFORE FIRST USE**

The appliance has been packaged carefully to ensure the product reaches you in good condition. If the product has been damaged, dropped, has a malfunction in any way, or if the supply cord is damaged, do not use.

Carefully unpack your appliance. Make sure you do not discard any packaging material until all parts of the appliance have been found.

Carefully wipe the exterior of the appliance to remove any dust that may have accumulated during production. Dry with a dry towel. Do not use harsh abrasive cleaners.

The first heating process should take place without any foodstuffs. Let it heat for about 10 minutes. You may notice slight smoke and/or smell from the appliance when the heating element is heating up. This is normal and harmless! After dry heating for a few minutes, it should disappear.

## HOW TO USE YOUR MINI JAFFLE MAKER

1. Brush or wipe the baking plates with a small amount of vegetable oil.
2. Close the appliance and plug the appliance into the wall socket. The red power indicator light will be illuminated, and the appliance will begin heating. The baking plates will reach baking temperature in approx. 3 minutes. The red indicator light will remain ON when the appliance is heating up.
3. Open the appliance and place the prepared fillings on the bottom baking plate.
4. Close the appliance and lock with the locking clip.
5. It will take approx. 3-5 minutes to make the food and this will depend on different fillings and requirements.
6. Unlock the clip and open the appliance and take out the food.
7. Repeat the above operation if more food needed.
8. Remove the plug from the wall socket after use.

### CAUTION:

1. Depending on the different fillings, it may take approx. 3 - 5 minutes to get food ready.
2. If too much mixture is inserted into the appliance, the jaffle maker cannot be closed. Never close it with undue force as this could damage the appliance.
3. Never use sharp forks or knives to remove food from the jaffle maker, as this would damage the non-stick coating on the cooking surface. Use heat-resistant wood or plastic utensils only.
4. Always unplug the appliance from the mains power outlet socket when not in use.

## CLEANING AND MAINTENANCE

This appliance should be cleaned after each use.

**CAUTION: Do not immerse the mini jaffle maker in water or in a dishwasher!**

- Always unplug your mini jaffle maker from the mains power supply before cleaning or during maintenance.
- Ensure that your mini jaffle maker has completely cooled down before cleaning, as it gets very hot during use.
- Clean the baking plates and outside of the appliance with a damp cloth or soft brush. Do not use anything abrasive that can scratch or damage the appliance.

## STORAGE

1. Unplug the mini jaffle maker from mains power.
2. Allow the appliance to cool down completely.
3. Clean and dry the appliance.

**WARNING! Do not wrap the power cord around the appliance. This can damage the power cord over time.**

4. Store the appliance in a clean dry location and out of the reach of children.

## TECHNICAL SPECIFICATIONS

Voltage: 220-240V~ 50-60Hz

Power: 500-600

## SUGGESTED RECIPE

### **Bacon, Spinach and Tomato**

2 slices white bread  
1/2 tomato, sliced  
Few pieces of spinach  
2 thin slices bacon  
Softened butter

Spread one side of the bread with softened butter, put 1 slice on the jaffle maker, buttered side down. Arrange the tomato, chopped spinach and grilled bacon on top. Cover with another slice of bread, buttered side up.

### **Scrambled Eggs and Bacon**

2 thin slices bacon  
2 slices white bread  
Softened butter  
1 tablespoons milk  
Salt and pepper  
1 egg  
1/4 Oz butter

Grill the bacon and cut into pieces. Scramble the egg with butter, milk and seasoning until lightly set. Spread one side of the bread with softened butter, put 1 slice on the jaffle maker, buttered side down. Arrange the scrambled egg and bacon on top and cover with the another slice of bread, buttered side up.

### **Cake**

#### Ingredients

500g all - purpose flour  
50g sugar  
400ml milk  
5 eggs  
100g butter  
5g baking powder

Beat the eggs in a mixer until well mixed. Add remaining ingredients and mix until smooth. Leave the mixture for at least half an hour. Preheat the jaffle maker. Use a pastry brush to lightly grease coat the non-stick coating of the baking plates with oil or butter. Pour mixture into jaffle maker. Cook until golden brown.

## **12 Month Warranty**

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

<b>Contact for Kmart purchases</b>	<b>Contact for Target purchases</b>
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>