

anko

Heated Foot Warmer

DK32X32-1S-030A

User Manual



PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE



SAFETY INSTRUCTION

Carefully read this manual in full before using this foot warmer

Ensure that you know how the foot warmer functions and how to operate it.

Maintain the foot warmer in accordance with the instructions to ensure that it functions properly. Keep this manual with the foot warmer. If the foot warmer is to be used by a third party, this instruction manual must be supplied with it.

The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.

No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

Warning! Do not use this foot warmer if it has been damaged in any way, if it is wet or moist or if the supply cord is damaged. Return it immediately to the retailer. It should be checked annually for electrical safety in order to limit the risk of electric shock or fire. For cleaning and storage, please refer to "CLEANING" and "STORAGE" sections.

SAFE OPERATION GUIDE

- Use this foot warmer as a foot warmer only.
- When not in use, pack the foot warmer in its original packaging for best protection and store in a cool, clean and dry location. Avoid pressing sharp creases into the foot warmer. Store the foot warmer only after it has fully cooled down.
- When storing, fold neatly but not tightly (or roll) in the original packaging without sharp bends in the heating element and store where no other objects will be placed on top of it.
- Do not crease the foot warmer by placing items on top of it during storage.

Warning! Do not use folded, rucked, creased or when damp.

Warning! Use HIGH setting to preheat before use only. Do not use with the control set to the high setting. It is highly recommended that the foot warmer be set to a minimum Low heat during continuous use.

Warning! Do not use with the controller set to HIGH for a long time.

Warning! Remember to switch the foot warmer controller to "OFF" at the end of use and disconnect from mains power. Do not leave on indefinitely. There may be a risk of fire.

Warning! For added safety it is recommended that this foot warmer be used with a residual current safety device (safety switch) with a rated residual operating current not exceeding 30mA. If unsure please consult a qualified electrician.

Warning! The foot warmer must be returned to manufacturer or his agents if the link has ruptured.

Warning! This foot warmer is not to be used if there are signs of damage. This foot warmer is not to be used for warming animals.

The outdoor shoes must be removed before use.

The foot warmer is intended to be used after preheating, the cord set must be disconnected from mains power after preheating.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**



IMPORTANT SAFETY INFORMATION

When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury.
Always check that the power supply corresponds to the voltage on the rating plate on the controller.

Warning! Do not use the foot warmer folded.



Do not use the foot warmer rucked. Avoid creasing the foot warmer.
Do not insert pins into the foot warmer. DO NOT use this foot warmer if it is wet or has suffered water splashes.



Warning! Do not use this electric foot warmer with an infant or child, or any other person insensitive to heat and other very vulnerable persons who are unable to react to overheating. Do not use with a helpless or incapacitated person or any person suffering from medical illness such as high blood circulation, diabetes or high skin sensitivity.

Warning! Avoid extended use of this foot warmer at a high setting. This may result in skin burns.

Warning! Avoid creasing the foot warmer. Examine the foot warmer frequently for signs of wear or damage. If there are such signs or if the appliance has been misused, have it inspected by a qualified electrical person prior to any further use or the product must be disposed.

Warning! This foot warmer is not intended for use in hospitals.

Warning! For electrical safety the foot warmer must only be used with the detachable control unit 030A2 supplied with the item. Do not use other attachments not supplied with the foot warmer.

Warning! Do not use by children under the age of three.

Supply

This foot warmer must be connected to a suitable 220-240V~ 50Hz power supply. If using an extension cord, ensure that the extension cord is of a suitable 10-amp power rating. Fully unwind the supply cord when in use as a coiled cord may overheat.

Warning! Always unplug from the mains supply when not in use.

Supply cord and plug

If the supply cord or controller is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Children

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

Warning! Not to be used by young children (0-3 years).



PACKAGE CONTENTS

1x foot warmer

1x Instruction Manual

Caution! Confirm all parts before disposing of packaging. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.

OPERATION

Location and Use

This foot warmer is designed for domestic use only.

This pad is not intended for medical use in hospitals and/or nursing homes.

Fitting

Place the foot warmer flat on the floor and ensure it is not wrinkled. Then place the sherpa cover into the foot warmer to keep it clean.




Foot warmer body



Foam inside



Controller

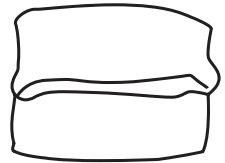

Sherpa cover

Put foam first and then assemble sherpa cover.

Operation

Once the foot warmer has been installed correctly in position, connect the controller supply plug to a suitable power outlet. Ensure the controller is set to "Off" before plugging in. Select the desired heat setting on the controller. The indicator lamp indicates that the foot warmer is ON.

Controls

The controller has the following settings.

- 0 NO HEAT
- 1 LOW HEAT
- 2 MEDIUM HEAT
- 3 HIGH(PREHEAT)

"3" is the highest setting for preheat and not recommended for prolonged use. It is suggested to use this setting first to warm up quickly.

There is a LED light which illuminates when the foot warmer is switched ON.

IMPORTANT! The foot warmer is fitted with an automatic timer to switch OFF the foot warmer after 2 hours of continuous use on any one of the heat settings (i.e. Low, Medium or High). The auto power OFF function is re-activated for 2 hours each time the controller is switched OFF and switched back ON again by pressing On/Off button and selecting 1 or 2 or 3 heat settings. Press On/Off button for 2 seconds to switch off. The 2 hour timer is automatic and cannot be adjusted manually.

CLEANING

Warning! When not in use or before cleaning, **always disconnect the foot warmer from the mains power supply.**

Spot Clean for Foot Warmer Body

Sponge the area with a neutral wool detergent or mild soap solution in lukewarm water. Sponge with clean water and dry completely before re-use.

Do not Wash



Disconnect the detachable cord from the pad when spot cleaning.

For Sherpa cover, it could be machine washable or hand wash.

DRYING

Drape the foot warmer across a clothes line and drip dry.

DO NOT use pegs to secure the foot warmer in position.

DO NOT dry with a hair dryer or heater.

IMPORTANT! Ensure the controls are in position that will not allow dripping water to fall onto any part of the controller.

Allow the foot warmer to dry thoroughly.

Connect the detachable cord to the connector on the foot warmer. Ensure the connector is properly locked in place.

CAUTION! Electric Shock Hazard. Ensure the foot warmer and connector on the foot warmer is completely dry, free of any water or moisture, before connecting to mains power.

Warning! During washing and drying, the detachable cord must be disconnected or positioned in a way to ensure that water does not flow into the switch or control unit.

Warning! Do not allow the supply cord or controller to be immersed in any liquids.

Warning! Do not wring the foot warmer

Warning! Do not dry clean this foot warmer
heating element or the controller.



This may damage the

Warning! Do not iron this foot warmer. **Do not machine wash or machine dry the foot warmer and only Sherpa cover can dry clean or tumble dry, machine washable.**



Warning: Do not tumble dry.



Warning! Do not bleach



Dry flat in shade



STORAGE

IMPORTANT! Safety Check

This foot warmer should be checked annually by a suitably qualified person to ensure its safety and suitability for use.

Store in a safe place

Warning! Before storage of this appliance allow it to cool down before folding. When not in use store your foot warmer and instruction manual in a safe and dry place. Roll or gently fold the foot warmer. Do not crease. Store in a suitable protective bag for protection. Do not place items on the foot warmer when storing. Before re-use after storage it is recommended that the foot warmer is checked by a suitably qualified person to eliminate the risk of fire or electric shock through a damaged foot warmer. Examine the appliance frequently for signs of wear or damage. If there are such signs or if the appliance has been misused the foot warmer must be checked by a qualified electrical person for electrical safety, before switching it on again.

TECHNICAL SPECIFICATIONS

Size 32X32X22cm
220-240v~ 50Hz 50W
Controller 030A2

12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us