# KMT说明书 折页 128g双铜 尺寸: 89\*127mm

# 12 month warranty

Thank you for your purchase

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

Ne will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the re expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurredin returning this product can be addressed to the respective Customer Service

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are our goods come with gourantees and calmind see exercised and the Australian Consulter Care. Not are entitled to a replacement or refund for a major failure and compensation for any other reasonably fore loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

### WARNING:

- Battery cannot be subjected to high or low extreme temperatures, low air pressure at high altitude during use, storage or transportation
- Replacement of a battery with an incorrect type that can result in an explosion or the
- Please note the product working temperature is : 0-40 °C.

# anko

K: 43-351-749 | T: 68-734-664 Model: HQ182B


# **Bluetooth Headphone** User Manual

Accessories inside:

- Type-C charging cable x 1
- 3.5mm audio cable x1
- User manual x 1



# **Function overview:**

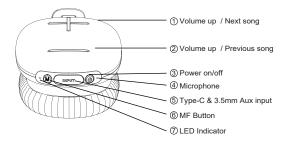

# **Specification**

Bluetooth name	anko43351749
Bluetooth version	V5.3
Working distance	≤10m
Frequency response	50-8K Hz
Input Voltage	DC 5V 1A
Charging time	2Hrs
Charging port	Type-C
Speaker driver unit	Φ 40mm,32Ω
Playing time	62H (at 80% Volume)
Battery capacity	500mAh

# Operation Instruction

Long press "  $\mbox{$\rlap.$$}$ " button for 3 seconds, you'll hear a beep confirming that headphone is on . Press the same button for 3 seconds again to switch off , a voice prompt will alert to indicate the headphone is off .

Turn on the Bluetooth switch of the mobile phone or other devices(such as PC, Tablet etc), search for the pairing name anko43351749 in your mobile Bluetooth list, click it to connect the headphone with your device; Once paired successfully, a voice prompt will alert and the blue indicator flashes slowly. The headphone will re-connect with the last paired mobile automatically in future use

# Music playing

Volume up: Click the "+" button to increase volume; Volume down: Click the "-" button to decrease volume; a voice prompt will alert when reach maximum or minimum volume. Next song: Press and hold the "+" button around 2 seconds; Previous song: Press and hold the "-" button around 2 seconds; Music play/pause: Click the MF button. The music stop automatically when call is coming, and resume automatically when call is end

# Phone Calling

Answer call: Click the MF button when call is coming

End call: Click the MF button when call is over

Cancel call: Click the MF button when calling

Reject call: Press and hold the MF button around 2 seconds when call is coming

Redial: Double click the MF button to redial last call number

## Siri or google assistant

In standby mode or music mode, click MF button 3 times to activate Siri or Google assistant.

# Gaming mode and Music mode

Five click "MF" quickly to switch the Music mode and Game mode

## AUX mode

Connect the  $3.5 \mathrm{mm}\,\mathrm{AUX}$  cable to the headphone , you can enjoy play music directly. Note: The headphone will power off automatically once plug the 3.5mm audio cable into audio jack(When headphone is power on). In this case the battery will not be used

## Charging

Before using, please check and assure the battery is full charged.

While the headphone is in low battery, use the supplied Type-C cable to charge and the charging indicator will be red when charging. Once charged fully, the indicator will be solid blue.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth® SIG, Inc., and any use of such marks by KMART AUSTRALIA is under license