



# Train Starter Set

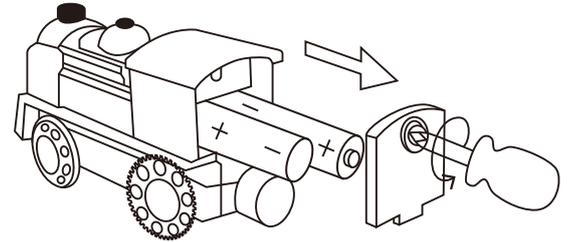

## Function:

Move the top switch to control forward/reverse movement or stop the train.  
The front light glows when the train is moving forward.  
The front light turns off when the train is moving reverse or stops.

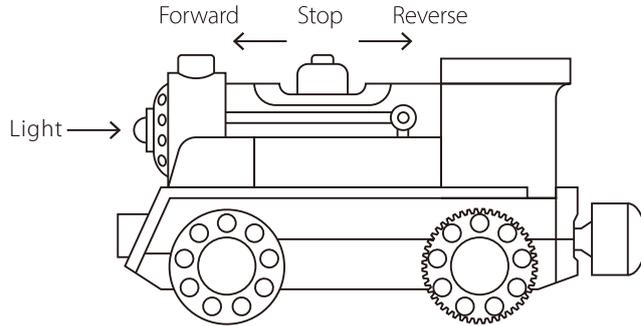

REQUIRES 2 X 1.5V AAA BATTERIES AND SCREWDRIVER  
(NOT INCLUDED).

CAUTION: BATTERY INSTALLATION BY AN ADULT REQUIRED.

**WARNING:** BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY (+ AND -). DO NOT MIX DIFFERENT TYPES OF BATTERIES OR NEW AND USED BATTERIES. NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED. RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION. RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED. THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED. REMOVE BATTERIES FROM THE PRODUCT WHEN NOT IN USE FOR EXTENDED TIME OR WHEN BATTERIES BECOME EXHAUSTED. DISPOSE OF BATTERIES RESPONSIBLY. DO NOT DISPOSE OF IN FIRE.

ADULT SUPERVISION REQUIRED.  
PLEASE KEEP THE PACKAGING FOR FUTURE REFERENCE.

**WARNING: CHOKING HAZARD**  
SMALL PARTS. NOT SUITABLE FOR CHILDREN UNDER 3 YEARS.

**WARNING:** THIS TOY CONTAINS SMALL MAGNETS. MAGNETS STICKING TOGETHER OR BECOMING ATTACHED TO A METALLIC OBJECT INSIDE THE HUMAN BODY CAN CAUSE SERIOUS OR FATAL INJURY. SEEK IMMEDIATE MEDICAL HELP IN MAGNETS ARE SWALLOWED OR INHALED.

13404  
K: 43-389-421  
T: 69-569-258  
MADE IN CHINA

**Customer Service:**  
**KMART AU: 1800 124 125**  
**KMART NZ: 0800 945 995**  
**TARGET AU: 1300 753 567**