

Instruction manual (IM)

Three level temperature control switch:

1. Connect the thermostat to the power supply (battery), and the red, blue, and green lights will light up in sequence once.
2. Press and hold the button for 3 seconds to turn on, and the LED will display red. It has a high output with 100% power, about 55-65 °C;
3. Click the button to switch the output, the LED displays blue, the mid output with 70% power, about 45-55 °C;
4. Click the button to switch the output, the LED displays green, low output with 40% power, about 35-45 °C;
5. Press and hold for 3 seconds to turn off.

Item	
Heatpack Chair	KC: 43475391
Graphene Heater	DC 5V、1.6-1.95A
Heating wire	5V、3A

WARNING:

1. Use only an external supply with the following specifications:
Power: <1x 5V/4A AMP Battery or 2x 5V / 2A AMP Batteries>
Input: <5V/1.6-1.95A >
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
3. Rigorously pulling and pulling the heating wire can cause it to break, malfunction, and pose a danger.
4. The appliance must only be supplied at safety extra-low voltage corresponding to the marking on the appliance.