

Playpen with Base

Instruction Manual

6-24
months

15
kg

MAXIMUM
WEIGHT OF
CHILD



IMPORTANT

BEFORE ASSEMBLING THIS PLAYPEN READ AND UNDERSTAND THE INSTRUCTIONS.

Do not use mattress other than the one supplied by the manufacturer.

Incorrect mattress can cause death.

Use only accessories as recommended by the manufacturer.

Ensure the top rails and base are fully locked.

Stop using this playpen if any part of the playpen is broken, torn or missing.

KEEP THESE INSTRUCTIONS IN A SAFE PLACE FOR FUTURE REFERENCE.

WARNING:

RETAIN FOR FUTURE REFERENCE.

READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE OF THIS PLAYPEN.
ALWAYS FOLLOW THE INSTRUCTIONS.

THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.


WARNING

- USE ONLY THE MATTRESS SUPPLIED BY THE MANUFACTURER. INCORRECT MATTRESS CAN CAUSE DEATH.
- Use only accessories as recommended by the manufacturer.
- Ensure the top rails and base are fully locked.
- Do not use this playpen if any part of the playpen is broken, torn or missing.
- Keep children away while assembling/disassembling the playpen.
- Do not leave anything in the folding playpen (such as toys) that provide a foothold.
- Do not use the folding playpen near naked heat sources, bar heaters, open fires or exposed flames.
- Do not place more than one child in the playpen at the same time.
- Do not use this playpen with a child who can climb out, weighs more than 15kg, or is taller than 890mm.
- Keep the folding playpen clear of trailing cables and hanging cords.
- Keep medication and small items that a child could choke on away from the playpen.
- Check that the assembly of the playpen is correct and safe.
- Check that all locking devices are fully engaged.
- Folding playpen with padded rims should not be used if the covering material has been bitten through.
- There is potential for fingers or parts of the body to be injured when the product is being folded or unfolded. Due care should be exercised.
- Take care when unpacking and during assembly.
- Dispose of all packing materials carefully after assembly.
- Regularly check that all fittings remain tight. Tighten if required.
- Inspect the product before assembly and periodically during use. Never use this product if there are any loose or missing fasteners, joints or broken parts.
- Be aware of the risk of open fires and other sources of strong heat, such as electric bar fires, gas fires, etc. in the near vicinity of the playpen.
- Any additional or replacement parts should only be obtained from the manufacturer or distributor.
- Never substitute parts.

WARNING:

- Check this product regularly before using it, and do not use it if any part is loose or missing or if there are any signs of damage.
- Do not substitute parts. Contact the manufacturer if replacement parts or additional instructions are needed.
- Infant should be placed to play on a firm, flat surface.
- Place infant on their back when using this product.
- Do not put objects or accessories in an infant's playing environment.
- Do not place this product near a blind, cord, strap or similar item that could become wrapped around an infant's neck.
- Do not use this product for infant sleep.
- Do not leave infant in this product unsupervised.

PARTS LIST

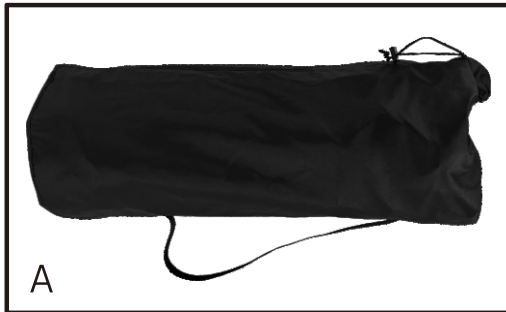

A 1 x Carry Bag

B 1 x Playpen

TO OPEN THE PLAYPEN


WARNING

**THESE STEPS WILL ENSURE THAT THE PLAYPEN IS
CORRECTLY OPENED AND READY TO USE.**

1. Untie and remove the carry bag.
Position the playpen vertically on a flat surface.




2. Completely extend the frame outwards.

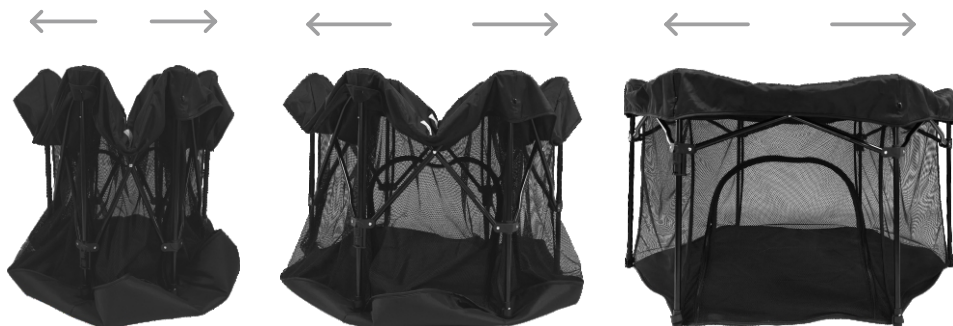

TO OPEN THE PLAYPEN - CONTINUED

3. Hold one connecting joint on the top side, then pull up the locking device until it clicks into place. Repeat the above on the opposite side.

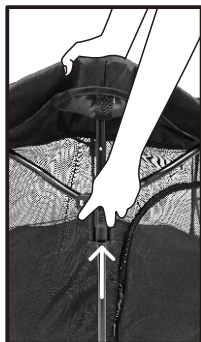


Tip: there are two opposite locking devices as shown in below illustration.




TO FOLD THE PLAYPEN

1. Pull down one locking device with your thumb and simultaneously press the button to release the lock.
Repeat the above on the opposite side.

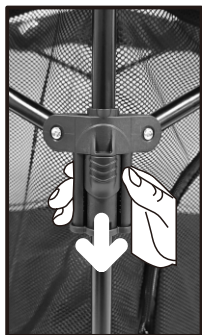


Tip: there are two opposite locking devices as shown in below illustration.

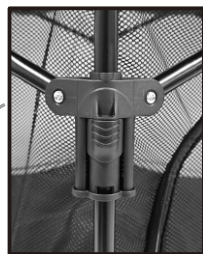

TO FOLD THE PLAYPEN - CONTINUED

2. Completely gather the folding playpen.

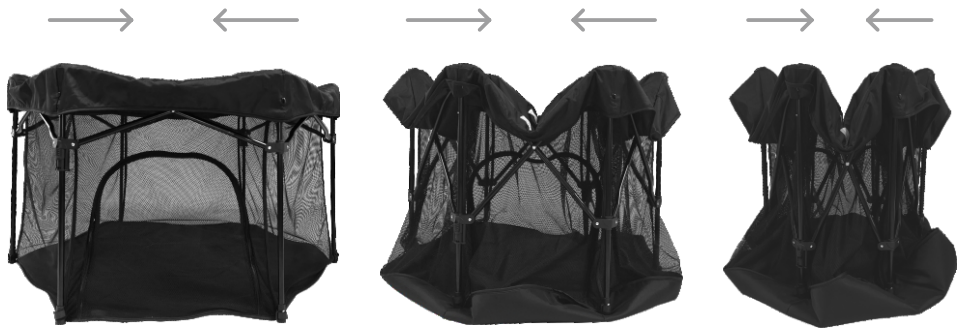

3. Put the folded playpen into the carry bag.



CARE AND MAINTENANCE

- All assembly fittings are to be tightened properly. Inspect regularly and re-tighten as necessary.
- Wipe clean with a damp cloth.
- Do not bleach.
- Do not iron.
- Do not dryclean ☒.
- Do not use abrasive pads, bleach or strong household cleaners. Damage may result.

IMAGES/ DRAWINGS IN THE MANUAL ARE FOR VISUAL PURPOSES ONLY. ACTUAL PRODUCT MAY VARY SLIGHTLY. THE MANUFACTURER RESERVES THE RIGHT TO CHANGE ANY SPECIFICATION OR FEATURE WITHOUT PRIOR NOTICE.

K:43-489-909 | T: 70-264-319

MADE IN CHINA

RETAILER INFORMATION IF SOLD BY:

KMART AU: 690 SPRINGVALE RD, MULGRAVE VIC 3170 AUSTRALIA

KMART NZ: REGIONAL OFFICE C/O KMART PAPATOETOE STORE, HUNTERS PLAZA, GREAT SOUTH ROAD, PAPATOETOE, AUCKLAND, NEW ZEALAND

TARGET AU: 2 KENDALL ST, WILLIAMS LANDING VIC 3027 AUSTRALIA

CUSTOMER SERVICE:

KMART AU: 1800 124 125

KMART NZ: 0800 945 995

TARGET AU: 1300 753 567