


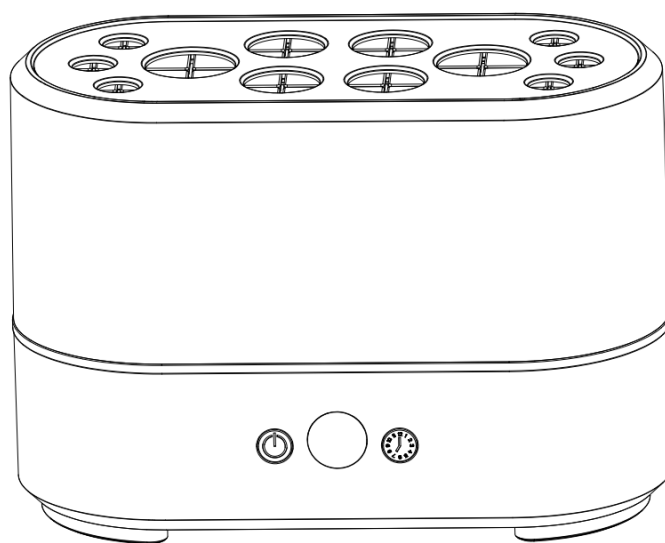

## **Beauty Brush Dryer**

**CS-701**

### **User Manual**



PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE

## IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:




### **READ ALL INSTRUCTIONS BEFORE USE.**

- Read and understand all instructions before using this product and follow all warnings and cautions in the manual.
- Use the product only for its intended purpose. Use only with components supplied with the product. Improper use or wrong operation may lead to hazards.
- For electrical safety, any repairs to the product or the USB cable should be carried out by a qualified electrical person only or the product must be disposed.
- This appliance must only be connected to an external safety low voltage power source corresponding to the marking on the appliance.
- Disconnect the product from the power source when the product is not being used.
- Use the product only in dry locations indoors, never use it outdoors.
- Use the product on a stable, level, and slip resistant surface.
- The use of accessories and components not supplied by the manufacturer may result in injuries or damages and voids the warranty.
- This product is not suitable for commercial use. It is designed for household use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the product and the USB cable out of reach of young children.
- Use the product only with the USB cable provided.
- Store your appliance in a cool, dry location.
- The appliance must only be supplied by AS/NZS 61558.1 & AS/NZS 61558.2.16 certified power supply unit with SELV output voltage corresponding to the marking on the appliance.
- Clean the product and any accessories thoroughly after each use. Refer to “Cleaning and Maintenance” section.

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

## KNOW YOUR BEAUTY BRUSH DRYER

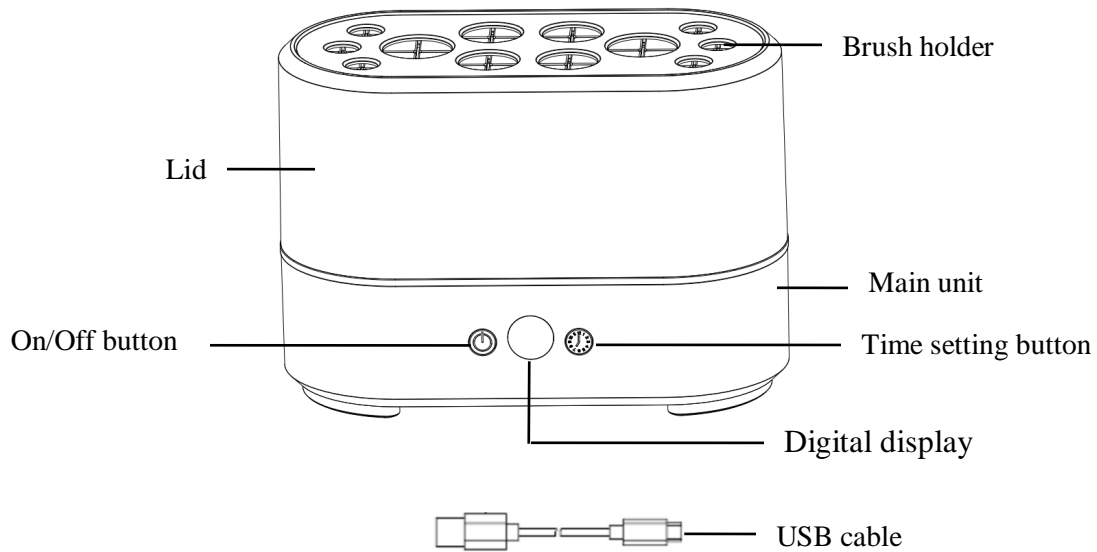

### BEFORE FIRST USE

- Remove all packaging materials and dispose it responsibly.
- Check for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact Kmart/Target Customer Service Centre.
- Clean the product and accessories thoroughly before first use. Refer to “Cleaning and Maintenance”.

## USING YOUR BEAUTY BRUSH DRYER

### Note:

**Wring the water from the brushes, beauty blenders and power puffs as much as possible before drying. It will also be more efficient if they are dried with a towel before using the appliance.**

**The materials of the brushes cannot withstand high temperatures. They need to be dried slowly at low temperatures.**

1. Take off the lid vertically.
2. Place the beauty brushes into the right size bracket. Adjust the position of the brushes to remain the bristles inside the lid and keep the brush handles as long as possible on the outside of the lid. You can also place two beauty blenders or power puffs directly in the two ends inside the main unit.
3. Put the lid on the main unit.
4. Insert the other end of the USB charging cable into the standard USB power source rated at 5Vd.c. 2A specification.
5. Connect the USB cable on to the main unit. “08” will be displayed and go out, and the appliance is now in standby mode.

6. Press the On/Off button. The default drying time setting is 4 hours. “04” will be displayed. Press the time setting button to set a longer drying time (6, 8 or 10 hours) if needed.

Note: It needs 4 hours to dry the small size brushes, beauty blenders and power puffs, and 6-10 hours to dry the larger brushes.

Different size and amounts of brushes, beauty blenders and power puffs need different drying time.

7. The appliance will automatically stop with the display going out when the set time runs out. You can also press the On/Off button to stop drying at any time.
8. Unplug the appliance when not in use and before cleaning.

## CLEANING AND MAINTENANCE

- Unplug the main unit from the USB power source and allow the appliance to cool down completely before cleaning.
- **DO NOT** immerse the main unit in water or any other liquid!
- Clean the main unit with a damp soft cloth or sponge. Dry thoroughly with cloth.
- Make sure that electrical connectors and sockets are kept dry.
- Rinse the inside of the main unit and the lid with clean water, then dry thoroughly.
- Never use any solvents or abrasive cleaning agents, hard brushes, metal or sharp objects to clean. Solvents are hazardous to health and harm the product's plastic parts; abrasive cleaning agents and cleaning accessories may scratch the product's surfaces.

## STORAGE

- Unplug the appliance and allow it to cool.
- Store in the box in a cool and dry place after cleaning and dry.
- Never store the appliance while it is still connected to the USB power source.
- Never wrap the USB cable tightly around the appliance.

## TECHNICAL SPECIFICATIONS

Input: 5Vd.c. 2A

Power: 10W

## 12 MONTH WARRANTY

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>