

OXX 说明书 105克铜版纸 3折页 24.09.27(24.12.24-7改)

105mm

140mm

OXX
COSMETICS
Facial Steamer
User Manual



Model no.: LD-6400
K:43-497-553 T:70-356-175

IMPORTANT SAFETY INSTRUCTIONS

Read this user manual carefully before first use and save it for future reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.

- The product generates heated steam. Persons insensitive to heat must be careful when using this product. If unsure DO NOT USE.

- Unsupervised use of steamer by children or incapacitated persons may be dangerous.

- This product is not intended for medical use.

- This appliance must not be used by persons insensitive to heat and other very vulnerable persons who are unable to react to overheating.

- Prolonged application can result in skin burns. Always follow instructions in this manual.

- If you have any concerns regarding your health, consult your doctor before using this appliance.

- Individuals with pacemakers should consult a physician before using this product.

IMPORTANT! In case of pregnancy, diabetes, or illness, consult your doctor before using this product.

- Cleaning and user maintenance shall not be made by children without adult supervision.

- This product has been designed for domestic use only. In case of any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer is not responsible, and the product guarantee will not apply.

- Before connecting your appliance, check if the mains voltage is the same as the voltage indicated on your appliance and that the power outlet has an earth connection. If unsure check with an electrician.

- Ensure before each use that the supply cord or any other parts are not damaged.

- Keep the steamer and its cord out of reach of children when connected to mains power or cooling down.

- DO NOT use the steamer if it has been dropped, if there are visible signs of damage, malfunction or if it is leaking water.**

- Always make sure the appliance is switched off, unplugged and cooled down before cleaning.

IMPORTANT! This steamer must not be left unattended while it is connected to mains power and before it has completely cooled down.

CAUTION: The steam nozzle on the facial steamer can become extremely hot and may cause burns if touched.

- Do not unplug the appliance by pulling on the cord or on the appliance. Always pull on the cord plug.

- Never immerse the steamer, the power cord or the cord plug in water. Never hold the steamer under a water tap.

- Do not add hot water or other corrosive cleaning agents into the water tank, doing so may damage the appliance. Use Demineralized or distilled water is strongly recommended.

- To avoid damage to the power cord, do not allow the supply cord to come in contact with the steam nozzle when the steamer is hot.

- If the supply cord is damaged, it must be replaced by qualified electrical person in order to avoid a hazard or the product must be disposed of.

- The steamer must be rested on a flat, stable surface.

- When the steamer is used in a bathroom, unplug it after use. Using the product near water presents an electric shock hazard even when the appliance is switched off.

CAUTION! Take care to avoid contact between the hot surfaces of the appliance and skin, paying particular attention to the face, neck and hands.

CAUTION! Never place your face too close to the facial steamer in one position, as this could cause scalding.

- IMPORTANT! To avoid damage to the appliance do not operate the appliance when it runs out of water.**

- Take care when emptying the facial steamer as hot water may still remain in the reservoir. Ensure the appliance has cooled down and is switched off before emptying or moving the appliance.

- Before storage, wait till the appliance cools down completely and wind the power cord.

- Only use accessories provided by the manufacturer. The use of any accessory or attachment other than those provided by the manufacturer may result in fire, electric shock or irreversible damage to the appliance.

- IMPORTANT! Unplug the appliance from mains power when filling with water and cleaning.**

- The facial steamer should be cleaned after each use, to avoid the accumulation of grease and other residues.**

- For cleaning and descaling of the appliance, refer to "Cleaning and maintenance" section below.

- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.




Class II Appliance

The facial steamer is for household use only.



SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

PARTS

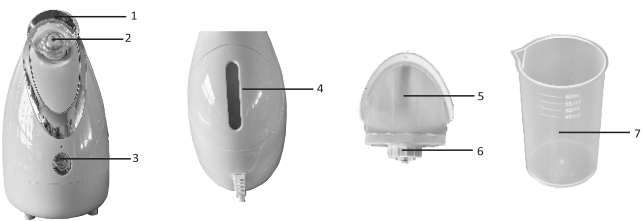

1.	Nozzle	4.	Water reservoir
2.	Steam Outlet	5.	Water tank
3.	Power switch	6.	Water tank cap
7.	Measuring Cup		

FILLING THE WATER TANK

- To prevent scale build-up always empty the water tank after use. Rinse the water tank to remove any deposits.

- Ensure that the steamer is cold and not connected to mains power.
- Remove the water tank from unit base. Open the water tank cap and fill in water.



- Close the cap and fit the water tank back on unit base.
- To avoid water spillage, ensure that the water tank is properly closed.

NOTES:
To avoid calcium deposits, we recommend you use distilled water for your facial steamer.
To avoid damage or blockage, do not use any scented water or additives.

USING THE FACIAL STEAMER

- Plug the unit in to a 220-240V AC electric power outlet.
- Press the Power Switch once to turn ON the unit. Green indicator means product is under operation.
- Wait for around 40sec, and steam will start to release.

NOTE: A little bit of hot water may be ejected when the unit starts emitting steam. This is normal.

- Direct the steam to your face by keeping a distance of at least 20cm away from the nozzle.

To ensure the steam covers your entire face, direct the steam to the top of your chin.

NOTE: Steam temperature is approx. 40°C at a distance of 20cm from the edge of the steam nozzle. If you feel the heat is too high move your face further away from the steam nozzle.



- The steam allows continuous steaming for approximately 15 minutes with a full tank of water.
- When water level is low, the way of steam emitting will change. This is normal. If there is no water in the water reservoir, no steam will emit from the steam outlet.
- Turn OFF the steamer when you find there is no water. Allow the appliance to cool down for at least 10minutes before filling it with water and restarting the unit.

Note:When there is no water,the steamer may switch between OFF and ON automatically. Turn OFF the steamer and allow to cool down for at least 10 minutes before filling water in the tank for another round of treatment.

- Press the Power Switch to turn OFF the unit.
- After completion of steam treatment, take care of your skin by moisturizing with lotion, performing cleaning, etc.

CLEANING AND MAINTENANCE



- Unplug the steamer from mains power and allow it to cool down completely before cleaning and storing.

- Before storage, continue to operate until no steam is spraying out from the nozzle and wait for the appliance to cool down completely.

Cleaning

Clean the main unit with a damp cloth. If necessary, use a mild detergent.

Drain the water of water reservoir each time after use.

Do not use alcohol, acetone, benzene, scouring cleaning agents, etc., to clean the steamer. Do not use hard brushes or metallic objects.

Remove any deposits on the steam nozzle with a damp cloth. To avoid scratching the finishing, never use a metallic pad to clean the nozzle, and never place the steamer on a rough surface.

Descaling

If de-mineralized or distilled water was not used for operation, we recommend you follow below descaling procedure monthly.

- Remove the water tank from the main body.

- Fill the water tank with 50% white vinegar and 50% water. 50ml of this solution will be enough.

TIP: Mix the solution in a separate container and then pour it into the water tank.

- Let it stand for 40 minutes. Wipe the external areas using a wet cloth.

- Drain out the vinegar solution and pour in clean water to rinse the water tank. Repeat this step several times until the vinegar odour has disappeared.

- Fit the water tank in place.

TECHNICAL DATA

Rated voltage: 220-240V~ 50Hz

Rated power: 313W

Steam temperature: Approx. 40°C (at a distance of 20cm from the edge of the nozzle)

12 Month Warranty

Thank you for your purchase

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law. For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty. This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/-Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/-Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us