

# anko

## Modern Fireplace Heater

### KAFP0766 Instruction Manual



To ensure proper operation of this device, please read this instruction manual carefully before using the device and keep it for future reference.

## GENERAL CARE AND SAFETY GUIDE

YOUR SAFETY IS IMPORTANT TO US. PLEASE ENSURE YOU TAKE NOTE OF THE INSTRUCTIONS AND WARNINGS OUTLINED IN THIS MANUAL.

**CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**WARNING:** In order to avoid overheating, do not cover this appliance. Covering this appliance presents a fire risk and may cause the appliance to overheat and malfunction.

**WARNING:** Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own unless constant supervision is provided.

**WARNING:** To reduce the risk of fire, keep textiles, curtains, or any flammable material a minimum distance of 1 metre from the air outlet.

**WARNING:** FIRE RISK EXISTS IF THE APPLIANCE IS COVERED BY OR POSITIONED CLOSE TO CURTAINS OR OTHER COMBUSTIBLE MATERIALS.

**WARNING:** Do not place the appliance on LONG PILE CARPET OR FLOKATI RUGS. Use a heat board if necessary.

**Note: When the appliance is turned on for the first time, it may release a slight odour or smoke. This odour or smoke is a normal occurrence caused by the initial heating of the heating elements and should disappear after few minutes of use.**

- Use only the voltage specified on the rating label of the appliance.
- Keep all objects at least 1 metre from the front, sides and rear of the appliance.
- This appliance is intended for household use only and not for commercial or industrial use.
- Indoor use only.
- Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
- Do not use the appliance if it has been dropped or damaged.
- The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air inlet and outlet.
- Never use the appliance to dry clothes.
- Always unplug appliance when not in use.
- When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact Kmart/Target the Customer Services Team.
- Do not use if there are visible signs of damage to the appliance.
- Do not connect the appliance to mains power until completely assembled and adjusted.
- Ensure hands are dry before handling the plug or the appliance.
- Ensure appliance is on a flat, stable, heat-resistant surface.
- Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
- Carry out regular checks of the supply cord to ensure no damage is evident.

- Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Take to a qualified electrical person for examination, electrical service or repair.
- Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
- It is recommended that this appliance is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.
- A correctly specified, undamaged extension cord may be used with this appliance provided it is used in a safe manner.
- Do not remove plug from power socket until the appliance has been switched off.
- Do not remove plug from power socket by pulling cord; always grip plug.
- Do not place cord under carpet or cover with rugs or furniture. Arrange the cord so it cannot be tripped over.
- Do not place appliance on bedding or on thick & long carpet where the openings may get blocked.
- Switch off and use handle provided when moving
- Do not place appliance close to radiant heat source.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Do not sit on the appliance.
- Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
- Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
- Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids.

- The appliance must not be immersed in any liquids.
- There are no user serviceable parts installed in the appliance.
- Do not place the appliance in wardrobes or other enclosed spaces as this may cause fire hazards.
- This appliance is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc. are stored.
- This appliance shall not be located immediately below socket-outlet.
- If your appliance does not work or is not working properly, contact the place of purchase or the Customer Services Team.

## **SAVE THESE INSTRUCTIONS**

THIS APPLIANCE IS DESIGNED FOR HOUSEHOLD USE ONLY

## FEATURES OF YOUR MODERN FIREPLACE HEATER



## YOUR MODERN FIREPLACE HEATER

Congratulations on the purchase of your new Electric Fireplace. Before using your new electric fireplace, it is important that you read and follow the instructions in this Use and Care booklet, even if you feel that you are quite familiar with this appliance. Find a place to keep this booklet handy for future reference. Attention is drawn to section dealing with 'IMPORTANT SAFEGUARDS'.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

### OPERATION

Always choose a safe location for the appliance, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the appliance before use. Please follow the below instructions.

**WARNING:** In order to avoid overheating or fire, do not cover the appliance.

**WARNING:** Keep all objects at least 1 metre from the front, sides and rear of the appliance.

**WARNING:** Do not use this appliance with a programmer, separate timer, remote-control system or any other device that switches the appliance on automatically, since a fire risk exists if the appliance is covered or positioned incorrectly.

**WARNING:** Never leave this appliance unattended when in use.

**CAUTION:** Ensure the power cord is not tight because if pulled it may partially pull the plug from the socket. A partially inserted plug will overheat the plug and socket and could result in fire.

<p><b>NOTE:</b> When the appliance is turned on for the first time, it may release a slight odour or smoke. This odour or smoke is a normal occurrence caused by the initial heating of the heating elements and should disappear after few minutes of use.</p>
---

1. Place the appliance on a flat, stable, and heat-resistant surface in an upright position. Ensure the control knob is in the “0” (Off) position. Once securely positioned, plug the power cord into the mains outlet and switch the appliance on.

2. Use the control knob to select the desired operating mode:



: Off



: Flame effect only, no heat



: Low heat mode with flame effect



: High heat mode with flame effect

3. Adjust the temperature using the thermostat dial at the back. The appliance will automatically stop heating when the room temperature exceeds the set level and resume when it drops below.

4. After use, always turn the control knob to the “0” (Off) position and unplug the appliance from the mains outlet.

## **THERMAL SAFETY CUT-OUT**

A Thermal Cut-Out is built into this appliance to minimise the risk of overheating and maximise user safety. A heat-sensing device monitors internal temperatures in the appliance. If heat levels rise beyond a preset safety threshold, the Cut-Out will switch off power to the heating elements, eliminating further danger. Turn off and unplug the heater, allowing it to cool for approximately 10 minutes before resetting. Once cooled, plug it back in and the heater will function normally again.

In the event of a Thermal Cut-Out, check for visible obstructions to the air inlet. Try moving the appliance to a new position. Sometimes placement close to walls and furniture can restrict air movement enough to cause the appliance to shut down.



**WARNING:** In order to avoid a hazard due to inadvertently resetting the thermal cut out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

## **SAFETY TIP OVER SWITCH**

The appliance comes equipped with a safety tip over switch. It will cut off the power due to accidental knocking over.

## **TECHNICAL SPECIFICATIONS**

Power Supply: AC 220-240V ~ 50Hz

Power Consumption: 1500W

**NOTE:** As a result of continual improvements, the design and specifications of the product within may differ slightly to the appliance illustrated on the packaging.

## **CARE AND CLEANING**

- Before cleaning, ensure that the appliance is switched to the “0” (Off) position and is unplugged from the socket.
- Clean the exterior surfaces of the appliance with a dry, soft cloth.
- Never use any form of detergents or solvents to clean the appliance.
- Never spray the appliance with liquids or submerge it in liquids or water.
- DO NOT attempt to clean the interior of the appliance.
- DO NOT ATTEMPT TO OPEN THE CASE OF THIS APPLIANCE at any time. There are no consumer serviceable parts inside this appliance.
- Store the appliance in its original box to protect it from dust in a dry place if it will not be used for a long period of time.

## **DISPOSAL**

Do not dispose of packaging or the product through your household waste!

The product and packaging are made from recyclable materials (plastics, metals, paper).

If the product is no longer suitable for use, dispose of it in an environmentally friendly manner in accordance with your local council.

## 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>



Cat. No. KAFP0766  
December 2024