

anko

Hair Roller Kit

MW210

User Manual



**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

IMPORTANT SAFEGUARDS

When using any electrical product, always follow these basic safety precautions:



READ ALL INSTRUCTIONS BEFORE USE.

Please read this instruction manual before using your product and keep it in a safe place for future reference. If you pass the appliance on to anyone else, please include this manual.

INTRODUCTION

Use this appliance to style human hair only. Do not use this appliance on artificial hair or animals. The appliance may have different results depending on the hair type. Therefore, we recommend doing a trial at a hidden spot before first use. The appliance is not recommended for damaged or bleached hair.

SAFETY PRECAUTIONS

- Carefully read all instructions before operation and retain for future reference.
- Do not place near the edge of a bench or table during operation.
- Ensure the surface is dry, level, clean and free of liquid and other substances.
- Do not leave the appliance unattended when in use. Always ensure the appliance is turned OFF by switching OFF and unplugging the appliance from mains power when not in use, if left unattended and before cleaning and storing.
- Always keep the appliance clean.
- Fully unwind the cord before use.
- To protect against electric shock, do not immerse the power cord, plug, rollers and the main in water or any other liquid.
- Do not allow the cord to hang over the edge of the table or bench, touch hot surfaces or become knotted.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with this appliance.
- If the supply cord is damaged DO NOT use. For electrical safety, any repairs to the product must be carried out by qualified electrical person only or the product must be disposed in order to avoid a hazard.
- This product is intended for household use only. Do not use it outdoors or use for commercial purposes.
- NEVER grasp the appliance, power cable or power plug with wet hands.
- Always remove the power cable from the socket by pulling on the plug; do not pull on the cable itself. Do not carry or lift the appliance with the power cord.
- Do not fold or crush the power cable. Ensure that the power cable does not run over sharp edges.
- Please do not attempt to dismantle the appliance. This appliance has no user-serviceable parts inside.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents an electrical safety hazard even when the appliance is switched OFF.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

- For additional protection, the installation of a residual current device (RCD/ Safety switch) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. If unsure, check with your electrician.

DANGER OF ELECTRIC SHOCK! Do not insert any foreign objects into the appliance.

- Do not use any accessories not supplied with this product.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.

RISK OF FIRE

- Do not leave the appliance unattended when in use.
- To avoid a build-up of heat, NEVER cover the appliance. Do not use the appliance under a blanket or at other poorly ventilated locations.
- Avoid the addition of heat from other sources, e.g., from direct sunlight, heating appliances, other devices, etc.
- Do not use an extension cable. In the event of danger, the plug must be quickly and easily accessible.

ELECTRICAL REQUIREMENT

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be 220V-240V AC.

IMPORTANT

- If the supply cord is damaged do not use. Any repairs to the product must be carried out by qualified electrical person only or the product must be disposed.



Danger of suffocation! Keep all packaging material away from children. Dispose of the packaging materials in an appropriate way. Contact your local authorities about collection points or waste separation.




CAUTION: Risk of Burning! The appliance gets very hot!
Take care to avoid contact between the hot surfaces of the unit and the skin, paying particular attention by keeping it away from face, neck and hands.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

PARTS

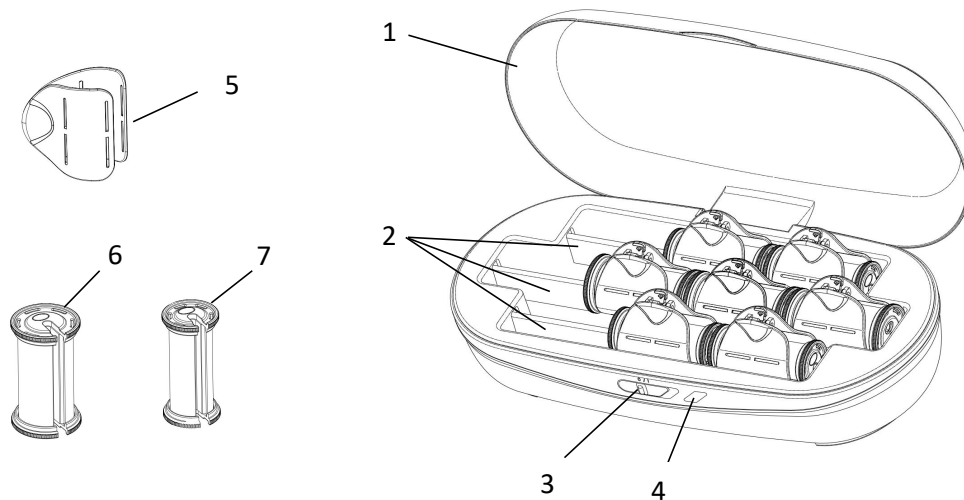

- 1. lid
- 2. Heated rails
- 3. On/Off button
- 4. Heating/Ready indicator

- 5. Clip x 10
- 6. Large roller x 4
- 7. Small roller x 6

BEFORE FIRST USE

- After unpacking the appliance, check for transport damage and that all the parts mentioned in this manual are present.
- Do not discard the original box. It can be used for storage and dispatch to avoid transport damage.
- Clean the appliance as described in Cleaning and maintenance section in this manual. For your safety make particular attention to the safety instructions in the instruction manual.

OPERATION

1. Fully unwind the mains cable. Make sure the Power switch is in OFF (0) position.
2. Place the Hair Roller Kit on a level, dry, heat-resistant surface. Close the lid and connect the appliance with mains power. Ensure all clips are removed from the hair rollers.
3. Turn on the appliance, the RED Power indicator is ON, and the rollers start heating up.
4. Rollers are ready to use when the GREEN Ready indicator lights up, this will take around 2 minutes.

CAUTION! The heated rails and the roller get extremely hot! Handle with care!

5. Open the lid, pick up the hair roller with clip(Fig.1), then remove the clip.
6. Begin placing the rollers at the top of the head and work down towards the nape(Fig.2).
7. Take a section of hair within the width of the roller. Position the ends of hair on the roller and wind toward scalp. Roll hair up firmly, then secure the roller with a clip.
8. Repeat throughout each section until you have used all the rollers(Fig.3).
9. Leave the rollers in the hair for at least 5 minutes or until cool. For soft, wavy curls, remove rollers after a shorter period of time.



Fig.1



Fig.2



Fig.3

10. To remove the roller, hold the roller in one hand then release the clip. Gently unwind hair. Let hair cool for one minute to set curls.
11. After styling, turn OFF the appliance, place the Rollers back in the unit and close the lid. Unplug and allow it to cool before cleaning and storing.

Tips:

- For the best result, comb or brush hair before styling and use only on dry hair.
- To gain the best grip of roller in hair, keep the roller at right angles to the scalp.
- For soft, wavy curls, use large roller.
- For tight, firm curls, use small roller.

IMPORTANT! Be careful to avoid contact with the heated rails when removing and replacing the heated rollers.

CAUTION: DO NOT touch the inside of the Rollers, as they become very hot when heated.

CLEANING AND MAINTENANCE

- **WARNING!** Switch OFF the appliance before cleaning and disconnect the plug from the power outlet.
- **WARNING!** Do not use any alcohol, acetone, gasoline, abrasive cleaning agents, etc. to clean the plastic components. Do not use hard brushes or metal objects for cleaning.
- Risk of burning! Do not clean the appliance while still hot.
- Wipe the hair roller kit with a slightly damp soft cloth.
- Never submerge the any part of the appliance in water or let water run over the appliance.

STORAGE

- Store the appliance in a cool, dry location, away from children and pets.
- If the appliance is not used for an extended period, store it preferably in its original packaging.
- After use do not wrap the cord around the appliance as this may cause the cord to fracture. Coil cord loosely by the side of the appliance for storage.

DISPOSAL

- Do not dispose this product with normal household waste collection. If unsure, contact the local council waste management service for proper disposal facilities available for your area.

TECHNICAL DATA

Voltage: 220-240V

Frequency: 50-60Hz

Power: 430W

12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us