



**Blender**  
**BL1095E-SA**  
**User Manual**



**PLEASE READ AND SAVE THESE  
INSTRUCTIONS FOR FUTURE REFERENCE**



# **IMPORTANT SAFEGUARDS**

When using this electrical appliance, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Before using check that the voltage indicated on the product corresponds with the voltage of your electrical outlet.
3. Do not let cord hang on hot surface or over edge of table or counter.
4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
5. If the supply cord is damaged, it must be replaced by qualified electrical person in order to avoid a hazard or the product must be disposed of.
6. Close supervision is necessary when any appliance is used by or near children.
7. Avoid contacting the moving parts.
8. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
9. The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.
10. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To disconnect, turn any control to “O” position, then remove plug from wall outlet by grasping the plug, not the cord.
11. To reduce the risk of injury, never place blade assembly on motor unit without the jar properly attached.
12. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliances by a person responsible for their safety.
13. Children should be supervised to ensure that they do not play with the appliance.
14. Do not leave the machine on unattended.
15. When removing the blender from the motor unit, wait until the blades have completely stopped.
16. Always operate blender with cover in place.
17. Always use the appliance on a secure, dry level surface.
18. Never place this appliance on or near a hot gas or an electric burner or where it could touch a heated appliance.
19. Do not use outdoors.
20. Do not use appliance for other than its intended use.

21. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
22. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
23. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
24. Please refer to the RECIPE for the operating times and speed.
25. **WARNING: Potential injury from misuse.**
26. **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.
27. For cleaning, please refer to CLEANING AND MAINTENANCE section.

## **IMPORTANT!**

 
**Do not blend hot liquids.**

**Be careful if hot liquid is poured into the blender, it can be ejected out of the appliance due to sudden steaming.**

**The appliance incorporated with a non-self resetting thermal motor protection circuit to protect the motor from overheating. If the motor shuts OFF while in use, unplug the unit from main power outlet. Remove the blending jar from motor unit and free the blade of any obstructions. Allow the unit to cool down for at least 1 hour. After then, plug the unit back into mains power for normal operation.**

# **HOUSEHOLD USE ONLY**

# KNOW YOUR BLENDER

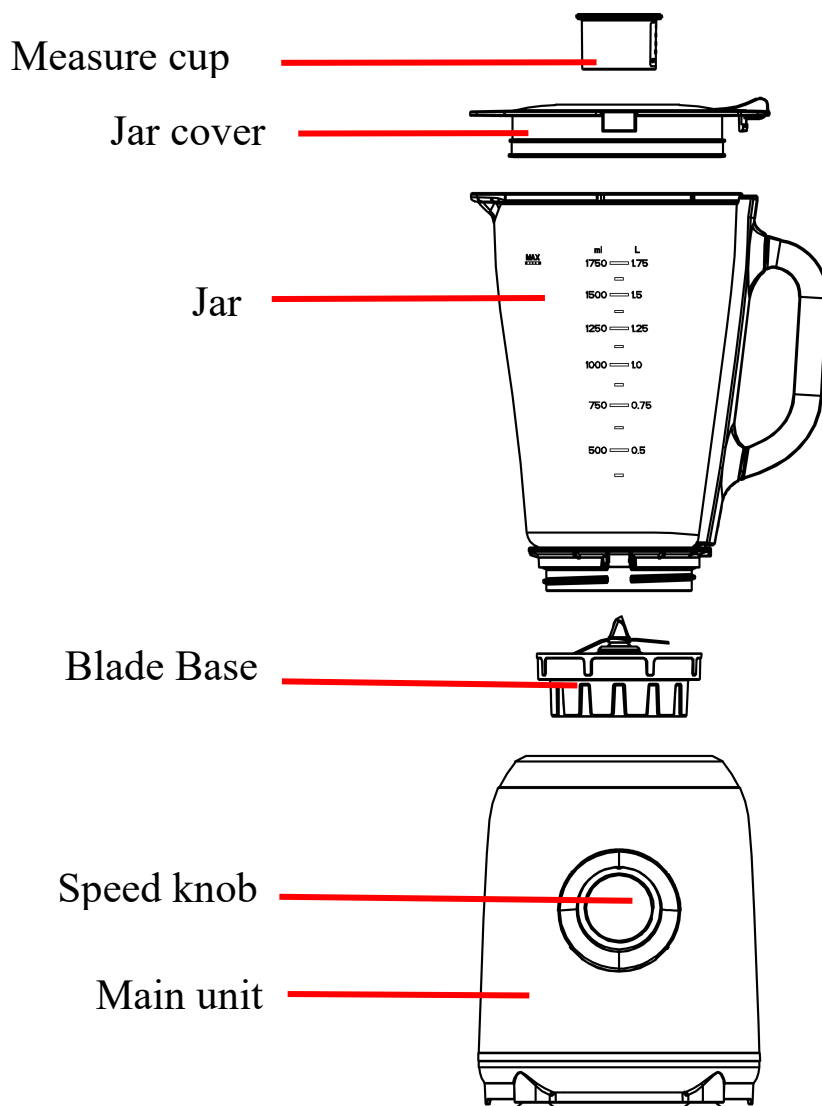

## SPEED KNOB

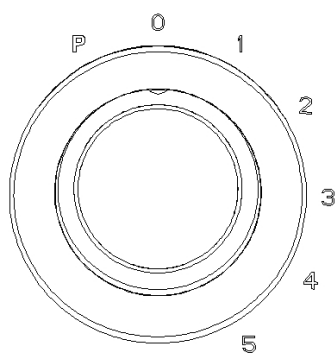 


Fig.2

## HOW TO USE

### Before initial use

1. Before first use, unpack the appliance and place all parts on a horizontal surface.
2. The jar assembly (including the measure cup, lid, seal ring 1, jar unit, seal ring 2, blade assembly) has already been assembled into the motor unit. Disassemble to wash all detachable parts except the motor unit. Refer to the latter chapter CARE AND CLEANING.

3. Once all pieces have been cleaned and dry thoroughly, reassemble.

1) Invert the jar unit onto a level surface, holding the jar handle, put the seal ring 2 and blade assembly onto the blade base bottom and secure the blade assembly by turning it anti-clockwise until tight (See Fig.3)

2) Reposition the jar assembly with its opening upwards. Wrap the seal ring 1 around the lid bottom and put the lid onto the jar assembly. Place the measure cup exactly into the lid by fitting the small projection on both sides of the cup into the slots of the lid and turning the jar cover clockwise until tight. (See Fig.4)

3) Finally, place the assembled jar onto the motor unit by aligning the strip on the assembled jar bottom. (See Fig.5)

**CAUTION: Jar and jar base is now secure. Do not try to twist the jar and jar base onto motor unit.**

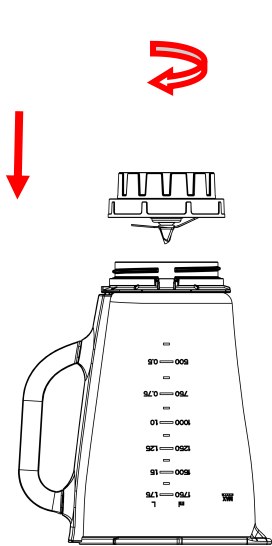 


Fig.3

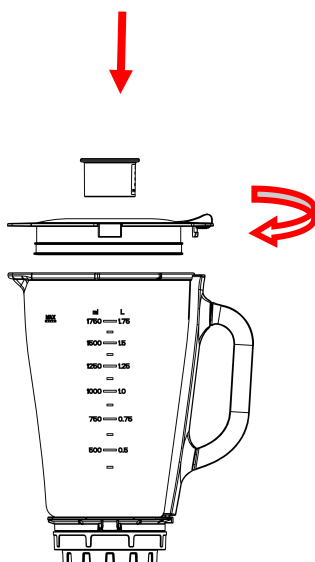 


Fig.4

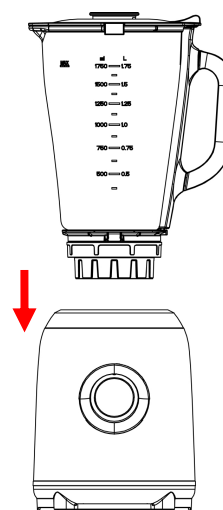 


Fig.5

## How to use

1. Peel or core the fruit or vegetables and then cut it into small dices.
2. Place the food to be blended into the jar (See Fig.6). Usually, certain amount of purified water has to be added to facilitate the smooth running of appliance. The amount of mixture should not exceed the max level as indicated on the jar.

### RECIPE

FOOD TYPE	SPEC	WEIGHT	SPEED	OPERATING TIME
Carrot, Apple, Pear etc..	Cut into 25mm*25mm*25mm	Carrot:700g Water:1050g	High speed	2 minutes
Ice crush	2cm *2cm *2cm	100g	Pulse speed	Run 1 second and stop 2 seconds, 15 times or so

**Note: never use boiling liquids or run the appliance empty.**

3. Put the lid on the jar. Be sure the measure cup is in place.
4. Plug the power cord into a standard wall outlet.
5. Turn the speed knob to the appropriate speed setting for your task.
6. For quick or delicate blending tasks, turn the speed knob to P position and hold for a few seconds and then release, the knob will reset to “O” position automatically. Operate several times until the consistence you want is obtained
7. If you want to add ingredients while the blender is working, remove the measure cup and place through the lid opening. (See Fig.7)
8. When crushing ice or hard food, keep one hand firmly on the lid.
9. When the consistency you desire is obtained, turn the knob to “O” position.
10. To blend food for a short time, pulse operation can be selected by turning the dial switch to “P” setting. Hold the dial switch at “P” setting for this function. To stop blending, release the dial switch.
11. To use the ice crush function, hold the dial switch at “P” setting. Release the dial switch to stop crushing.

**IMPORTANT!** Use ice cubes only approximately 2cm in size.

**IMPORTANT!** DO NOT fill the glass jar above the Maximum level as indicated on the jar. Some mixtures increase in volume during blending and create pressure in the jar.

**WARNING! DO NOT process boiling liquids or hot ingredients. Allow hot ingredients to cool before placing them in the glass jar.**

**Note: 1) For each use, the consecutive operation time should be less than 3 minutes. at least 10 minutes rest time must be maintained between two continuous cycles. After 5 cycles of operation, allow the blender (electric motor) to cool down to room temperature. Allow it to cool down for approx. 30 minutes before using it again.**

**2) If you want to stop the blender during operation, turn the knob to “O” position anytime.**

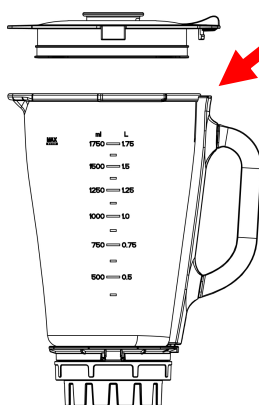 


Fig.6

Before blending, add food to be blended into the jar.

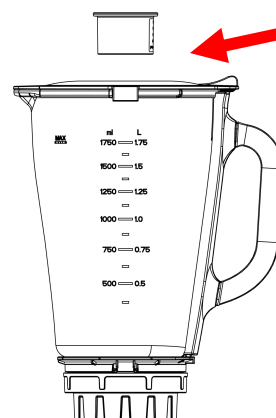 


Fig.7

During blending, add the ingredient through the lid opening.

## Important operating tips

- For best results of food that are to be blended with some liquid, pour the liquid into the jar first, then add solids.
- Some of the tasks that cannot be performed efficiently with a blender are as follows: beating egg whites, whipping cream, mashing potatoes, grinding meat, mixing dough, and extracting juice from fruit and vegetable
- The following items should never be placed in the unit as they may cause damage: bones, large pieces of solid, frozen food, or tough foods such as turnips.
- To crush ice, add up to 6 ice cubes. If more ice is needed, remove the measure cup and add cubes one by one through the lid opening.

## CLEANING AND MAINTENANCE

**This product contains no user serviceable parts. Refer service to qualified service personnel.**

1. Before cleaning, unplug the blender.
2. Always wash immediately after use for easier cleaning. Don't let food dry in the jar assembly as this will make cleaning difficult.
3. Pour a little warm soapy water into the jar and turn the knob to "P" position for a few seconds. And then empty the jar.
4. Dismantle all detachable parts. Lift the jar assembly off the motor unit. To detach the blade assembly, turn it clockwise from the jar base bottom, and remove the seal ring 2 and blade assembly (see Fig.8). In addition, detach the jar cover seal ring 1 from the jar cover

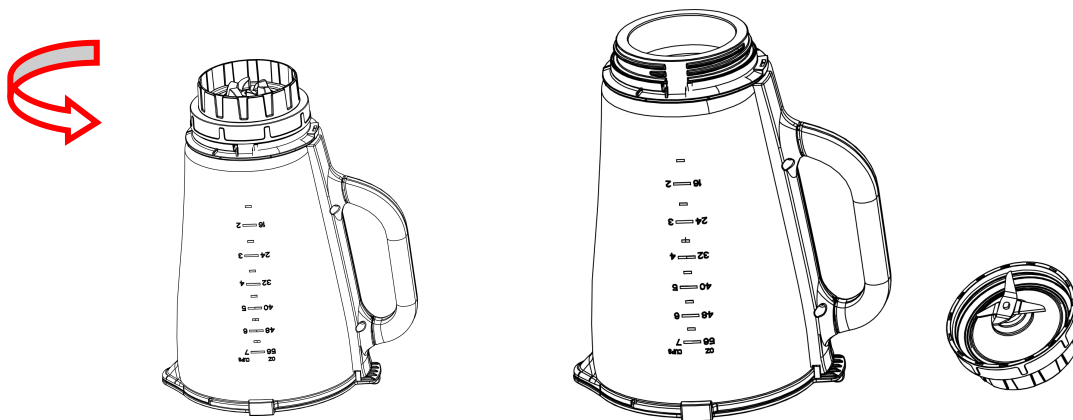 


Fig.8

5. Rinse the measure cup, lid, seal ring 1, jar unit, seal ring 2 and blade assembly by hands or in a dishwasher and then dry. They are dishwasher safe components, but the temperature setting shall not exceed 65°C.



6. Brush the blade clean using warm soapy water, then rinse thoroughly under the tap. Don't touch the sharp blades, handle carefully. **Don't immerse the blade assembly in water.** Leave to dry upside down away from children.
7. Wipe the motor unit with a damp cloth and dry thoroughly. Remove the stubborn spots by rubbing with non-abrasive cleaner. If liquids spill into the motor unit; first unplug the unit, then wipe with a damp cloth and dry thoroughly.

#### **CAUTION**

- 1) **Do not immerse the motor unit in liquid to prevent the risk of electric shock.**
- 2) **Do not use rough scouring pads or cleansers on parts or finish.**

#### **TECHNICAL SPECIFICATION**

Voltage: 220-240V~ 50-60Hz

Power: 500W

## 12 Month Warranty

Thank you for your purchase.

Your new product is warrantied to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided.

This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>



