

# Assembly Instructions










**K: 43535927 | T: 70929607 LAUNDRY HAMPER CABINET**











**CARE INSTRUCTION:** WIPE CLEAN WITH A SOFT DRY OR DAMP CLOTH. KEEP AWAY FROM WATER AND DIRECT SUNLIGHT. FOR INDOOR AND DOMESTIC USE. CHECK AND TIGHTEN ALL PARTS REGULARLY.

 
 
**WARNING:** THIS PRODUCT MUST BE ATTACHED TO THE WALL TO HELP PREVENT TIPPING OVER. DO NOT STAND OR SIT ON THE UNIT. DO NOT LEAN ON THE PRODUCT. DO NOT DRAG THE PRODUCT. USE ONLY ON A FLAT SURFACE. DO NOT USE UNTIL ALL SCREWS, BOLTS AND KNOBS ARE FIRMLY SECURED. THIS PRODUCT CONTAINS SMALL PARTS AND SHARP POINTS, KEEP AWAY FROM CHILDREN AND BABIES. ADULT ASSEMBLY REQUIRED. FAILURE TO FOLLOW THESE WARNINGS COULD RESULT IN SERIOUS INJURY.

**MAXIMUM SAFE LOAD: 5KG FOR TOP PANEL, 3KG FOR EACH CLOTH BAG.**
















## Hardware list

	a	6X35mm	18PCS
	b	15X10mm	18PCS
	c	6X30mm	10PCS
	d	4X35mm	13PCS
	e	4X14mm	2PCS
	f	3X12mm	13PCS
	g		2PCS
	h		1PC
	i		1PC



	j		1PC
	k	4X16mm	1PC
	l	4X12mm	2PCS
	m	4X12mm	1PC
	n		1PC
	o		1PC
	r	4X18mm	2PCS
	s		2PCS
	t	3X14mm	4PCS
	w	4X30mm	2PCS

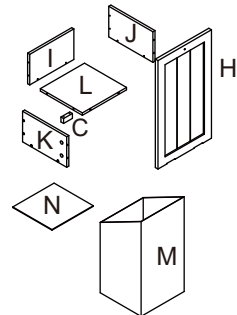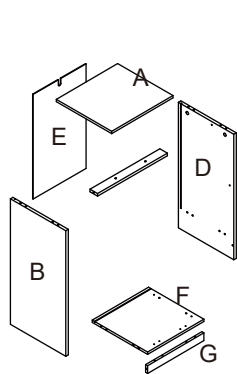

**DO NOT TIGHTEN THE SCREWS UNTIL THE PRODUCT IS FULLY ASSEMBLED.**

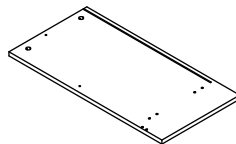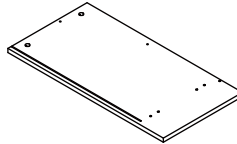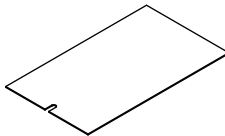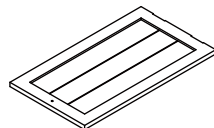               
								
A	1 PC		B	1 PC		C	1 PC	
								
D	1 PC		E	1 PC		F	1 PC	
								
G	1 PC		H	1 PC		I	2 PCS	
								
J	1 PC		K	1 PC		L	1 PC	
								
M	1 PC		N	1 PC		O	1 PC	

  STEP 1

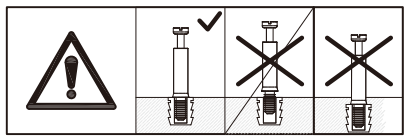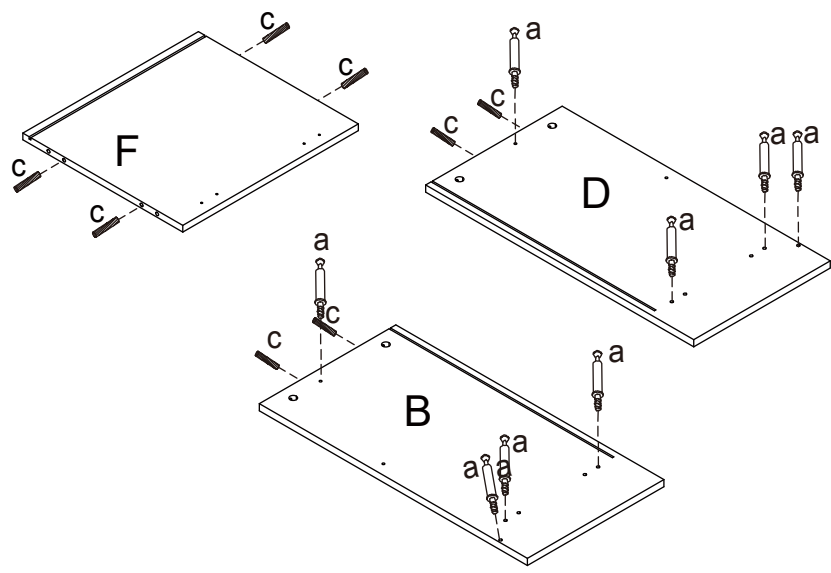



 a X 8  c X 8

 STEP 2

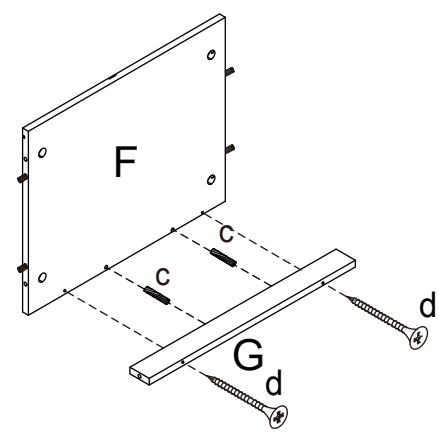



 c X 2  d X 2

  STEP 3

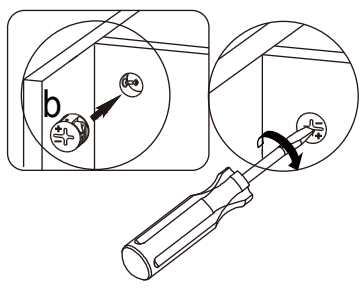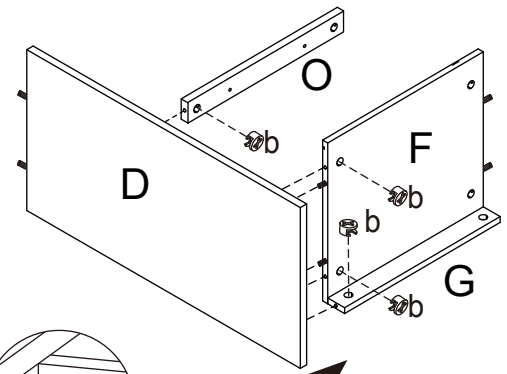


 b X 4

  STEP 4

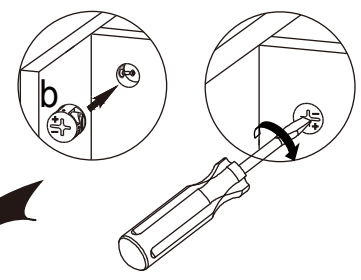
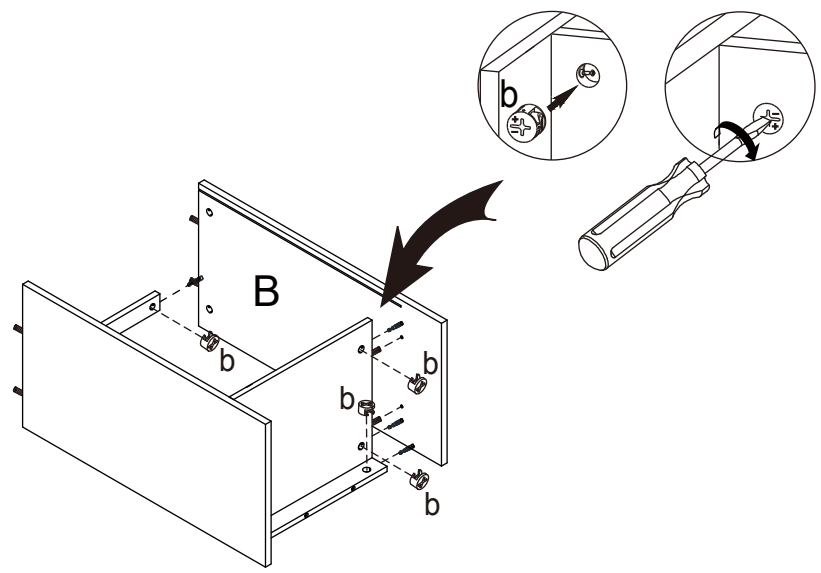


 b X 4

## STEP 5

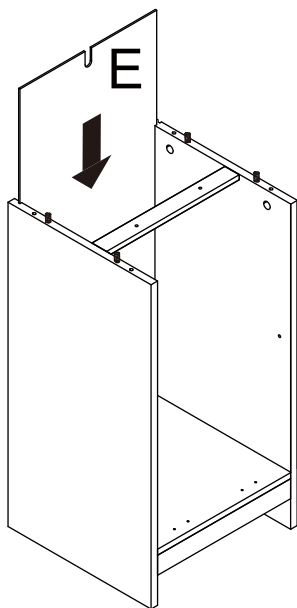 


## STEP 6

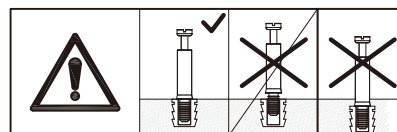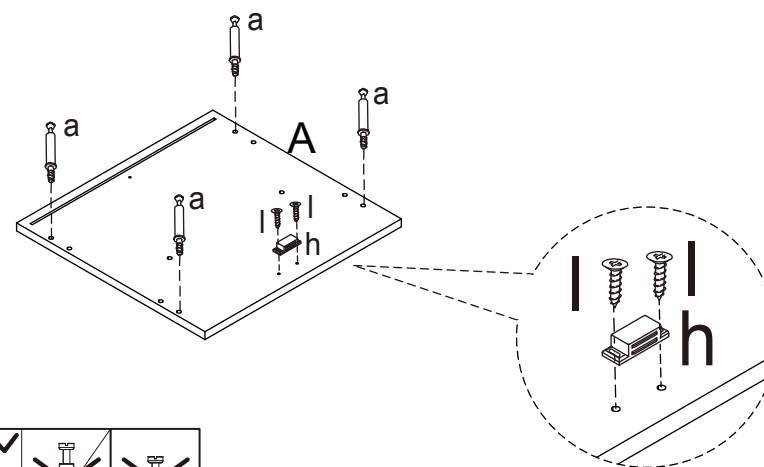  


a X 4 h X 1 l X 2

## STEP 7

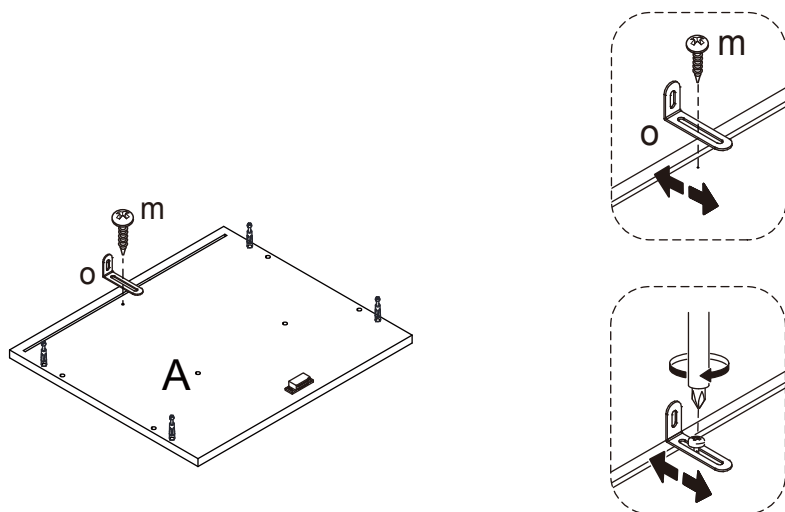 


m X 1 o X 1

## STEP 8

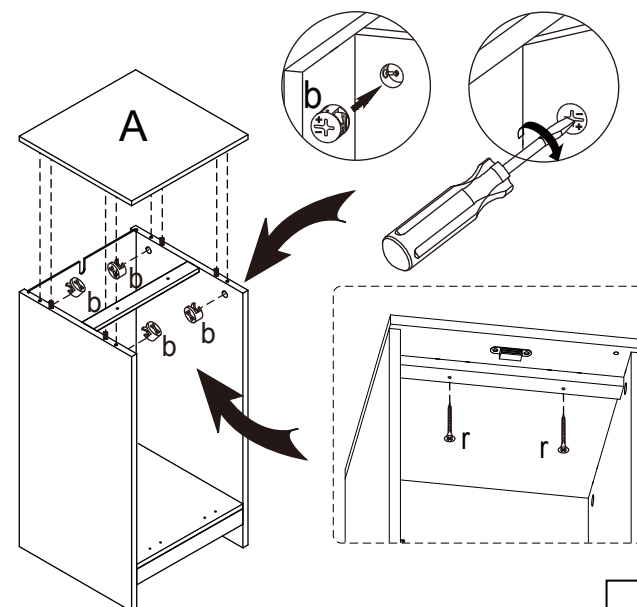 


r x 2 b x 4

 STEP 9

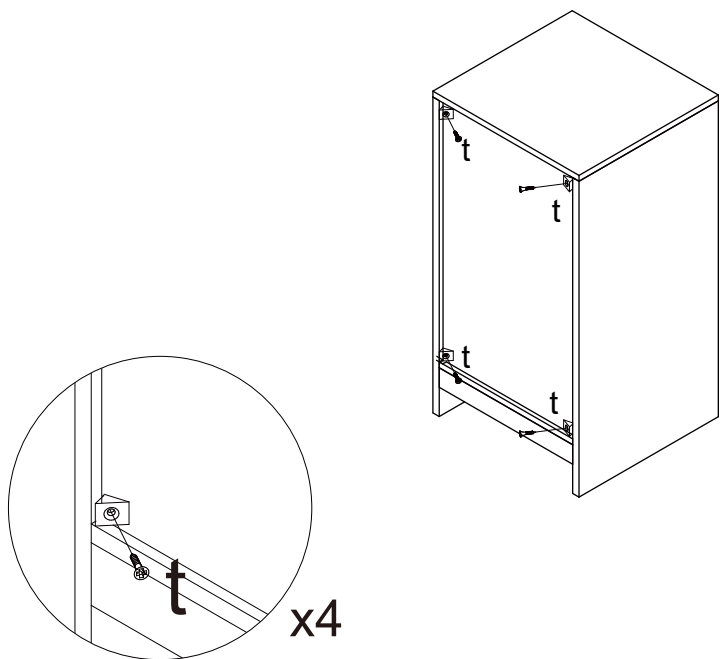


tx4

 STEP 10

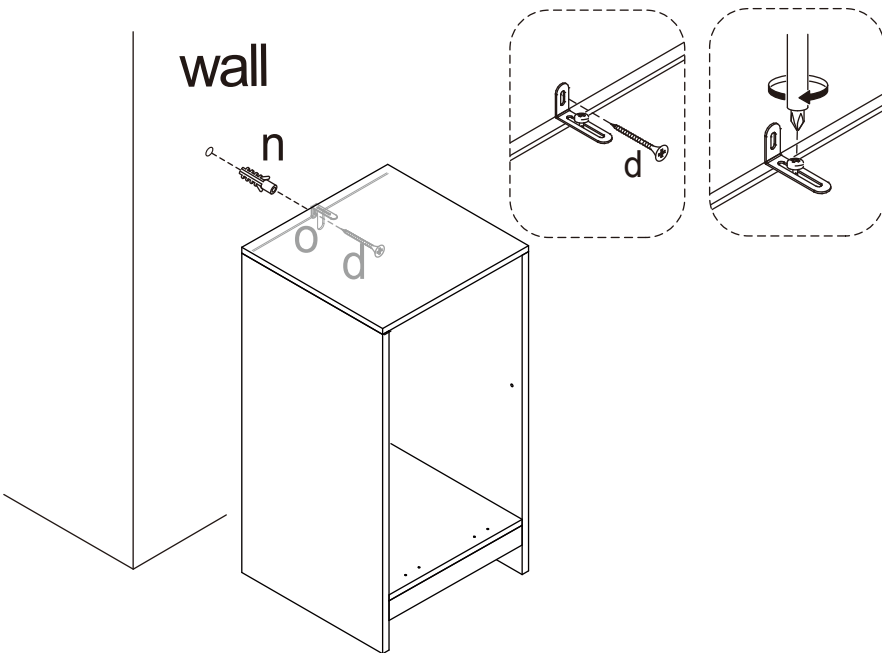


d X 1 n X 1

 STEP 11

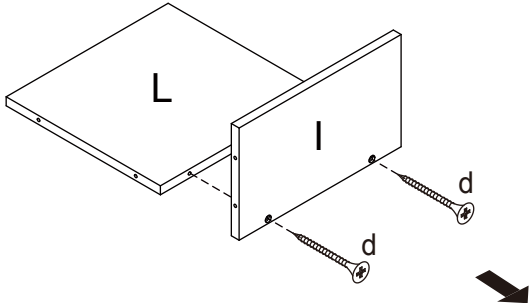


d X 2

 STEP 12

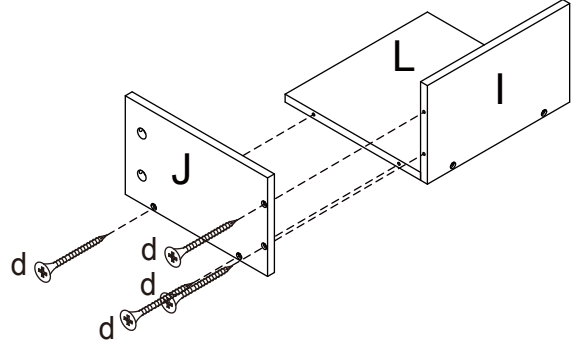



d X 4

 STEP 13

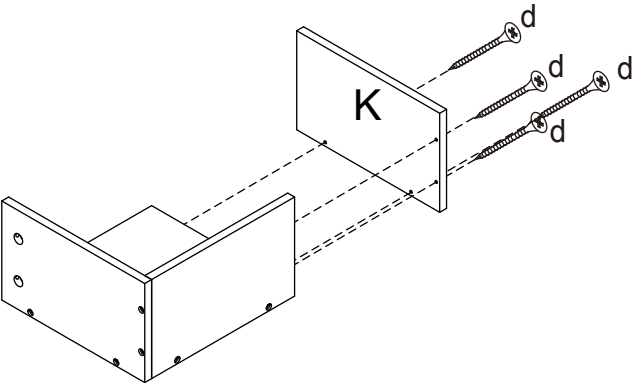


 d X 4

  STEP 14

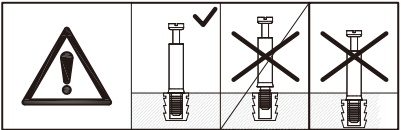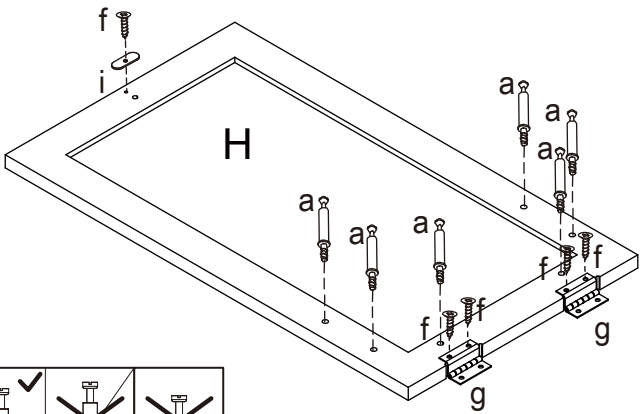


 a X 6     f X 5     g X 2     i X 1

 STEP 15

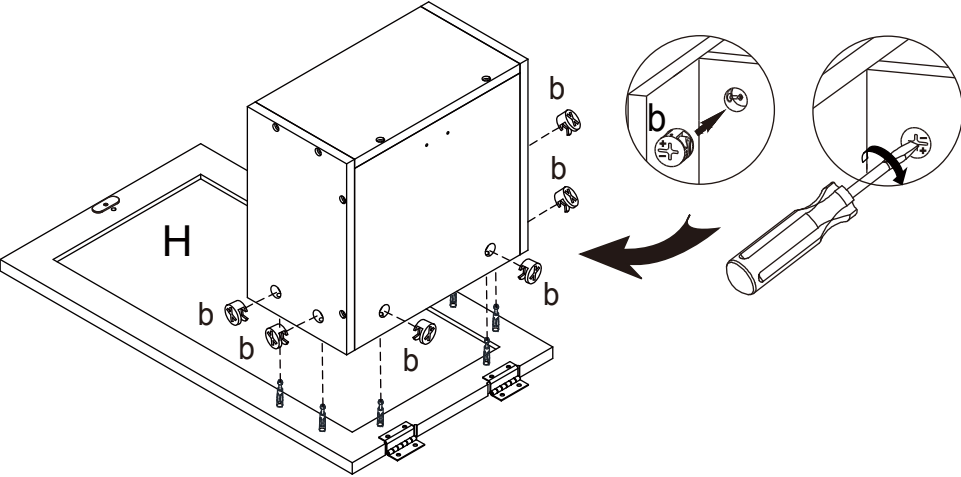


 b X 6

 STEP 16

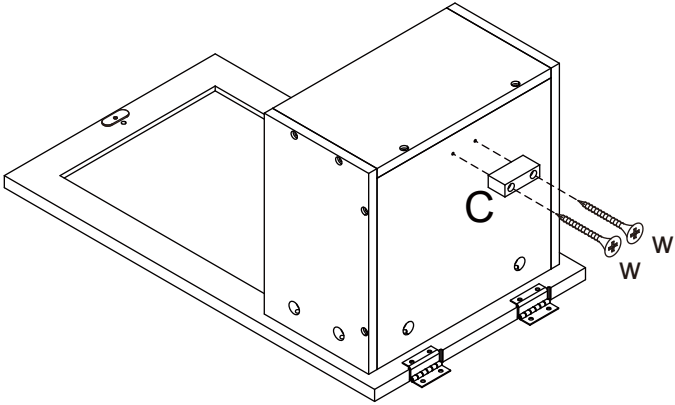


 w X 2

 STEP 17

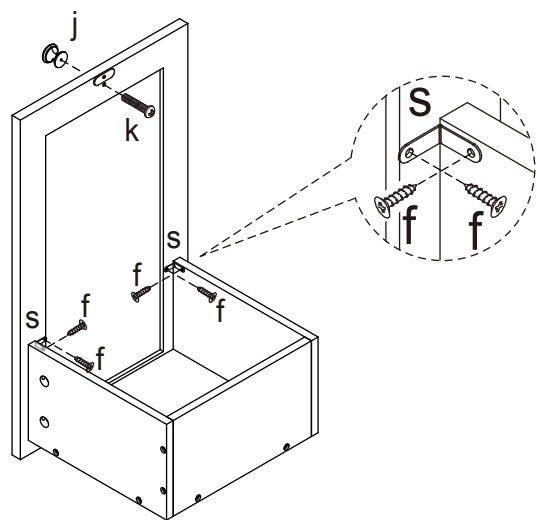


f X 4   j X 1   k X 1   s X 2

 STEP 18

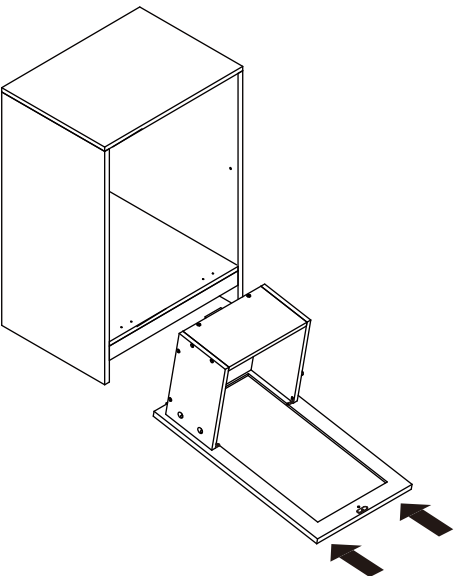


 STEP 19

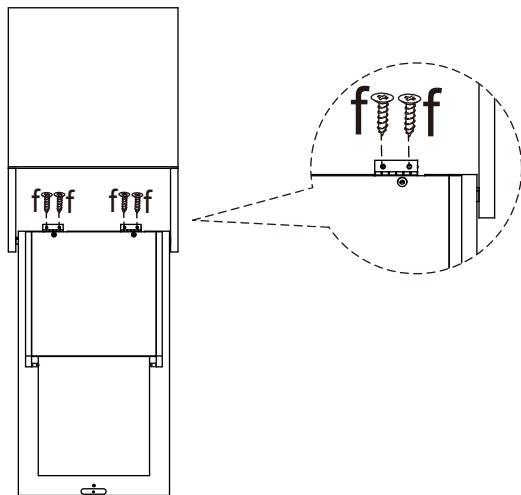


f X 4

 STEP 20

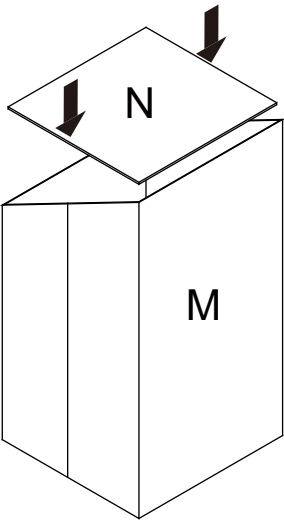


## STEP 21

 Please do not tighten the screws, need to leave 3-4mm on the outside.

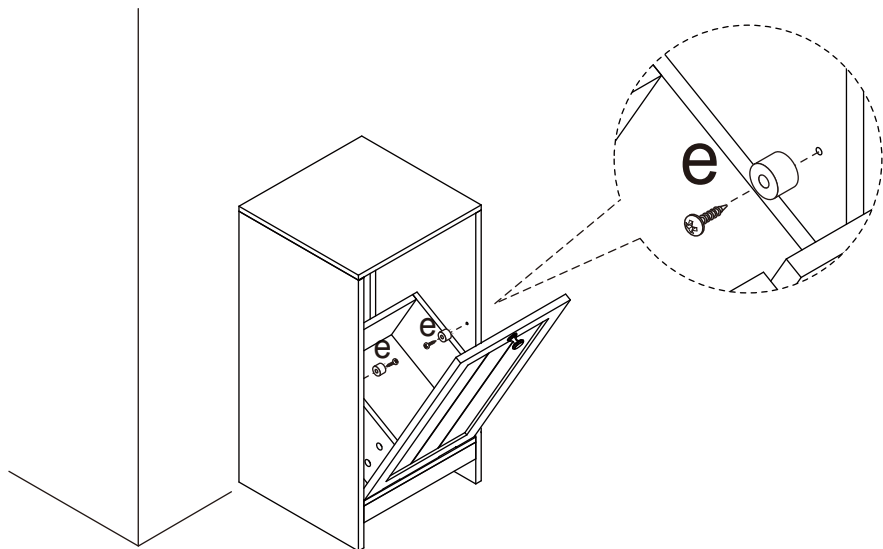


  e X 2

## STEP 22

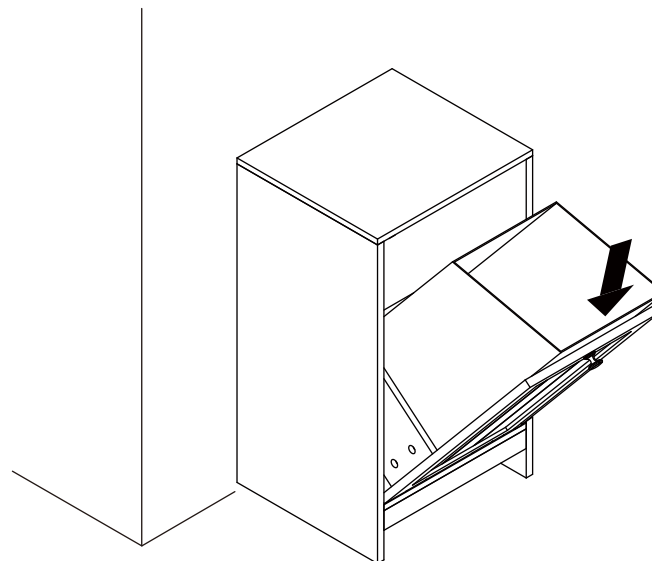 

## STEP 23

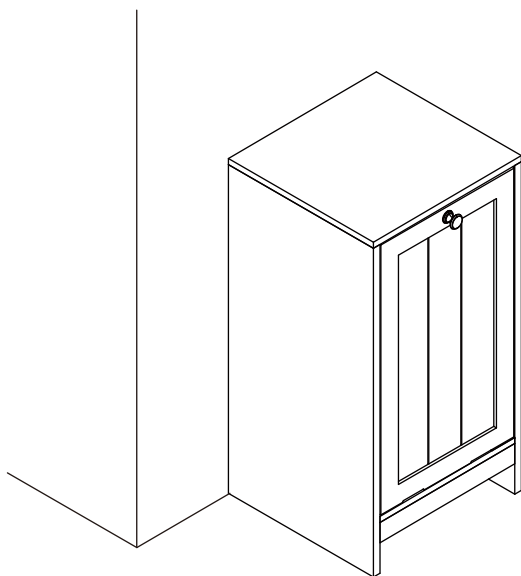 

### TOPPLING FURNITURE WARNING:

- **ALWAYS** secure it with an anchor device.
- Please seek professional advice if you are in doubt of what fixing device to use.
- Regularly check that anchors are securely maintained.
- Use safety drawer locks to prevent children climbing.
- Stability of tall items may be affected by thick pile carpet or uneven floors .
- Do not place unanchored televisions on furniture .

**CAUTION:** for your safety when attaching the anchor fixings, please note the following:

 
- Check any electrical wires or plumbing inside the wall before drilling any holes (if you are unsure please seek professional advice from a qualified tradesperson).



WARNING: PLEASE SECURE YOUR FURNITURE WITH THE SUPPLIED WALL FIXING. SCAN THE CODE FOR MORE INFORMATION.



## ! WARNING

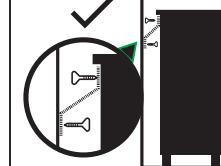

**Children have died from furniture tipover.**

- ALWAYS secure it with an anchor device.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heavy items down low.

NEVER put a TV on this furniture



**This is a permanent label. Do not remove!**