



# Double Pancake Maker

## KSKM147 User Manual



PLEASE READ AND SAVE THESE INSTRUCTIONS FOR  
FUTURE REFERENCE

## **IMPORTANT SAFEGUARDS**

When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:

### **FOR YOUR SAFETY**

**Read all instructions carefully, even if you feel you are quite familiar with the appliance.**

- To protect against the risk of electric shock, **DO NOT IMMERSE** any part of this appliance in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- This appliance is not a toy and should not be used by children. Children should be supervised to ensure that they do not play with the appliance.
- Never leave an appliance unattended when in use.
- Switch off and remove the plug from the power outlet before cleaning or when not in use. To unplug, grasp the plug and remove it from the power outlet. Never pull the power cord.
- Do not misuse the power cord. Never carry the appliance by the power cord.
- The appliance should always be operated on a dry, level, heat-resistant surface. Do not operate the appliance on sinks, draining boards, uneven or inclined surfaces.
- Warning: This appliance gets very hot during use, do not touch the hot surfaces. Severe burns may result from misuse. Avoid contact with steam that may be emitted from the food while it is cooking.
- Extreme caution must be used when moving an appliance containing hot food.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts.
- Do not allow the power cord to hang over the edge of a table or counter, or touch hot surfaces.

- Do not use outdoors. Store indoors in a dry location.
- Do not use with double adapter, power board, and extension lead.
- Do not operate any appliance with a damaged power cord or plug. Do not operate if the appliance malfunctions or if it has been dropped or damaged in any way.
- When using this appliance, provide adequate ventilation above and on all sides for air circulation. Do not operate the appliance beneath curtains, or within the vicinity of any flammable materials.
- Do not operate this appliance on or near any hot surfaces (such as a gas or electric burner).
- Never use harsh, abrasive, caustic or oven cleaners to clean this appliance. Allow the appliance to cool before cleaning or storing.
- Do not reach for an appliance that has fallen into the water. Switch off the power outlet and unplug immediately.
- Do not use this appliance for anything other than its intended use. This appliance is intended for household use only, it is not for commercial use.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- For cleaning cooking surface, please refer to “CARE AND CLEANING” section.

### **Please Note:**

To avoid the possibility of plasticizers transferring to the surface of your countertop, table, or other furniture, we recommend using coasters or place mats that are not made of plastic underneath your appliance. Neglecting this precaution could result in darkening of the finish, potential blemishes, or the appearance of stains.

## **WARNING**

If the power cord or this appliance is damaged, it must be replaced by a qualified electrician only or the product must be disposed of.

This appliance has not been designed for any uses other than those specified in this booklet.

**IMPORATNT!** Place the appliance on a heat-resistant surface only. Some kitchen bench top surfaces are sensitive to heat and may be damaged due to heat. Placing the appliance on a heat-resistant mat is recommended.



## **SAVE THESE INSTRUCTIONS**



**CAUTION: HOT SURFACES.**

The surfaces are liable to get hot during use, do not touch.

# FEATURES OF YOUR DOUBLE PANCAKE MAKER

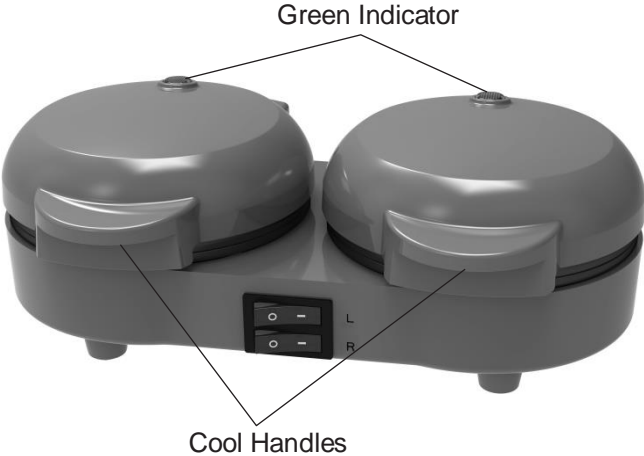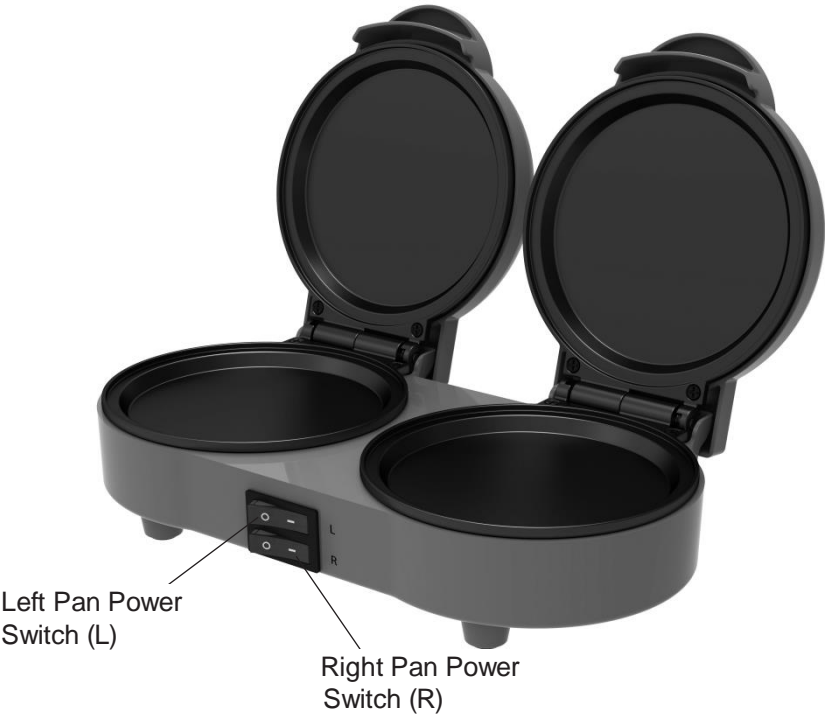

# GETTING TO KNOW YOUR DOUBLE PANCAKE MAKER

Congratulations on the purchase of your new Double Pancake Maker.

Before first using your new Double Pancake Maker, it is most important that you read and follow the instructions in this use and care booklet, even if you feel you are familiar with this type of appliance.

Your attention is drawn particularly to the section dealing with IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet handy for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

## BEFORE FIRST USE

Carefully unpack the Double Pancake Maker and remove all packaging materials. Wipe the body of the Double Pancake Maker with a soft damp cloth and wash the pans (refer to Care and Cleaning section for more information).

**NOTE: To prolong the life of the nonstick surface and to ensure optimum results, it is very important to “condition” the nonstick surface before the first use. Heat the Double Pancake Maker, pour a thin coating of vegetable oil onto the pans, then turn off and unplug. While warm, rub the oil in the plates using a thick wad of paper towels. Use extreme care to avoid touching the surface directly.**

# HOW TO USE

## WARNING:

- **Cooking surface will be hot. Wear oven mitts while using to prevent burns.**
- **DO NOT lift the pan cover so that your arm is over the cooking surface as it is hot and may cause injury. Lift from the side.**
- **Steam may release from appliance during cooking. For your safety, avoid contact with steam as it is very hot and can cause burns.**

1. Plug the power cord into a power outlet and switch the power on at the wall outlet.
2. Turn on the corresponding Pan Power Switch with the top lid closed, and the green indicator light will turn on, indicating that the pans are preheating. Once they reach the desired preheat temperature, the light will automatically turn off, signaling that the plates are ready for use.
3. During the cooking, the corresponding green indicator lights will cycle on and off as the pans maintain the temperature.

**NOTE: When using your Double Pancake Maker for the first time, a small amount of light smoke may be emitted. This is due to the initial heating of the elements and is normal. Use extreme care to avoid touching the surface.**

4. Using the handle, lift the top lid to the open position. Choose a suitable cooking oil such as vegetable oil, olive oil, or canola oil. Apply a thin, even layer of the chosen oil to the surface of the pans.

**CAUTION: Do not use cooking sprays. They can cause a build-up on the pans and may affect the non-stick performance of the product.**

5. Pour and spread the pancake batter evenly onto the pan. Carefully close the lid.

- **WARNING: The cooking pans become extremely hot during use. Avoid direct contact to prevent burns.**
- **Add only enough pancake batter so that you leave the edges of the baking surface free. Otherwise, the batter could leak out.**
- **Do not overfill with batter as hot filling may drip from the appliance.**

6. Allow the Double Pancake Maker to cook for 3-6 minutes, according to recipe directions.
7. After the required cooking time, use the handle to carefully lift the top lid of the pancake maker to see if further cooking is required. If the pancake is not ready or further browning is required, close the lid and continue cooking at 20 seconds intervals until the desired level of doneness or color is achieved.
8. After cooking, wearing oven mitts, use a plastic or wooden spatula to remove the food so as to not damage the non-stick plates. Do not scratch the cooking surface. Do not use metal utensils.
9. To make more pancakes, close the top lid and wait until the green indicator light turns off, then repeat from step 3.
10. When finished cooking, turn the power off at the power outlet and unplug the Double Pancake Maker from the mains power supply.
11. Wait until the Double Pancake Maker cools down completely before cleaning and storing.

## CARE AND CLEANING

Do not put the appliance in a dishwasher.

Before cleaning your appliance, turn the power off at the power outlet. Remove the plug from the power outlet and allow the unit to cool completely.

When cleaning, never immerse your appliance completely in water or other liquids. Do not use abrasive creams, steel wool or scouring pads. To clean the exterior, wipe with a damp cloth and polish with a soft and dry cloth.

To clean the pans, wipe over with a damp cloth. As the pans are coated with a nonstick coating, you can easily remove any excess oils or crumbs. If there is hardened food on the pans, pour a little oil and let it sit for about 5-7 minutes. You can then wipe clean with a paper towel.

**NOTE: Always ensure the nonstick pans are completely dry before storing away.**

### Hints for Care and Use of Non-stick Surface

- To avoid scratching the nonstick surface, do not stack any objects on your Double Pancake Maker.
- Use only nylon, plastic or wooden utensils with care to avoid scratching the nonstick surface. Never cut food on the plates.
- To remove persistent stains, we recommend using a non-abrasive scouring pad along with mild dishwashing liquid. **DO NOT USE STEEL WOOL**, as it may cause damage to the surface.

## SPECIFICATIONS OF PRODUCT

Voltage : 220-240V~ 50Hz

POWER : 1100W

# RECIPES

## Plain Sweet Pancakes

### Ingredients

- 3/4 cups plain flour
- 1/4 cup whole wheat flour
- 1 teaspoon baking powder
- 1/8 cup castor sugar
- 1 eggs, separated
- 3/4 cups milk
- 50g butter, melted
- A pinch of salt
- (Optional) 1/2 teaspoon vanilla extract

### Method:

1. Preheat pancake maker until the green indicator turns off.
2. Sift the flours and baking powder into a large bowl. Stir in sugar, salt and combine well.
3. In another bowl, whisk the egg yolk with the milk, melted butter, and vanilla extract until smooth.
4. Make a well in the center of the dry ingredients and pour in the wet mixture. Stir gently with a wooden spoon until just combined; do not overmix.
5. In a clean glass bowl, beat the egg white until stiff peaks form, then carefully fold it into the batter in two batches to create a lighter texture.
6. Let the batter rest for about 5 minutes while the pan heats up.
7. Pour roughly 1/4 cup of batter onto the hot pan for each pancake. Cook until bubbles form on the surface and the edges start to set, about 2-3 minutes.

8. Flip the pancake and cook for an additional 1–2 minutes until golden and cooked through.
9. Repeat with the remaining batter and serve warm with your favorite toppings such as cream, fruit, or a drizzle of maple syrup.

## 12 Month Warranty

Thank you for your purchase.

Your new product is warranted to be free from defects in materials and workmanship for the period stated above, from the date of purchase, provided that the product is used in accordance with accompanying recommendations or instructions where provided. This warranty is in addition to your rights under the Australian Consumer Law.

For New Zealand customers, this warranty is in addition to statutory rights observed under New Zealand legislation.

We will provide you with your choice of a refund, repair (where possible) or exchange (availability dependent) for this product if it becomes defective within the warranty period. The business will bear the reasonable expense of claiming the warranty.

This warranty will no longer apply where the defect is a result of alteration, accident, misuse, abuse or neglect.

Please retain your receipt as proof of purchase and contact our Customer Service Centre as listed below, for the entity you purchased this product from, for any difficulties with your product. Warranty claims and claims for expense incurred in returning this product can be addressed to the respective Customer Service Centre.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Contact for Kmart purchases	Contact for Target purchases
Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at <a href="http://kmart.com.au">kmart.com.au</a>	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at <a href="http://target.com.au/help/contact-us">target.com.au/help/contact-us</a>