 


105mm

INSTRUCTIONS FOR USE:

 
Start fabric shaver

1. ROTATE THE HANDLE COUNTER CLOCK WISE 180°, SHORT PRESS THE SWITCH BUTTON, THE FABRIC SHAVER WILL BE TURNED ON, AND THE DEFAULT GEAR 1 WILL WORK. WHEN THERE IS NO OPERATION AFTER 2 SECONDS, LED DISPLAY THE REAL-TIME POWER; SHORT PRESS THE SWITCH BUTTON AGAIN TO GEAR 2. WHEN THERE IS NO OPERATION AFTER 2 SECONDS, LED DISPLAY THE REAL-TIME POWER; SHORT PRESS THE SWITCH BUTTON THIRD TIME TO STOP WORKING.

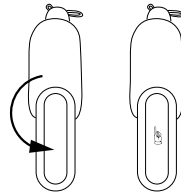

Clean up dander



1. REMOVE THE CAP OF THE LINT STORAGE COMPARTMENT, TO SEE THE BUILT-IN LINT COMPARTMENT
2. SWEEP OUT THE LINT INSIDE WITH CLEANING BRUSH (PART 8), THEN INSTALL THE CAP

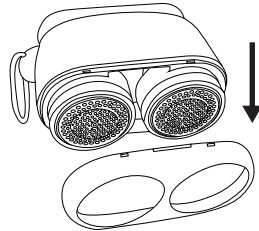

Clean up the roller

1. PULL THE COTTON THREAD OUTWARD TO REMOVE THE WASHABLE LINT REMOVER.

  2. AFTER REMOVING THE WASHABLE LINT ROLLER, PULL OUT THE ROUND FASTENER; RINSE THE LINT ROLLER WITH WATER AND THEN REASSEMBLE IT, THEN BUCKLE UP THE ROUND FASTENER.

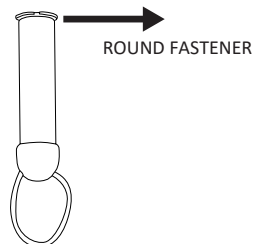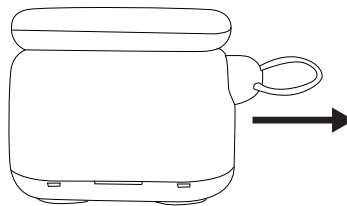

4

anko

Instruction Manual

K: 43-536-474 T: 70-932-522
Rechargeable Dual Fabric Shaver
Model no.: 300155

Dimensions

Height: 10.8cm
Width: 14cm
Length: 7cm

 
Power Details

5V 1A
Ta: 25°C

Protection Class: III

Rechargeable Battery
3.7V 1200mAh 18650 Li-battery

Parts

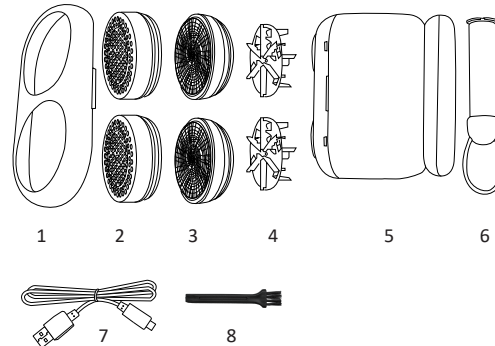

1. Cap
2. Stainless Steel Mesh Board
3. Fine mesh board
4. Blade
5. Rotation Handle
6. Washable Lint Remover
7. Type C Cable
8. Cleaning Brush

WARNINGS AND SAFETY INSTRUCTIONS:

WHEN USING ELECTRICAL APPLIANCES, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED:

- IT MUST ONLY BE SUPPLIED AT SAFETY EXTRA LOW VOLTAGE CORRESPONDING TO THE MARKING ON THE APPLIANCE.
- WARNING: KEEP THE APPLIANCE DRY
- READ ALL INSTRUCTIONS BEFORE USE.
- FOR DOMESTIC INDOOR USE ONLY.
- DO NOT USE OUTDOORS OR FOR COMMERCIAL USE.
- THIS APPLIANCE CONTAINS BATTERIES THAT ARE NON-REPLACEABLE.
- FOR CHARGING, REFER TO PREPARATIONS FOR USE SECTION.
- BEFORE USE, CHECK THOROUGHLY FOR ANY DEFECTS AND DO NOT USE IF DEFECTS ARE FOUND. TAKE CARE NOT TO DROP THE APPLIANCE AS HEAVY IMPACTS MAY CAUSE INTERNAL DAMAGE.

1

155mm



- BEFORE CONNECTING THE APPLIANCE, CHECK IF THE VOLTAGE INDICATED ON THE BOTTOM OF THE APPLIANCE IS IN ACCORDANCE WITH THE MAINS VOLTAGE IN YOUR HOME.
- CHECK THE APPLIANCE AND POWER CABLE CAREFULLY FOR DAMAGE BEFORE EACH USE.
- THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.
- CHILDREN SHALL NOT PLAY WITH THE APPLIANCE.
- SOME PARTS OF THIS PRODUCT CAN BECOME VERY HOT AND CAUSE BURNS. PARTICULAR ATTENTION HAS TO BE GIVEN WHERE CHILDREN AND VULNERABLE PEOPLE ARE PRESENT.
- THE USE OF ANY ACCESSORY ATTACHMENTS NOT RECOMMENDED MAY CAUSE INJURIES AND INVALIDATE ANY WARRANTY YOU MAY HAVE.
- DO NOT LET THE POWER CABLE HANG OVER THE EDGE OF A TABLE OR COUNTER, OR TOUCH HOT SURFACES.
- DO NOT PLACE ON OR NEAR HEAT SOURCES.
- USE ON A LEVEL, STABLE SURFACE.
- DO NOT COVER THE ITEM IN ANY WAY WHEN IN USE AS THIS MAY CAUSE OVERHEATING.
- DO NOT USE THIS APPLIANCE FOR ANY OTHER USE THAN THE INTENDED USE IT IS DESIGNED FOR.
- ENSURE THERE IS SUFFICIENT DISTANCE BETWEEN THIS APPLIANCE AND OTHER ITEMS ON THE WORK SURFACE OR WORK STATION, OR SUFFICIENT DISTANCE BETWEEN THE APPLIANCE AND THE CONFINES OF THE AREA IN WHICH IT IS SITUATED. WE RECOMMEND A MINIMUM CLEARANCE AROUND ALL FACES OF AT LEAST 10CM.
- TO PROTECT AGAINST ELECTRIC SHOCK, DO NOT IMMERSE POWER CABLE, PLUG OR APPLIANCE, INWATER OR ANY OTHER LIQUID.
- UNPLUG FROM OUTLET WHEN NOT IN USE AND BEFORE CLEANING.
- DO NOT OPERATE ANY APPLIANCE WITH A DAMAGED POWER CABLE OR PLUG OR AFTER THE APPLIANCE MALFUNCTIONS, OR HAS BEEN DAMAGED IN ANY MANNER. WE RECOMMEND THAT THE POWER CABLE IS NOT KINKED OR STORED IN A TWISTED MANNER, AND THAT YOU REGULARLY CHECK ITS CONDITION.
- ANY REPAIRS MUST BE CONDUCTED BY A QUALIFIED ELECTRICIAN OR ELECTRICAL SERVICE AGENT.

WHEN USING, PLEASE LAY THE CLOTHES OR OTHER FABRICS FLAT TO AVOID DAMAGE TO THEM DURING THE OPERATION OF THE FABRIC SHAVER



Warnings

- Use this fabric shaver only as recommended in this manual.
- Use this fabric shaver on fabric only; it is not to be used on skin, hair or any other material.
- This fabric shaver is equipped with a sharp cutting blade, do not leave it unattended.
- Tuck in any loose threads before shaving.
- Do not use this fabric shaver on delicate easily damaged fabrics. If unsure test the fabric's suitability on an unexposed area first.
- Do not use when it's charging.

Trouble Shooting

Problem	Possible Cause	Solution	Contact for Kmart purchases	Contact for Target purchases
Fabric shaver does not turn on	The battery is running low or is out of power	Charge the appliance as guided	Kmart Australia Ltd. C/- Customer Service Centre 690 Springvale Road, Mulgrave Vic 3170 Customer Service: 1800 124 125 (Australia) or 0800 945 995 (New Zealand) or via Customer Help at kmart.com.au	Target Australia Pty Ltd C/- Customer Service Centre 2 Kendall Street, Williams Landing, Vic, 3027 Customer Service: 1300 753 567 or via Customer Help at target.com.au/help/contact-us

PREPARATIONS FOR USE

- PLUG THE SMALL END OF THE USB CABLE INTO THE PORT LOCATED AT THE END OF THE HANDLE. CHARGE ONLY WITH SUPPLIED USB CABLE.
- ENSURE CHARGING ADAPTER USED IS COMPATIBLE WITH A 5V 1A.
- CHARGING TIME: 3 HOURS, LED DIGITS WILL DISPLAY THE REAL-TIME BATTERY PERCENTAGE, AND THE CHARGING INDICATOR WILL BE FLASHED GREEN WHILE THE FABRIC SHAVER IS CHARGING, AND THE CHARGING INDICATOR WILL STEADY ON GREEN WHILE THE FABRIC SHAVER IS FULL CHARGED.
- WORKING TIME: APPROX 1.5 HOURS FROM FULL CHARGING ON GEAR 1 WORKING. APPROX 1 HOUR FROM FULL CHARGING ON GEAR 2 WORKING.
- PLACE FABRIC ON A FLAT SURFACE SUCH AS AN IRONING BOARD AND PULL IT AS STRAIGHT AS POSSIBLE.
- TUCK IN ANY LOOSE THREADS BEFORE SHAVING AND TEST THE FABRIC'S SUITABILITY ON AN UNEXPOSED AREA FIRST.
- GENTLY GLIDE THE SHAVING HEAD OVER THE FABRIC IN AN UP AND DOWN MOTION.
- DO NOT PRESS DOWN HEAVILY IN ORDER TO PREVENT POSSIBLE DAMAGE TO FABRIC.
- ROTATION HANDLE FOR A COMFORTABLE USING.
- EMPTY THE FABRIC SHAVER AFTER EACH USE.

CARE AND CLEANING

- USE A DAMP CLOTH TO WIPE THE SURFACE OF YOUR FABRIC SHAVER. DO NOT ALLOW WATER OR OTHER LIQUID TO ENTER THE INNER PARTS OF THIS DEVICE.
- TO CLEAN THE SHAVING HEAD OR BLADES, SWITCH OFF AND UNPLUG YOUR FABRIC SHAVER. UNSCREW THE SHAVING HEAD AND USE THE CLEANING BRUSH PROVIDED TO REMOVE ANY BOBBLES OR LINT PIECES THEN SCREW THE SHAVING HEAD BACK ON. BLADES ARE SHARP SO PLEASE USE CAUTION.
- IF THE SCREEN COVER IS LOOSE OR OPEN WHEN THE POWER IS ON THE MOTOR WILL SHUT DOWN.

